

Siemens

Mobile Phones

Document type: Reference Manual

Document ID: A30880-A10-A001-3-D376

AT command set for S45 Siemens mobile phones and modems

Release/Version: 1.8

Date: 30. November, 2001

Issued by

Siemens AG ICmobile
Mobile Devices SW Development Data Services
Grillparzerstrasse 12a
D-81675 Munich

Copyright © Siemens AG 2001 All Rights Reserved.

SIEMENS AKTIENGESELLSCHAFT

Siemens Document No.: A30880-A10-A001-3-D376
Revision: 1.8
Revision Date: 30. November, 2001

Table of Contents

1	General information.....	5
1.3	Abbreviations and glossary	2
1.4	Notational Conventions.....	2
1.5	Other conventions.....	3
1.6	Related documentation.....	3
1.6.1	Related Siemens-internal documentation.....	3
1.6.2	Related Standardisation documentation.....	3
1.6.3	Change Requests related to the feature.....	4
2	Software interface.....	5
2.1	Overview of the supported AT command set	5
2.2	The AT command set.....	10
2.2.1	Hayes Standard commands.....	10
2.2.2	Command combinations to be avoided.....	13
2.3	AT commands and responses according to GSM 07.07 and GSM 07.05.....	13
2.3.1	General commands according to GSM 07.07	13
2.3.2	Call control commands.....	16
2.3.3	Network service related commands.....	18
2.3.4	Commands related to mobile equipment control and status.....	33
2.3.5	Extensions of Hayes Standard commands for GPRS.....	43
2.3.6	Commands for GPRS	44
2.3.7	Commands related to mobile equipment errors.....	53
2.3.8	TIA IS-101 commands (“Voice control interim standard for asynchronous DCE”)	54
2.3.9	AT Cellular commands according to GSM 07.05 for SMS	55
2.3.10	Modem commands	65
2.3.11	Fax commands	66
2.4	General commands according to ITU-T Recommendation V.25 ter.....	80
2.4.2	User-defined commands for controlling the GSM mobile phone.....	82
2.4.3	Summary of all unsolicited messages.....	97
2.5	Appendix A	99
2.5.1	Factory settings made by AT&F.....	99
2.5.2	Features of the Telephone book memory.....	100
2.5.3	Writing to the FDN Phonebook / FDN Replacement	101
2.5.4	Using special characters in certain commands (e. g., +CPBR/+CPBW).....	102
2.6	S Registers.....	103
2.7	Circuit assignments.....	103
2.8	Appendix B	104
2.8.1	Example for creating / retrieving an organizer entry	104
2.8.2	Examples and hints for using GPRS commands	106
2.8.3	The GPRS dial command ATD.....	108
3	Errors and Messages.....	108
3.1	Summary of CME ERRORS related to GSM 07.07	109
3.2	Summary of CMS ERRORS related to GSM 07.05.....	110
3.3	GPRS return values issued by AT+CEER.....	112
3.3.1	GMM-GSM return values issued by AT+CEER (GMM_LOC_GSM)	112
3.3.2	SM-GSM return values issued by AT+CEER (SM_LOC_GSM)	113
3.3.3	SM_OWN return values issued by AT+CEER (SM_LOC_OWN).....	113
3.3.4	GAPI return values issued by AT+CEER (GAPI_LOC_OWN)	114
3.3.5	LMAN return values issued by AT+CEER (LMAN_LOC_OWN).....	114
3.3.6	ENIP return values issued by AT+CEER (ENIP_LOC_OWN).....	114
3.4	List of keys implemented for AT+CKPD.....	115
3.5	Result codes.....	115
3.6	List of *# codes.....	117
4	Index.....	119

Siemens Document No.: A30880-A10-A001-3-D376
Revision: 1.8
Revision Date: 30.November, 2001

List of Tables

Table 2-1: Supported GSM 07.07 commands	6
Table 2-2: Supported GSM 07.05 commands	7
Table 2-3: Supported commands according to ITU-T Recommendation V.25 ter	7
Table 2-4: Supported commands according to ITU-T Recommendation V.25 ter	8
Table 2-5: Supported Siemens-specific commands	9
Table 2-6: Commands supported according to Hayes standard.....	13
Table 2-7: Conventions applying to the presentation of AT commands	13
Table 2-8: List of dummy FAX commands	67
Table 2-9: List of unexpected commands	98
Table 2-10: Features of the telephone book memory.....	100
Table 2-11: Using escape characters in commands	102
Table 2-12: Using escape characters in GSM commands	102
Table 2-13: S-Registers	103
Table 3-1: CME ERRORS related to GSM 07.07	109
Table 3-2: CMS ERRORS related to GSM 07.05	111
Table 3-3 GPRS return values.....	112
Table 3-4: GMM return values issued by AT+CEER.....	112
Table 3-5: GMM return values issued by AT+CEER.....	113
Table 3-6: GAPI return values issued by AT+CEER	113
Table 3-7: GAPI return values issued by AT+CEER	114
Table 3-8: LMAN return values issued by AT+CEER.....	114
Table 3-9: ENIP return values issued by AT+CEER.....	114
Table 3-10: Result codes.....	116
Table 3-11: List of *# codes.....	117

1 General information

This document constitutes the manual reference to the AT command set supported by S45 Siemens mobile phones.

1.3 Abbreviations and glossary

The following abbreviations and terms are used throughout this specification:

Abbreviation / Term	Meaning
FDN	Acronym for “ Fixed dialing numbers ”
IMEI	
PDU	Packet Data Unit
PIN	Acronym for “Personal Identification Number”
PUK	Acronym for “PIN Unblocking Key ”
SIM	
UDI	

1.4 Notational Conventions

The following notational conventions apply throughout this manual:

- Letters and digits in Courier New indicate parameter names and values
- Underlined digits indicate the default value of the parameter at hand
- Double quotes (“”) are used to indicate text strings
- Symbols (e. g. @) inside quotes are interpreted as text strings
- Strings which are not included in double quotes must be separated by comma
- Spaces inside strings are ignored unless they are included in double quotes

Further conventions applying to the presentation of AT commands are outlined in section 2.2.

1.5 Other conventions

The following other conventions apply throughout this manual:

- Leading zeroes in strings can be omitted
- If an optional parameter (`[<value>]`) is omitted in V.25ter commands, the value 0 is assumed
- Although the names of commands are not case-sensitive, cases should not be mixed. Either “AT” or “at” should be specified, but neither “aT” nor “At”.

1.6 Related documentation

All documents listed in this section are related to the current document.

1.6.1 Related Siemens-internal documentation

No Siemens-internal documents are related to the current document.

1.6.2 Related Standardisation documentation

The following standardisation documents are related to the current document

- [1] Digital cellular telecommunications system (Phase 2+); AT command set for GSM Mobile Equipment (ME) (GSM 07.07 version 6.4.0 Release 1997)
Reference No.: [RTS/SMG-040707Q6R3](#)
- [2] Digital cellular telecommunications system (Phase 2+); Use of Data Terminal Equipment - Data Circuit terminating Equipment (DTE - DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS) (GSM 07.05 version 6.0.0 Release 1997)
Reference No.: [DTS/SMG-040705Q6](#)
- [3] ITU-T Draft new Recommendation V.25ter "Serial asynchronous automatic dialling and control"
- [4] "Digital cellular telecommunication system (Phase 2+); Personalisation of GSM Mobile Equipment (ME) Mobile functionality specification" (GSM 02.22)
- [5] "Digital cellular telecommunication system (Phase 2+); Specification of the Subscriber Identification Module – Mobile Equipment (SIM-ME) interface" (GSM 11.11)
- [6] "Facsimile Digital Interfaces – Asynchronous Facsimile DCE Control Standard, Service Class 1 (TIA/EIA-578-A), May 1995
- [7] Standards Proposal No. 2388, Proposed New Standard "Asynchronous Facsimile DCE Control Standard" (if approved, to be published as EIA/TIA-592), October 1990

GSM04.11

GSM03.40

1.6.3 Change Requests related to the feature

The following new change requests are taken into account in this document: none

2 Software interface

2.1 Overview of the supported AT command set

This section provides overviews of the supported sets of AT commands, separate for each type of command set.

Table 2-1 lists all the supported GSM 07.07 AT commands in alphabetical order, and indicates the type of command as defined in the ETSI GSM 07.07 standard:

07.07 command	Function	Type of command	Page
AT+CACM	Accumulated call meter	Mobile equipment control	33
AT+CALM	Alert sound mode	Mobile equipment control	33
AT+CAMM	Accumulated call meter maximum	Mobile equipment control	34
AT+CAOC	Advice of charge	Network service	18
AT+CBC	Battery charge	Mobile equipment control	34
AT+CBST	Select bearer service type	Modem command	65
AT+CCFC	Call forwarding	Network service	19
AT+CCLK	Clock	Mobile equipment control	34
AT+CCWA	Call waiting	Network service	20
AT+CEER	Query the reason for disconnection of last call	Call control	16
AT+CGACT	PDP context activate or deactivate	GPRS	44
AT+CGANS	Manual response to a network request for PDP context activation	GPRS	44
AT+CGATT	GPRS attach or detach	GPRS	45
AT+CGAUTO	Auto response to a network request for PDP context activation	GPRS	45
AT+CGCLASS	GPRS mobile station class	GPRS	46
AT+CGDATA	Enter data state	GPRS	46
AT+CGDCONT	Define PDP Context	GPRS	47
AT+CGEREP	GPRS event reporting	GPRS	48
AT+CGMI	Issue manufacturer ID code	General	14
AT+CGMM	Issue model ID code	General	14
AT+CGMR	Output the GSM telephone version	General	14
AT+CGPADDR	Show PDP address	GPRS	51
AT+CGQMIN	Quality of Service Profile (Minimum acceptable)	GPRS	49
AT+CGQREQ	Quality of Service Profile (Requested)	GPRS	50
AT+CGREG	GPRS network registration status	GPRS	52
AT+CGSMS	Select service for MO SMS messages	GPRS	53
AT+CGSN	Output the serial number (IMEI)	General	14
AT+CHLD	Call hold and multiparty	Network service	21
AT+CHUP	Terminate call	Call control	16
AT+CIMI	Output of IMSI	General	15
AT+CKPD	Keypad control	General	15
AT+CLCC	List Current Calls	Network service	22
AT+CLCK	Switch locking on and off	Network service	23
AT+CLIP	Display telephone number of calling party	Network service	24
AT+CLIR	Select Incognito Mode (Call Line Identification	Call control	25

	Restriction)		
AT+CLVL	Loudspeaker volume level	Mobile equipment control	34
AT+CMEE	Expanded error messages according to GSM 07.07	Mobile equipment error	53
AT+CMUT	Mute control	Mobile equipment control	35
AT+COLP	Connected Line Identification Presentation	Call control	27
AT+COPN	Read operator names	Network service	27
AT+COPS	Commands concerning selection of network operator	Network service	28
AT+CPAS	Query the telephone status	Mobile equipment control	35
AT+CPBR	Read a telephone-book entry	Mobile equipment control	36
AT+CPBS	Select a telephone book	Mobile equipment control	37
AT+CPBW	Write a telephone-book entry	Mobile equipment control	38
AT+CPIN	Enter PIN and query lock	Mobile equipment control	39
AT+CPOL	Preferred operator list	Network service	29
AT+CPUC	Price per unit and currency table	Mobile equipment control	40
AT+CPWD	Change password to a lock	Network service	30
AT+CR	Service reporting control	General	16
AT+CRC	Cellular result codes	General	17
AT+CREG	Network registration	Network service	31
AT+CRLP	Select radio link protocol parameter for originating non-transparent data call	Modem command	66
AT+CRSL	Ringer sound level	Mobile equipment control	40
AT+CRSM	Restricted SIM access	Mobile equipment control	41
AT+CSCS	Select TE character set	General	15
AT+CSQ	Output signal quality	Mobile equipment control	42
AT+CSSN	Supplementary service notifications	Network service	32
AT+CVIB	Vibrator mode	Mobile equipment control	42
AT+GSN	Output the serial number (IMEI)	General	16
AT+VTS	Send a DTMF tone	TIA IS101	54
AT+VTD	Set duration of a DTMF tone	TIA IS101	54
AT+WS46	Select wireless network	General	16

Table 2-1: Supported GSM 07.07 commands

Table 2-2 lists all the supported GSM 07.05 AT commands in alphabetical order, and indicates the type of command as defined in the ETSI GSM 07.05 standard:

07.05 commands	Function	Type of command	Page
AT+CMGC	Send an SMS command	Message sending and writing	55
AT+CMGD	Delete an SMS in the SMS memory	Message sending and writing	55
AT+CMGF	SMS format	General configuration	55
AT+CMGL	List SMS	Message receiving and reading	56
AT+CMGR	Read in an SMS	Message receiving and reading	56
AT+CMGS	Send an SMS	Message sending and writing	57
AT+CMGW	Write an SMS to the SMS memory	Message sending and writing	57
AT+CMSS	Send an SMS from the SMS memory	Message sending and writing	58
AT+CNMA	Acknowledgment of a short message directly output	Message receiving and reading	58
AT+CNMI	Display new incoming SMS	Message receiving and reading	60
AT+CPMS	Preferred SMS message storage	General configuration	62
AT+CSCA	Address of the SMS service center	Message configuration	63
AT+CSCB	Select cell broadcast messages	Message configuration	63
AT+CSMS	Selection of message service	General configuration	64

Table 2-2: Supported GSM 07.05 commands

Table 2-3 lists all the supported Siemens-specific AT commands in alphabetical order:

Command	Function	Page
AT+GCAP	Request Capabilities List	80
AT+IPR	Fixed DTE rate	81

Table 2-3: Supported commands according to ITU-T Recommendation V.25 ter

Table 2-3 lists all the supported AT commands for FAX services in alphabetical order:

Command	Function	Page
AT+ FBADLIN	Define or read number of bad lines	67
AT+ FBADMUL	Define, read or test number of bad lines	68
AT+ FBOR	Query the bit order for receive mode	68
AT+FCIG	Query or set the Local polling id	69
AT+FCLASS	Select, read or test FAX service class	70
AT+FCQ	Control Copy Quality	69
AT+ FCR	Capability to receive	70
AT+FDCC	Select service for MO SMS messages	71
AT+FDFFC	Data Compression Format Conversion	72
AT+FDIS	Query or set session parameters	73
AT+FDR	Begin or continue phase C data reception	74
AT+FDT	Data Transmission	75
AT+FET	End a page or document	75
AT+FK	Kill operation, orderly FAX abort	76
AT+FLID	Query or set session parameters	76
AT+FMDL	Identify Product Model	76
AT+FMFR	Request Manufacturer Identification	77
AT+FOPT	Set bit order independently	77
AT+FPHCTO	DTE Phase C Response Timeout	77
AT+FREV	Identify Product Revision	78
AT+FRH	Receive Data Using HDLC Framing	78
AT+FRM	Receive Data	78
AT+FRS	Receive Silence	79
AT+FTH	Transmit Data Using HDLC Framing	79
AT+FTM	Transmit Data	79
AT+FTS	Stop Transmission and Wait	80
AT+FVRFC	Vertical resolution format conversion	Fehler! Textma rke nicht definie rt.

Table 2-4: Supported commands according to ITU-T Recommendation V.25 ter

Table 2-5 lists all the supported Siemens-specific AT commands in alphabetical order:

Command	Function	Page
AT^SACM	Output ACM (accumulated call meter) and ACMmax	82
AT^SBNR	Binary Read	83
AT^SBNW	Binary Write	84
AT^SCID	Output card ID	85
AT^SCKS	Output SIM card status	85
AT^SCNI	Output call number information	85
AT^SDBR	Database Read	86
AT^SDLD	Delete the "last number redial" memory	86
AT^SGAUTH	Select Type of Authentication for PPP connection	87
AT^SICO	Icon control	87
AT^SLCK	Switch locks (including user-defined locks) on and off	88
AT^SLNG	Language settings	89
AT^SMGO	SMS overflow indicator	90
AT^SMGL	List SMS (without status change from <i>unread</i> to <i>read</i>)	89
AT^SMGR	Read SMS (without status change from <i>unread</i> to <i>read</i>)	90
AT^SMSO	Switch device off	91
AT^SNFS	Select NF hardware	91
AT^SNFV	Set the volume	91
AT^SPBC	Seek the first entry in the sorted telephone book which begins with the selected (or next available) letter	92
AT^SPBG	Read entry from the sorted telephone book via the sorted index	92
AT^SPBS	Select a telephone book (including Siemens-specific books)	93
AT^SPIC	Output PIN counter	93
AT^SPLM	Read the PLMN	94
AT^SPLR	Read an entry from the preferred-operator	94
AT^SPLW	Write an entry to the preferred-operator	94
AT^SPST	Play Signal Tone	95
AT^SPWD	Change password to a lock (including user-defined locks)	95
AT^SRTC	Set the ringing tone	96
AT^SSTK	SIM Toolkit	96

Table 2-5: Supported Siemens-specific commands

2.2 The AT command set

GSM mobile telephones and modems can be operated via Remote Control using a serial interface (data cable or infrared connection). Remote control is implemented by means of AT+C commands according to the ETSI GSM 07.07 [1] and GSM 07.05 [2] specifications, as well as several manufacturer-specific AT commands. These commands are described in more detail in section 2.2.2.

A command entered at the user port generally begins with an 'AT' command prefix. The remainder of the line is interpreted as a sequence of the commands described below. The commands are not case-sensitive. More than one command may be given on a single line, with the semicolon serving as the delimiter between commands.

The "ITU-T Draft new Recommendation V.25ter" specification [3] applies to the sequence of the interface commands. According to this guideline, commands should begin with the character string "AT" and end with "<CR>" (= 0x0D). The input of a command is acknowledged by the display of "OK" or "ERROR".

A command currently in process is interrupted by each additional character entered. This means that you should not enter the next command until you have received the acknowledgment; otherwise the current command is interrupted.

The commands supported are listed in the tables provided in sections 2.2.1, and 2.3.1 through 2.3.9.15.

2.2.1 Hayes Standard commands

The Hayes standard commands correspond to the commands of AT Hayes compatible modems.

All commands in Table 2-6 expect a numeric argument; if this argument is omitted, the default of 0 is assumed. The ATD command is a special command in that all characters specified in the same line (or up to a semicolon) are considered part of the number to dial.

Command	Function																
A/	Repeat preceding command																
AT...	Prefix for all other commands																
ATA	Accept call (V.25ter, according to [3])																
ATB[n]	This modem command is used to set the bearer service for data connections (cf. AT+CBST). <n> can take one of the following values: <table> <tr> <td>7</td> <td>2400bps, asynchronous, V.22bis</td> </tr> <tr> <td>11</td> <td>4800bps, asynchronous, V.32</td> </tr> <tr> <td>13</td> <td>9600bps, asynchronous, 32</td> </tr> <tr> <td>15</td> <td>14400bps, asynchronous, V.34</td> </tr> <tr> <td>25</td> <td>2400bps, asynchronous, V.110 ISDN</td> </tr> <tr> <td>27</td> <td>4800bps, asynchronous, V.110 ISDN</td> </tr> <tr> <td>29</td> <td>9600bps, asynchronous, V.110 ISDN</td> </tr> <tr> <td>31</td> <td>14400bps, asynchronous, V.110 ISDN</td> </tr> </table>	7	2400bps, asynchronous, V.22bis	11	4800bps, asynchronous, V.32	13	9600bps, asynchronous, 32	15	14400bps, asynchronous, V.34	25	2400bps, asynchronous, V.110 ISDN	27	4800bps, asynchronous, V.110 ISDN	29	9600bps, asynchronous, V.110 ISDN	31	14400bps, asynchronous, V.110 ISDN
7	2400bps, asynchronous, V.22bis																
11	4800bps, asynchronous, V.32																
13	9600bps, asynchronous, 32																
15	14400bps, asynchronous, V.34																
25	2400bps, asynchronous, V.110 ISDN																
27	4800bps, asynchronous, V.110 ISDN																
29	9600bps, asynchronous, V.110 ISDN																
31	14400bps, asynchronous, V.110 ISDN																

ATD<str>;	Dial the dialing string <str> with the voice utility Valid dial modifiers: I restrict AT+CLIR i suppress AT+CLIR) for next call T tone dialing P pulse dialing is ignored The finishing character ";" indicates to the phone that the call is to be set up with the voice utility. Otherwise, an attempt is made to set up a data call, which the phone immediately acknowledges with "ERROR". The dial command returns OK to the user immediately after starting a voice call. Other behavior like *# sequences in the dial command, and also data calls remain unchanged. See also section 2.8.3
ATD><n>;	Dial the telephone number from the current telephone book location number <n> The telephone book is selected using the AT+CPBS (or AT^SPBS) command.
ATD><mem><n>;	Dial the telephone number from the telephone book <mem> location number <n>
ATDx[:]	Dial phone number x I ISDN The phone call will be made as a UDI call. An ISDN connection to a V.110 terminal adapter will be established. The data transmission speed is the same as for an "analog" call (2400 / 4800 / 9600 / 14400 bps). PP Plus: same as + character
ATDL	Dial last telephone number
ATE0	Deactivate command echo
ATE1	Activate command echo
ATH[0]	Release existing connection
ATI[n]	Modem command according to [3]: Display product code: 0 042 1 042 2 OK, (check firmware checksum) 8 Display supported operation modes (see ATB) 9 identification of modem and mobile phone
ATL[n]	Monitor speaker loudness (modem command according to [3])
ATM[n]	Monitor speaker mode (modem command according to [3])
ATO[n]	Switch back to transparent mode after +++ interruption (modem command according to [3])
ATQ0	Display acknowledgments (responses or messages)
ATQ1	Suppress acknowledgments (responses or messages)
ATSn=x	Write value x to S register n (modem command according to [3])
ATSn?	Display value of S register n (modem command according to [3]) Note: This type of mobile phone does not allow the values of all S registers to be displayed with a single command

ATV0	Display acknowledgments as numbers
ATV1	Display acknowledgments as text
ATX<n>	Report link with CONNECT only ignore busy signal <n> can take one of the following values: 1 Report link with CONNECT plus baud rate, ignore busy signal 2 same as ATX1 3 same as ATX, but report BUSY 4 same as ATX, t report BUSY
ATZ	Set to default configuration
AT&C<n>	Circuit 109 (Received line signal detector / DCD) behavior <n> can take one of the following values: 0 DCD always ON 1 DCD ON if carrier detected
AT&D[n]	Circuit 108 (Data terminal ready / DTR) behavior Note: The AT&D<n> commands described below take no effect since circuit 108 is not supported in this type of mobile phone. See section 2.7 for more information on which circuit assignments are supported. <n> can take one of the following values: 0 DTR ignored 1 On DTR ON to OFF: go to online command mode, don't disconnect 2 On DTR ON to OFF: disconnect go to command mode. Automatic answer is disabled while DTR OFF.
AT&F[0]	Resets all current parameters of the following AT commands to their factory profile: ATE, ATQ, ATV, ATX AT+CBST, AT+CRLP, AT+CRC, AT+CR, AT+CNMI, AT+CMEE, AT+CSMS, AT^SCKs, AT^SACM, AT+CREG, AT+CLIP • S parameters • AT&D; AT&C; AT&S Any existing connections will be terminated. No other commands are accepted on the same command line.
\N	No action (\N2 - \N6) \N2 \N3 \N4 \N5 \N6

\Q<n	Local flow control selection (DTE ↔ DCE); can be customized <n> can take one of the following values: 0 Disable flow control 1 XON-XOFF software flow control 2 CTS only flow control 3 RTS/CTS flow control
\V[n]	Modem command 0 No /REL or /RLP appendix with the CONNECT message 1 /REL or /RLP appendix with the CONNECT message

Table 2-6: Commands supported according to Hayes standard

2.2.2 Command combinations to be avoided

It is possible to specify more than a single command in the command line at any one time; however, not all command combinations will have the expected result. To ensure that responses to commands will be displayed in the order expected, the following command combinations should be avoided:

- V25ter commands combined with FAX commands
- GSM 7.07 commands combined with Siemens-specific commands
- GSM 7.05 commands (SMS) specified stand-alone

2.3 AT commands and responses according to GSM 07.07 and GSM 07.05

According to GSM, it is possible to execute an AT command in various forms, as follows:

Test command	AT+CXXX=?	The mobile phone or modem responds by sending the list of parameters and value ranges; these can be set using the corresponding Write command or by means of internal processes
Read command	AT+CXXX?	This command displays the current value setting of the parameter(s).
Write command	AT+CXXX=<...>	This command is used to set parameters that can be set.
Execute command	AT+CXXX	This command reads non-settable parameters which are influenced by internal processes in the mobile phone or modem

Table 2-7: Conventions applying to the presentation of AT commands

2.3.1 General commands according to GSM 07.07

This section provides the descriptions of general GSM 07.07 commands.

2.3.1.1 ATO

ATO	Return to online data state
Execute command ATO	Response CONNECT/ NO CARRIER/ERROR

2.3.1.2 AT+CGMI

AT+CGMI	Issue manufacturer ID code
Test command AT+CGMI=?	Response OK
Execute command AT+CGMI	Response <manufacturer> Parameter <manufacturer> Name of manufacturer (SIEMENS)

2.3.1.3 AT+CGMM

AT+CGMM	Issue model ID code
Test command AT+CGMM=?	Response OK
Execute command AT+CGMM	Response <model> Parameter <model> Name of telephone (MOBILE)

2.3.1.4 AT+CGMR

AT+CGMR	Output the GSM telephone version
Test command AT+CGMR=?	Response OK
Execute command AT+CGMR	Response <revision> Parameter <revision> Version of the telephone software

2.3.1.5 AT+CGSN

AT+CGSN	Output the serial number (IMEI)
Test command AT+CGSN=?	Response OK
Execute command AT+CGSN	Response <sn> Parameter <sn> IMEI of the telephone

2.3.1.6 AT+CIMI

AT+CIMI	Output of IMSI
Test command AT+CIMI=?	Response OK
Execute command AT+CIMI	Response <imsi> Parameter <imsi> International Mobile Subscriber Identity (IMSI)

2.3.1.7 AT+CKPD

AT+CKPD	Keypad control
Test command AT+CKPD=?	Response OK/ERROR/+CME ERROR
Write command AT+CKPD=<keys>[,<time>[,<pause>]]	Parameter <keys> string of characters representing keys (see section 3.4 for a list of implemented keys) <time> 0...255 time in tenths of seconds (0.1 seconds) that each key must be pressed <pause> $\frac{3}{0...255}$ Default: = 0.3 sec length of pause in tenths of seconds (*0.1 seconds) that may elapse between two key presses
	Response OK/ERROR/+CME ERROR

2.3.1.8 AT+CSCS

AT+CSCS	Select TE character set
Test command AT+CSCS=?	Response +CSCS: (list of supported <chset>s) OK
Read command AT+CSCS?	Response +CSCS: <chset> OK/ERROR/+CME ERROR Parameter <chset> String; determines which TE character set is used ("GSM"/"UCS2")
Write command AT+CSCS=[<chset>]	Response OK/ERROR/+CME ERROR

2.3.1.9 AT+GSN

AT+GSN	Output the serial number (IMEI)
Test command AT+GSN=?	Response OK
Execute command AT+GSN	Response +GSN: <sn> Parameter <sn> IMEI of the telephone

2.3.1.10 AT+WS46

AT+WS46	Select wireless network
Test command AT+WS46=?	Response (list of supported <n>s) OK
Read command AT+WS46?	Response <n> OK/ERROR/+CME ERROR Parameter <n> Integer; WDS side stack 12 GSM digital cellular
Write command AT+WS46=[<n>]	Response OK/ERROR/+CME ERROR

2.3.2 Call control commands

This section provides the descriptions of commands related to call control.

2.3.2.1 AT+CEER

AT+CEER	Query the reason for disconnection of last call
Test command AT+CEER=?	Response OK
Execute command AT+CEER	Response +CEER: <report> Parameter <report> Reason for disconnection, reported as numbers. For detailed information on GPRS values see section 3.3.

2.3.2.2 AT+CHUP

AT+CHUP	Terminate call
Test command AT+CHUP=?	This command terminates all active calls and all calls on hold. Response OK
Execute command AT+CHUP	Response OK/ERROR

2.3.2.3 AT+CR

AT+CR	Service reporting control
-------	---------------------------

Test command AT+CR=?	Response +CR: (list of supported <mode>s) OK/ERROR/+CME ERROR Parameter 0 disables reporting <mode> 1 enables reporting OK/ERROR/+CME ERROR
Read command AT+CR?	Response +CR: <mode> OK/ERROR/+CME ERROR Parameter <mode> See Test command
Write command AT+CR=<mode>	Parameter <mode> See Test command Response OK/ERROR/+CME ERROR

2.3.2.4 AT+CRC

AT+CRC	Cellular result codes
Test command AT+CRC=?	Response +CRC: (list of supported <mode>s) OK/ERROR/+CME ERROR Parameter 0 disables reporting <mode> 1 enables reporting OK/ERROR/+CME ERROR
Read command AT+CRC?	Response +CRC: <mode> OK/ERROR/+CME ERROR Parameter <mode> See Test command
Write command AT+CRC=<mode>	Parameter <mode> See Test command Response OK/ERROR/+CME ERROR

2.3.3 Network service related commands

This section provides the descriptions of commands related to network service.

2.3.3.1 AT+CAOC

AT+CAOC	Advice of charge
Test command AT+CAOC=?	Response +CAOC: (list of supported <mode>s) Parameter 0 query CCM value <mode>
Read command AT+CAOC?	Response +CAOC: <mode> Parameter <mode> See Test command
Write command AT+CAOC=<mode>	Response OK Parameter <mode> 0 See Test command
	Parameter <mode> See Test command
Execute command AT+CAOC	Response +CAOC: <ccm> OK/ERROR/+CME ERROR Parameter <ccm> Updated hexadecimal call meter, measured in home units; coding in analogy to ACMmax on the SIM

2.3.3.2 AT+CCFC

AT+CCFC	Call forwarding																																																																					
<p>Test command AT+CCFC=?</p>	<p>Response +CCFC: (list of supported <reas>s) OK/ERROR/+CME ERROR</p> <p>Parameter</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%;">r</td> <td style="width: 10%;">0</td> <td>Always</td> </tr> <tr> <td><reas</td> <td>1</td> <td>If busy</td> </tr> <tr> <td>></td> <td>2</td> <td>If no answer</td> </tr> <tr> <td></td> <td>3</td> <td>If not available</td> </tr> <tr> <td></td> <td>4</td> <td>All reasons (0-3)</td> </tr> <tr> <td></td> <td>5</td> <td>All conditional reasons (1-3)</td> </tr> </table>	r	0	Always	<reas	1	If busy	>	2	If no answer		3	If not available		4	All reasons (0-3)		5	All conditional reasons (1-3)																																																			
r	0	Always																																																																				
<reas	1	If busy																																																																				
>	2	If no answer																																																																				
	3	If not available																																																																				
	4	All reasons (0-3)																																																																				
	5	All conditional reasons (1-3)																																																																				
<p>Write command AT+CCFC=<reas>, <mode>[, <num>[, <type>[, <class>[, , , <time>]]]]</p>	<p>Parameter</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;"><u><reas></u></td> <td style="width: 15%;"></td> <td>See Test command</td> </tr> <tr> <td><u><mode></u></td> <td></td> <td></td> </tr> <tr> <td></td> <td>1</td> <td>Deactivate</td> </tr> <tr> <td></td> <td>2</td> <td>Activate</td> </tr> <tr> <td></td> <td>3</td> <td>Query</td> </tr> <tr> <td></td> <td>4</td> <td>Install</td> </tr> <tr> <td></td> <td>5</td> <td>Delete</td> </tr> <tr> <td><u><num></u></td> <td></td> <td>Telephone number</td> </tr> <tr> <td><u><type></u></td> <td></td> <td>Type of telephone number</td> </tr> <tr> <td><u><class></u></td> <td></td> <td></td> </tr> <tr> <td></td> <td>1</td> <td>Voice</td> </tr> <tr> <td></td> <td>2</td> <td>Data</td> </tr> <tr> <td></td> <td>4</td> <td>Fax</td> </tr> <tr> <td></td> <td>7</td> <td>DEFAULT = Voice, Data and FAX</td> </tr> <tr> <td></td> <td>8</td> <td>SMS</td> </tr> <tr> <td></td> <td>16</td> <td>data circuit sync</td> </tr> <tr> <td></td> <td>32</td> <td>data circuit async</td> </tr> <tr> <td></td> <td>64</td> <td>dedicated packet access</td> </tr> <tr> <td></td> <td>128</td> <td>dedicated PAD access</td> </tr> <tr> <td></td> <td>X</td> <td>combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX</td> </tr> <tr> <td><u><time></u></td> <td>1-30</td> <td>Time, rounded to a multiple of five seconds</td> </tr> </table> <p>Response If <mode>=2 and command is successful +CCFC:<status>, <class>[, <num>, <type>[, , , <time>]] [<CR><LF> +CCFC:....] OK/ERROR/+CME ERROR</p> <p>Parameter</p> <table style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 15%;"><u><status></u></td> <td style="width: 15%;">0</td> <td>Inactive</td> </tr> <tr> <td></td> <td>1</td> <td>Active</td> </tr> </table>	<u><reas></u>		See Test command	<u><mode></u>				1	Deactivate		2	Activate		3	Query		4	Install		5	Delete	<u><num></u>		Telephone number	<u><type></u>		Type of telephone number	<u><class></u>				1	Voice		2	Data		4	Fax		7	DEFAULT = Voice, Data and FAX		8	SMS		16	data circuit sync		32	data circuit async		64	dedicated packet access		128	dedicated PAD access		X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX	<u><time></u>	1-30	Time, rounded to a multiple of five seconds	<u><status></u>	0	Inactive		1	Active
<u><reas></u>		See Test command																																																																				
<u><mode></u>																																																																						
	1	Deactivate																																																																				
	2	Activate																																																																				
	3	Query																																																																				
	4	Install																																																																				
	5	Delete																																																																				
<u><num></u>		Telephone number																																																																				
<u><type></u>		Type of telephone number																																																																				
<u><class></u>																																																																						
	1	Voice																																																																				
	2	Data																																																																				
	4	Fax																																																																				
	7	DEFAULT = Voice, Data and FAX																																																																				
	8	SMS																																																																				
	16	data circuit sync																																																																				
	32	data circuit async																																																																				
	64	dedicated packet access																																																																				
	128	dedicated PAD access																																																																				
	X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX																																																																				
<u><time></u>	1-30	Time, rounded to a multiple of five seconds																																																																				
<u><status></u>	0	Inactive																																																																				
	1	Active																																																																				

2.3.3.3 AT+CCWA

AT+CCWA	Call waiting
Test command AT+CCWA=?	Response +CCWA: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter <n> 0 disable 1 enable
Read command AT+CCWA?	Response +CCWA: <n>, <m>,<class>,,<cli validity> OK/ERROR/+CME ERROR
Write command AT+CCWA=[<n>,[<mode>[,<class>]]]	Parameter <n> See Test command ----- <mode> 0 Disable 1 Enable 2 Query Status ----- <num> Telephone number ----- <type> Type of telephone number ----- <class> 1 Voice 2 Data 4 Fax 7 Default =Voice, Data and Fax 8 SMS 16 data circuit sync 32 data circuit async 64 dedicated packet access 128 dedicated PAD access X combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX ----- <CLI validity> 0 CLI valid 1 CLI has been withheld 2 CLI is not available ----- Response If <mode>=2 and command is successful +CCWA: <status>, <class1><CR><LF>+CCWA:] OK/ERROR/+CME ERROR Parameter <status> 0 Inactive 1 Active
	Unsolicited message +CCWA:<num>,<type>,<class>,,<cli validity>

2.3.3.4 AT+CHLD

AT+CHLD	Call hold and multiparty												
Test command AT+CHLD=?	Response +CHLD: (list of supported <n>s) OK/ERROR/+CME ERROR												
Write command AT+CHLD=[<n>]	<p>Parameter <n></p> <table border="0"> <tr> <td style="padding-right: 20px;">0</td> <td>Terminates all held calls or sets UDUB (User Determined User Busy) for a waiting call</td> </tr> <tr> <td>1</td> <td>Terminates all active calls (if there are any) and accepts the other call (waiting call or held call)</td> </tr> <tr> <td>1<x></td> <td>Terminates call number <x> (x= 1-7)</td> </tr> <tr> <td>2</td> <td>Puts all active calls on hold (if there are any) and accepts the other call (waiting call or held call) as active</td> </tr> <tr> <td>2<x></td> <td>Puts all active calls except call X (X= 1-7) on hold (split</td> </tr> <tr> <td>3</td> <td>Connects the call put on hold to the active call multiparty</td> </tr> </table> <p>In conflict situations, the action is always applied to the waiting call.</p> <p>For terminating: Use the "AT+CHUP" command to terminate all calls except waiting calls</p> <p>Note: The scope of this command depends on the SIM clearing and/or on the network support</p> <p>Response OK/ERROR/+CME ERROR</p>	0	Terminates all held calls or sets UDUB (U ser D etermined U ser B usy) for a waiting call	1	Terminates all active calls (if there are any) and accepts the other call (waiting call or held call)	1<x>	Terminates call number <x> (x= 1-7)	2	Puts all active calls on hold (if there are any) and accepts the other call (waiting call or held call) as active	2<x>	Puts all active calls except call X (X= 1-7) on hold (split	3	Connects the call put on hold to the active call multiparty
0	Terminates all held calls or sets UDUB (U ser D etermined U ser B usy) for a waiting call												
1	Terminates all active calls (if there are any) and accepts the other call (waiting call or held call)												
1<x>	Terminates call number <x> (x= 1-7)												
2	Puts all active calls on hold (if there are any) and accepts the other call (waiting call or held call) as active												
2<x>	Puts all active calls except call X (X= 1-7) on hold (split												
3	Connects the call put on hold to the active call multiparty												

2.3.3.5 AT+CLCC

AT+CLCC	List Current Calls
Test command AT+CLCC=?	Response OK
Execute command AT+CLCC	Response [+CLCC: <id1>,<dir>,<stat>,<mode>,<empty>,<number>,<type>][<CR> <LF>+CLCC: <id2>,<dir>,<stat>,<mode>,<empty>,<number>,<type>[...]]] OK/ERROR/+CME ERROR Parameter <idx> <integer> Indicates the call identification number as described in subclause 4.5.5.1 of the GSM 02.30 document [19]; this number can be used in AT+CHLD command operations <dir> 0 mobile originated (MO) call 1 mobile terminated (MT) call <stat> Indicates the state of the call 0 active 1 held 2 dialing (MO call) 3 alerting (MO call) 4 incoming (MT call) 5 waiting (MT call) <mode> Indicates the bearer/teleservice 0 voice 1 data 2 fax 3 voice followed by data, voice mode 4 alternating voice/data, voice mode 5 alternating voice/fax, voice mode 6 voice followed by data, data mode 7 alternating voice/data, data mode 8 alternating voice/fax, fax mode 9 unknown <empty> 0 Indicates that the call is not one of multiparty (conference) call parties 1 call is one of multiparty (conference) call parties <number> string type phone number in format specified by <type> <type> type of address octet in integer format

2.3.3.6 AT+CLCK

AT+CLCK	Switch locking on and off Revision to GSM 07.07 according to CR TDOC ETSI/SMG4 187/96																																													
Test command AT+CLCK=?	Response +CLCK: (list of supported <fac>s) OK/ERROR/+CME ERROR Parameter <fac> <table border="0" style="width: 100%; border-collapse: collapse;"> <tr><td style="width: 100px;">CS</td><td>Keyboard lock</td></tr> <tr><td>PS</td><td>Phone locked to SIM (device code)</td></tr> <tr><td>SC</td><td>SIM card (PIN)</td></tr> <tr><td>FD</td><td>FDN lock</td></tr> <tr><td>AO</td><td>BAOC (bar all outgoing calls)</td></tr> <tr><td>OI</td><td>BOIC (bar outgoing international calls)</td></tr> <tr><td>OX</td><td>BOIC-exHC (bar outgoing international calls except to home country)</td></tr> <tr><td>AI</td><td>BAIC (bar all incoming calls)</td></tr> <tr><td>IR</td><td>BIC-Roam (bar incoming calls when roaming outside the home country)</td></tr> <tr><td>AB</td><td>All Barring services</td></tr> <tr><td>AG</td><td>All outgoing barring services</td></tr> <tr><td>AC</td><td>All incoming barring services</td></tr> </table>	CS	Keyboard lock	PS	Phone locked to SIM (device code)	SC	SIM card (PIN)	FD	FDN lock	AO	BAOC (bar all outgoing calls)	OI	BOIC (bar outgoing international calls)	OX	BOIC-exHC (bar outgoing international calls except to home country)	AI	BAIC (bar all incoming calls)	IR	BIC-Roam (bar incoming calls when roaming outside the home country)	AB	All Barring services	AG	All outgoing barring services	AC	All incoming barring services																					
CS	Keyboard lock																																													
PS	Phone locked to SIM (device code)																																													
SC	SIM card (PIN)																																													
FD	FDN lock																																													
AO	BAOC (bar all outgoing calls)																																													
OI	BOIC (bar outgoing international calls)																																													
OX	BOIC-exHC (bar outgoing international calls except to home country)																																													
AI	BAIC (bar all incoming calls)																																													
IR	BIC-Roam (bar incoming calls when roaming outside the home country)																																													
AB	All Barring services																																													
AG	All outgoing barring services																																													
AC	All incoming barring services																																													
Write command AT+CLCK=<fac>, <mode>[, <passwd>[,<class>]]	<table border="0" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 100px;">Parameter <fac></td> <td></td> <td>See Test command</td> </tr> <tr> <td><mode></td> <td>0</td> <td> Cancels lock</td> </tr> <tr> <td></td> <td>1</td> <td> Activates lock</td> </tr> <tr> <td></td> <td>2</td> <td> Queries lock status</td> </tr> <tr> <td><passwd></td> <td></td> <td> Password</td> </tr> <tr> <td><class></td> <td>1</td> <td> Voice</td> </tr> <tr> <td></td> <td>2</td> <td> Data</td> </tr> <tr> <td></td> <td>4</td> <td> Fax</td> </tr> <tr> <td></td> <td>7</td> <td> Voice, Data and FAX (default)</td> </tr> <tr> <td></td> <td>8</td> <td> SMS</td> </tr> <tr> <td></td> <td>16</td> <td> data circuit sync</td> </tr> <tr> <td></td> <td>32</td> <td> data circuit async</td> </tr> <tr> <td></td> <td>64</td> <td> dedicated packet access</td> </tr> <tr> <td></td> <td>128</td> <td> dedicated PAD access</td> </tr> <tr> <td></td> <td>X</td> <td> combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX</td> </tr> </table>	Parameter <fac>		See Test command	<mode>	0	Cancels lock		1	Activates lock		2	Queries lock status	<passwd>		Password	<class>	1	Voice		2	Data		4	Fax		7	Voice, Data and FAX (default)		8	SMS		16	data circuit sync		32	data circuit async		64	dedicated packet access		128	dedicated PAD access		X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX
Parameter <fac>		See Test command																																												
<mode>	0	Cancels lock																																												
	1	Activates lock																																												
	2	Queries lock status																																												
<passwd>		Password																																												
<class>	1	Voice																																												
	2	Data																																												
	4	Fax																																												
	7	Voice, Data and FAX (default)																																												
	8	SMS																																												
	16	data circuit sync																																												
	32	data circuit async																																												
	64	dedicated packet access																																												
	128	dedicated PAD access																																												
	X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX																																												
Cont. Next page																																														

Write command AT+CLIP=[<n>]	Parameter <n> See Read command
	Response OK/ERROR/+CME ERROR
	Unsolicited message +CLIP: <num>,<type>,,,<CLI validity>

2.3.3.8 AT+CLIR

AT+CLIR	Select Incognito Mode (Call Line Identification Restriction)
Test command AT+CLIR=?	Response +CLIR: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter <n> 0 Presentation indicator is used according to network 1 CLIR invocation (incognito) 2 CLIR suppression (not incognito)
Read command AT+CLIR?	Response +CLIR: <n>, <m> OK/ERROR/+CME ERROR Parameter <n> See Test command <m> 0 CLIR not provisioned (not incognito) 1 CLIR provisioned in permanent mode (incognito) 2 Unknown 3 CLIR temporarily mode presentation restricted (next call incognito) 4 CLIR temporarily mode presentation allowed (next call not incognito)
Write command AT+CLIR=[<n>]	Parameter <n> See Read command Response OK/ERROR/+CME ERROR

2.3.3.9 AT+CNUM

AT+CNUM	Read own numbers						
Test command AT+ CNUM=?	Response +CNUM: OK/ERROR/+CME ERROR						
Write command AT+CNUM	Parameter +CNUM: [<alpha1>], <number1>, <type1>[...] Response OK/ERROR/+CME ERROR <table> <tr> <td>Parameter <alphax></td> <td>optional alphanumeric string associated with <numberx>; used character set should be the one selected with command Select TE Character Set AT+CSCS</td> </tr> <tr> <td><numberx></td> <td>string type phone number of format specified by <typex></td> </tr> <tr> <td><typex></td> <td>type of address octet in integer format (refer GSM 04.08 [8] subclause 10.5.4.7)</td> </tr> </table>	Parameter <alphax>	optional alphanumeric string associated with <numberx>; used character set should be the one selected with command Select TE Character Set AT+CSCS	<numberx>	string type phone number of format specified by <typex>	<typex>	type of address octet in integer format (refer GSM 04.08 [8] subclause 10.5.4.7)
Parameter <alphax>	optional alphanumeric string associated with <numberx>; used character set should be the one selected with command Select TE Character Set AT+CSCS						
<numberx>	string type phone number of format specified by <typex>						
<typex>	type of address octet in integer format (refer GSM 04.08 [8] subclause 10.5.4.7)						

2.3.3.10 AT+COLP

AT+COLP	Connected Line Identification Presentation
Test command AT+COLP=?	Response +COLP: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter <n> 0 Disable 1 Enable
Read command AT+COLP?	Response +COLP: <n>, <m> OK/ERROR/+CME ERROR Parameter <n> See Test command <m> 0 COLP not provisioned (no presentation) 1 COLP provisioned 2 Unknown
Write command AT+COLP=[<n>]	Parameter <n> See Test command Response OK/ERROR/+CME ERROR Unexpected message +COLP: <num>,<type>

2.3.3.11 AT+COPN

AT+COPN	Read operator names
Test command AT+COPN=?	Response OK
Execute command AT+COPN	Response +COPN:numeric <oper>,long alphanumeric <oper><CR><LF> +COPN:..... OK/ERROR/+CME ERROR Parameter Network operator in numeric and alphanumeric notation see <oper> AT^SPLM

2.3.3.12 AT+COPS

AT+COPS	Commands concerning selection of network operator																																	
Test command AT+COPS=?	Response +COPS: [list of supported (<stat>,long alphanumeric <oper>,,numeric <oper>)s][,,(list of supported <mode>s),(list of supported <format>s)] OK/ERROR/+CME ERROR <table border="1"> <tr> <td>Parameter <stat></td> <td>0</td> <td>Unknown</td> </tr> <tr> <td></td> <td>1</td> <td>Useful network operator</td> </tr> <tr> <td></td> <td>2</td> <td>Used network operator</td> </tr> <tr> <td></td> <td>3</td> <td>Prohibited network operator</td> </tr> </table> <table border="1"> <tr> <td><oper></td> <td colspan="2">Operator in the format according to <mode></td> </tr> </table> <table border="1"> <tr> <td><mode></td> <td>0</td> <td>Automatic mode</td> </tr> <tr> <td></td> <td>1</td> <td>Manual selection of network operator</td> </tr> <tr> <td></td> <td>3</td> <td>Setting of format</td> </tr> <tr> <td></td> <td>4</td> <td>Automatic, manual selected</td> </tr> </table> <table border="1"> <tr> <td><format></td> <td>0</td> <td>Long alphanumeric</td> </tr> <tr> <td></td> <td>2</td> <td>Numeric <oper></td> </tr> </table>	Parameter <stat>	0	Unknown		1	Useful network operator		2	Used network operator		3	Prohibited network operator	<oper>	Operator in the format according to <mode>		<mode>	0	Automatic mode		1	Manual selection of network operator		3	Setting of format		4	Automatic, manual selected	<format>	0	Long alphanumeric		2	Numeric <oper>
Parameter <stat>	0	Unknown																																
	1	Useful network operator																																
	2	Used network operator																																
	3	Prohibited network operator																																
<oper>	Operator in the format according to <mode>																																	
<mode>	0	Automatic mode																																
	1	Manual selection of network operator																																
	3	Setting of format																																
	4	Automatic, manual selected																																
<format>	0	Long alphanumeric																																
	2	Numeric <oper>																																
Read command AT+COPS?	Response +COPS: <mode>[,<format> ,<oper>] OK/ERROR/+CME ERROR <table border="1"> <tr> <td>Parameter <mode></td> <td>See Test command</td> </tr> <tr> <td><format></td> <td>See Test command</td> </tr> <tr> <td><oper></td> <td>Network operator</td> </tr> </table>	Parameter <mode>	See Test command	<format>	See Test command	<oper>	Network operator																											
Parameter <mode>	See Test command																																	
<format>	See Test command																																	
<oper>	Network operator																																	
Write command AT+COPS=<mode>[,<format>[,<oper>]]	<table border="1"> <tr> <td>Parameter <mode></td> <td>See Test command</td> </tr> <tr> <td><format></td> <td>See Test command</td> </tr> <tr> <td></td> <td>If <mode> = 1, <format> can only = 2</td> </tr> <tr> <td><oper></td> <td>In numeric form only</td> </tr> </table> Response OK/ERROR/+CME ERROR	Parameter <mode>	See Test command	<format>	See Test command		If <mode> = 1, <format> can only = 2	<oper>	In numeric form only																									
Parameter <mode>	See Test command																																	
<format>	See Test command																																	
	If <mode> = 1, <format> can only = 2																																	
<oper>	In numeric form only																																	

2.3.3.13 AT+CPOL

AT+CPOL	Preferred operator list
Test command AT+CPOL=?	Response +CPOL: (list of supported <index>s), (list of supported <format>s)
	Parameter <index> <format> 2 numeric
Read command AT+CPOL?	Response +CPOL: <index>, <format>, <operator><CR><LF> +CPOL:..... OK/ERROR/+CME ERROR Parameter <index> See Test command <format> See Test command
Write command AT+CPOL=[<index>][, <format>[,<oper>]]	Parameter <index> See Test command <format> See Test command <oper> operator Response OK/ERROR/+CME ERROR

2.3.3.14 AT+CPWD

AT+CPWD	Change password to a lock																								
<p>Test command AT+CPWD=?</p>	<p>Response +CPWD: list of supported (<fac>, <pwdlength>)s OK/ERROR/+CME ERROR</p> <p>Parameter <fac></p> <table border="0"> <tr><td>CS</td><td>Keyboard lock</td></tr> <tr><td>PS</td><td>Phone locked to SIM (device code)</td></tr> <tr><td>SC</td><td>SIM card (PIN)</td></tr> <tr><td>P2</td><td>PIN2</td></tr> <tr><td>AO</td><td>BAOC (bar all outgoing calls)</td></tr> <tr><td>OI</td><td>BOIC (bar outgoing international calls)</td></tr> <tr><td>OX</td><td>BOIC-exHC (bar outgoing international calls except to home country)</td></tr> <tr><td>AI</td><td>BAIC (bar all incoming calls)</td></tr> <tr><td>IR</td><td>BIC-Roam (bar incoming calls when roaming outside the home country)</td></tr> <tr><td>AB</td><td>All Barring services</td></tr> <tr><td>AG</td><td>All outgoing barring services</td></tr> <tr><td>AC</td><td>All incoming barring services</td></tr> </table> <p><pwdlength> Password length</p>	CS	Keyboard lock	PS	Phone locked to SIM (device code)	SC	SIM card (PIN)	P2	PIN2	AO	BAOC (bar all outgoing calls)	OI	BOIC (bar outgoing international calls)	OX	BOIC-exHC (bar outgoing international calls except to home country)	AI	BAIC (bar all incoming calls)	IR	BIC-Roam (bar incoming calls when roaming outside the home country)	AB	All Barring services	AG	All outgoing barring services	AC	All incoming barring services
CS	Keyboard lock																								
PS	Phone locked to SIM (device code)																								
SC	SIM card (PIN)																								
P2	PIN2																								
AO	BAOC (bar all outgoing calls)																								
OI	BOIC (bar outgoing international calls)																								
OX	BOIC-exHC (bar outgoing international calls except to home country)																								
AI	BAIC (bar all incoming calls)																								
IR	BIC-Roam (bar incoming calls when roaming outside the home country)																								
AB	All Barring services																								
AG	All outgoing barring services																								
AC	All incoming barring services																								
<p>Write command AT+CPWD=<fac>,<oldpwd>,<newpwd></p>	<p>Parameter <fac> See Test command <oldpwd> Existing password <newpwd> New password</p> <p>Note PS Phone Code (device code) AT+CPWD="PS" , , <newpwd> when no password has previously been entered to delete password AT+CPWD="PS" , <oldpwd></p> <p>Response OK/ERROR/+CME ERROR</p>																								

2.3.3.15 AT+CREG

AT+CREG	Network registration
Test command AT+CREG=?	Response +CREG: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter 0 Suppresses the unexpected network status messages <n> 1 Displays the unexpected network status messages 2 Enables unexpected network registration and location information messages OK/ERROR/+CME ERROR
Read command AT+CREG?	Response +CREG: <n>,<stat>[,<lac>,<ci>] OK/ERROR/+CME ERROR Parameter <n> See Test command <stat> 0 Not checked in, not seeking 1 Checked in 2 Not checked in, but seeking a network 3 Check-in denied by network 4 Unknown 5 Registered, roaming <lac> Hexadecimal 2-byte string type of location area code <ci> Hexadecimal 2-byte string type of cell ID
Write command AT+CREG=<n>	Response OK/ERROR/+CME ERROR Parameter <n> See Test command
	Unsolicited message +CREG: <stat>

2.3.3.16 AT+CSSN

AT+CSSN	Supplementary service notifications Revision according to GSM 07.07 Version 5.0.0												
Test command AT+CSSN=?	<p>Response +CSSN: (list of supported <n>s), (list of supported <m>s)</p> <p>Parameter</p> <table> <tr> <td><n></td> <td>0</td> <td>Suppresses the +CSSI messages</td> </tr> <tr> <td></td> <td>1</td> <td>Activates the +CSSI messages</td> </tr> <tr> <td><m></td> <td>0</td> <td>Suppresses the +CSSU messages</td> </tr> <tr> <td></td> <td>1</td> <td>Activates the +CSSU messages</td> </tr> </table> <p>For supported +CSSI/+CSSU messages, see section 2.4.3 below.</p>	<n>	0	Suppresses the +CSSI messages		1	Activates the +CSSI messages	<m>	0	Suppresses the +CSSU messages		1	Activates the +CSSU messages
<n>	0	Suppresses the +CSSI messages											
	1	Activates the +CSSI messages											
<m>	0	Suppresses the +CSSU messages											
	1	Activates the +CSSU messages											
Read command AT+CSSN?	<p>Response +CSSN: <n>, <m></p> <p>Parameter</p> <table> <tr> <td><n></td> <td>See Test command</td> </tr> <tr> <td><m></td> <td>See Test command</td> </tr> </table>	<n>	See Test command	<m>	See Test command								
<n>	See Test command												
<m>	See Test command												
Write command AT+CSSN=<n>[,<m>]	<p>Parameter</p> <table> <tr> <td><n></td> <td>See Test command</td> </tr> <tr> <td><m></td> <td>See Test command</td> </tr> </table> <p>Unsolicited message +CSSI: <code1> +CSSU: <code2></p> <p>Parameter</p> <table> <tr> <td><code1></td> <td>3</td> <td>Intermediate result code Waiting call is pending</td> </tr> <tr> <td><code2></td> <td>5</td> <td>Unsolicited result code Held call was terminated</td> </tr> </table>	<n>	See Test command	<m>	See Test command	<code1>	3	Intermediate result code Waiting call is pending	<code2>	5	Unsolicited result code Held call was terminated		
<n>	See Test command												
<m>	See Test command												
<code1>	3	Intermediate result code Waiting call is pending											
<code2>	5	Unsolicited result code Held call was terminated											

2.3.4 Commands related to mobile equipment control and status

This section provides the descriptions of commands related to network service.

2.3.4.1 AT+CACM

AT+CACM	Accumulated call meter
Test command AT+CACM=?	Response OK
Read command AT+CACM?	Response +CACM: <acm> OK/ERROR/+CME ERROR Parameter <acm> Accumulated call meter in hexadecimal format, measured in home units; coding analogous to ΔCM_{max} on the SIM
Write command AT+CACM=[<passwd>]	Response OK/ERROR/+CME ERROR Parameter <passwd> String type; usually PIN2

2.3.4.2 AT+CALM

AT+CALM	Alert sound mode
Test command AT+CALM=?	Response +CALM: (list of supported <mode>s) OK
Read command AT+CALM?	Response +CALM: <mode> OK/ERROR/+CME ERROR
Write command AT+CALM=<mode>	Response OK/ERROR/+CME ERROR Parameter <mode> 0 normal mode 1 silent mode (all sounds are prevented) 2 beep (only a short beep indicates an incoming call)

2.3.4.3 AT+CAMM

AT+CAMM	Accumulated call meter maximum	
Test command AT+CAMM=?	Response OK	
Read command AT+CAMM?	Response +CAMM: <acmmax> OK/ERROR/+CME ERROR Parameter Accumulated call meter maximum in hexadecimal format, measured <acmmax> in home units; coding analogously to ACMmax on the SIM	
Write command AT+CAMM=[<acmmax>[,<passwd>]]	Response OK/ERROR/+CME ERROR	
	Parameter <acmmax>	see Read command
	<passwd>	String type; usually PIN2

2.3.4.4 AT+CBC

AT+CBC	Battery charge	
Test command AT+CBC=?	Response +CBC: (list of supported <bcs>s),(list of supported <bcl>s) OK/ERROR/+CME ERROR Parameter <bcs> 0 ME is supplied from battery 1 ME has battery but is not supplied from there 2 ME has no battery connected 3 Error ----- <bcl> 0 Battery is flat, no more actions are possible 1-100 charge in per cent	
Execute command AT+CBC	Response +CBC: <bcs> , <bcl>	

2.3.4.5 AT+CCLK

AT+CCLK	Clock	
Test command AT+CCLK=?	Response OK	
Read command AT+CCLK?	Response +CCLK: <time> OK/ERROR/+CME ERROR Parameter: string type value; format is "yy/MM/dd,hh:mm:ss", where <time> characters indicate the year (last two digits), month, day, hour, minutes; e.g. 6th of May 1994, 22:10:00 hours is expressed as "94/05/06,22:10:00"	
Write command AT+CCLK=<time>	Response OK/ERROR/+CME ERROR Parameter: <time> see Test command	

2.3.4.6 AT+CLVL

AT+CLVL	Loudspeaker volume level
---------	--------------------------

Test command AT+CLVL=?	Response +CLVL: (list of supported <level>s) OK
Read command AT+CLVL?	Response +CLVL: <level> OK/ERROR/+CME ERROR
Write command AT+CLVL=<level>	Response OK/ERROR/+CME ERROR Parameter <level> Loudspeaker Volume Level

2.3.4.7 AT+CMUT

AT+CMUT	Mute control
Test command AT+CMUT=?	Response +CMUT: (list of supported <n>s) OK
Read command AT+CMUT?	Response +CMUT: <n> OK/ERROR/+CME ERROR
Write command AT+CMUT=<n>	Response OK/ERROR/+CME ERROR Parameter <n> 0 mute off 1 mute on

2.3.4.8 AT+CPAS

AT+CPAS	Query the telephone status
Test command AT+CPAS=?	Response +CPAS: (list of supported <pas>s) OK/ERROR/+CME ERROR Parameter <pas> 0 Ready 3 Incoming call (phone is ringing) 4 Call is active
Execute command AT+CPAS	Response +CPAS: <pas> OK/ERROR/+CME ERROR Parameter <pas> see Test command

2.3.4.9 AT+CPBR

AT+CPBR	Read a telephone-book entry
Test command AT+CPBR= ?	Response +CPBR: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR Parameter Location number <index> <nlength> Max. length of telephone number <tlength> Max. length of text corresponding to the number
Write command AT+CPBR=<index1>[,<index2>]	Response +CPBR: <index1>, <nummer>, <typ>, <text>[<CR><LF> +CPBR: +CPBR: <index2>, <nummer>, <typ>, <text>] OK/ERROR/+CME ERROR
	Parameter Location number where the read of the entry starts <index1> <index2> Location number where the read of the entry ends <nummer> Telephone number <typ> Type of number <text> Text corresponding to the telephone number NOTE: In the <text> field, special characters like the following may appear `" ` (0x22), `@ ` (0x00), `ò ` (0x08), `Ö ` (0x5c). See also section AT+CPBW and Appendix A: "Using special characters in certain commands (e. g., +CPBR/+CPBW". Empty entries do not produce any output in models succeeding the S25

2.3.4.10 AT+CPBS

AT+CPBS	Select a telephone book
Test command AT+CPBS=?	Response +CPBS: (list of supported <sto>s) OK/ERROR/+CME ERROR Parameter <sto> FD SIM fix-dialing phonebook SM SIM phonebook ME ME phonebook DC ME Dialed Calls List ON SIM (or ME) own numbers (MSISDNs) list LD SIM last-dialling phonebook MC ME missed (unanswered received) calls list RC ME received calls list For a description of telephone-book features, see section 2.5.2. Note: DC and LD are mutually exclusive.
Read command AT+CPBS?	Response +CPBS: <sto> OK/ERROR/+CME ERROR Parameter <sto> See Test command
Write command AT+CPBS=<sto>	Parameter <sto> See Test command Response OK/ERROR/+CME ERROR

2.3.4.11 AT+CPBW

AT+CPBW		Write a telephone-book entry	
Test command AT+CPBW=?	Response +CPBW: (list of supported <index>s), <nlength>,(list of supported <type>s), <tlength> OK/ERROR/+CME ERROR	Parameter <index>	Location number
		<nlength>	Max. length of telephone number
		<tlength>	Max. length of text corresponding to the number
Write command AT+CPBW=[<index>][,<number>][,<typ>][,<text>]]]			
	Parameter <index>	<number>	Location number at which the entry is written
		<typ>	Telephone number
		<text>	Type of number
			Text corresponding to the telephone number
			The following characters in <text> must be entered via the Siemens-specific escape sequence (see also Appendix A: "Using special characters in certain commands (e. g., +CPBR/+CPBW")
		GSM Char	Hex char
		ASCII	3 byte Esc Seq (hex)
		Note	
		Ö	x5C \ x5C x35 x43 Backslash
		"	x22 " x5C x32 x32 String delim
		ò	x08 BSP x5C x30 x38 Backspace
		@	x00 NULL x5C x30 x30 GSM Null
		GSM=0x00 may cause problems on application level when using the function <code>strlen()</code> and should thus be represented by an escape sequence	
	Response OK/ERROR/+CME ERROR		

2.3.4.12 AT+CPIN

AT+CPIN	Enter PIN and query lock																																			
Test command AT+CPIN=?	Response OK																																			
Read command AT+CPIN?	<p>Response +CPIN: <code> OK/ERROR/+CME ERROR</p> <p>Parameter <code></p> <table border="0"> <tr> <td>READY</td> <td>No further input necessary</td> </tr> <tr> <td>SIM PIN</td> <td>SIM PIN input necessary</td> </tr> <tr> <td>SIM PUK</td> <td>SIM PUK input necessary</td> </tr> <tr> <td>PH-SIM PIN</td> <td>Device code (theft protection) input necessary</td> </tr> <tr> <td>PH-SIM PUK</td> <td>Device code PUK (theft protection) input necessary</td> </tr> <tr> <td>SIM PIN2</td> <td>PIN2, e.g. for editing the FDN book; only possible if previous command was acknowledged with +CME ERROR:17</td> </tr> <tr> <td>SIM PUK2</td> <td>Only possible if previous command was acknowledged with error +CME ERROR:18</td> </tr> </table> <p><u>device specific codes (SIM LOCK):</u></p> <table border="0"> <tr> <td>PH-FSIM PIN</td> <td>There is no current PIN</td> </tr> <tr> <td>PH-FSIM PUK</td> <td>Phone locked to very first inserted SIM</td> </tr> <tr> <td>PH-NET PIN</td> <td>There is no current PIN</td> </tr> <tr> <td>PH-NET PUK</td> <td>Network Personalization is actually a PUK</td> </tr> <tr> <td>PH-NETSUB PIN</td> <td>There is no current PIN</td> </tr> <tr> <td>PH-NETSUB PUK</td> <td>Network Subset Personalization is actually a PUK</td> </tr> <tr> <td>PH-SP PIN</td> <td>There is no current PIN</td> </tr> <tr> <td>PH-SP PUK</td> <td>Network Personalization is actually a PUK</td> </tr> <tr> <td>PH-CORP PIN</td> <td>There is no current PIN</td> </tr> <tr> <td>PH-CORP PUK</td> <td>Network Personalization is actually a PUK The required error message can (must) be provoked by an attempted Write command</td> </tr> </table>		READY	No further input necessary	SIM PIN	SIM PIN input necessary	SIM PUK	SIM PUK input necessary	PH-SIM PIN	Device code (theft protection) input necessary	PH-SIM PUK	Device code PUK (theft protection) input necessary	SIM PIN2	PIN2, e.g. for editing the FDN book; only possible if previous command was acknowledged with +CME ERROR:17	SIM PUK2	Only possible if previous command was acknowledged with error +CME ERROR:18	PH-FSIM PIN	There is no current PIN	PH-FSIM PUK	Phone locked to very first inserted SIM	PH-NET PIN	There is no current PIN	PH-NET PUK	Network Personalization is actually a PUK	PH-NETSUB PIN	There is no current PIN	PH-NETSUB PUK	Network Subset Personalization is actually a PUK	PH-SP PIN	There is no current PIN	PH-SP PUK	Network Personalization is actually a PUK	PH-CORP PIN	There is no current PIN	PH-CORP PUK	Network Personalization is actually a PUK The required error message can (must) be provoked by an attempted Write command
READY	No further input necessary																																			
SIM PIN	SIM PIN input necessary																																			
SIM PUK	SIM PUK input necessary																																			
PH-SIM PIN	Device code (theft protection) input necessary																																			
PH-SIM PUK	Device code PUK (theft protection) input necessary																																			
SIM PIN2	PIN2, e.g. for editing the FDN book; only possible if previous command was acknowledged with +CME ERROR:17																																			
SIM PUK2	Only possible if previous command was acknowledged with error +CME ERROR:18																																			
PH-FSIM PIN	There is no current PIN																																			
PH-FSIM PUK	Phone locked to very first inserted SIM																																			
PH-NET PIN	There is no current PIN																																			
PH-NET PUK	Network Personalization is actually a PUK																																			
PH-NETSUB PIN	There is no current PIN																																			
PH-NETSUB PUK	Network Subset Personalization is actually a PUK																																			
PH-SP PIN	There is no current PIN																																			
PH-SP PUK	Network Personalization is actually a PUK																																			
PH-CORP PIN	There is no current PIN																																			
PH-CORP PUK	Network Personalization is actually a PUK The required error message can (must) be provoked by an attempted Write command																																			
Write command AT+CPIN=<pin>[,<new pin>]	<p>Parameter <pin> <new pin></p> <p>Response OK/ERROR/+CME ERROR</p> <p>Password for appropriate lock; if the lock is a PUK, then a <new pin> is necessary. New password for the lock</p>																																			

2.3.4.13 AT+CPUC

AT+CPUC	Price per unit and currency table
Test command AT+CPUC=?	Response OK
Read command AT+CPUC?	Response +CPUC: <currency>, <ppu> OK/ERROR/+CME ERROR Parameter three-character currency code (e.g. "DEM") <currency> <ppu> price per unit; dot is used as a decimal separator (e.g. 1.33)
Write command AT+CPUC=<currency>,<ppu>[,<passwd>]	Response OK/ERROR/+CME ERROR Parameter <passwd> String type; usually PIN2

2.3.4.14 AT+CRSL

AT+CRSL	Ringer sound level
Test command AT+CRSL=?	Response +CRSL: (list of supported <level>s) OK
Read command AT+CRSL?	Response +CRSL: <level> OK/ERROR/+CME ERROR
Write command AT+CRSL=<level>	Response OK/ERROR/+CME ERROR Parameter <level> Ringer Sound Level

2.3.4.15 AT+CRSM

AT+CRSM	Restricted SIM access																		
Test command AT+CRSM=?	Response OK																		
Write command +CRSM=<command>[,<file id>[,<P1>,<P2>,<P3>[,<data>]]]	<p>Response +CRSM: <sw1>,<sw2>[,<response>] OK/ERROR/+CME ERROR</p> <table border="0"> <tr> <td style="vertical-align: top;">Parameter <command></td> <td style="vertical-align: top;">176</td> <td style="vertical-align: top;">READ BINARY</td> </tr> <tr> <td></td> <td style="vertical-align: top;">178</td> <td style="vertical-align: top;">READ RECORD</td> </tr> <tr> <td></td> <td style="vertical-align: top;">192</td> <td style="vertical-align: top;">GET RESPONSE</td> </tr> <tr> <td></td> <td style="vertical-align: top;">214</td> <td style="vertical-align: top;">UPDATE BINARY</td> </tr> <tr> <td></td> <td style="vertical-align: top;">220</td> <td style="vertical-align: top;">UPDATE RECORD</td> </tr> <tr> <td></td> <td style="vertical-align: top;">242</td> <td style="vertical-align: top;">STATUS</td> </tr> </table> <p><file id> <integer> identifier of the data file on the SIM, mandatory for every command except STATUS (see [4])</p> <p><P1>,<P2>,<P3> <integer> transferal parameter from ME to SIM, mandatory for every command except GET RESPONSE, STATUS (see [4])</p> <p><data> <hexadecimal string> information to be written to the SIM</p> <p><sw1>,<sw2> <integer> information from the SIM as to whether the command was executed at all, and if so, how</p> <p><response> <hexadecimal string> Indicates that the command was processed successfully</p> <p>Note The write access to CK boxes receives only limited support and differs from device to device.</p>	Parameter <command>	176	READ BINARY		178	READ RECORD		192	GET RESPONSE		214	UPDATE BINARY		220	UPDATE RECORD		242	STATUS
Parameter <command>	176	READ BINARY																	
	178	READ RECORD																	
	192	GET RESPONSE																	
	214	UPDATE BINARY																	
	220	UPDATE RECORD																	
	242	STATUS																	

2.3.4.16 AT+CSQ

AT+CSQ	Output signal quality														
Test command AT+CSQ=?	<p>Response +CSQ: (list of supported <rssis>), list of supported <ber> OK/ERROR/+CME ERROR</p> <p>Parameter <rssis></p> <table> <tr> <td>0</td> <td>Reception level -113 dBm or less</td> </tr> <tr> <td>1</td> <td>111 dBm</td> </tr> <tr> <td>2 - 30</td> <td>-109 to -53 dBm</td> </tr> <tr> <td>31</td> <td>-51 dBm or more</td> </tr> <tr> <td>99</td> <td>Unknown</td> </tr> </table> <hr/> <p><ber></p> <table> <tr> <td>0-7</td> <td>Bit error rate Like RXQUAL values from Table GSM 05.08 in Section 8.2.4</td> </tr> <tr> <td>99</td> <td>Unknown</td> </tr> </table>	0	Reception level -113 dBm or less	1	111 dBm	2 - 30	-109 to -53 dBm	31	-51 dBm or more	99	Unknown	0-7	Bit error rate Like RXQUAL values from Table GSM 05.08 in Section 8.2.4	99	Unknown
0	Reception level -113 dBm or less														
1	111 dBm														
2 - 30	-109 to -53 dBm														
31	-51 dBm or more														
99	Unknown														
0-7	Bit error rate Like RXQUAL values from Table GSM 05.08 in Section 8.2.4														
99	Unknown														
Execute command AT+CSQ	<p>Response +CSQ: <rssis>, <ber> OK/ERROR/+CME ERROR</p> <p>Parameter <rssis> See Test command <ber> See Test command</p>														

2.3.4.17 AT+CVIB

AT+CVIB	Vibrator mode						
Test command AT+CVIB=?	<p>Response +CVIB: (list of supported <mode>s) OK</p>						
Execute command AT+CVIB	<p>Response +CVIB: <mode> OK/ERROR/+CME ERROR</p>						
Write command AT+CVIB=<mode>	<p>Response OK/ERROR/+CME ERROR</p> <p>Parameter <mode></p> <table> <tr> <td>0</td> <td>Vibrator mode disable</td> </tr> <tr> <td>1</td> <td>enable</td> </tr> <tr> <td>16</td> <td>vibrate then ring (not available in every model)</td> </tr> </table>	0	Vibrator mode disable	1	enable	16	vibrate then ring (not available in every model)
0	Vibrator mode disable						
1	enable						
16	vibrate then ring (not available in every model)						

2.3.5 Extensions of Hayes Standard commands for GPRS

This chapter describes all the extensions of the Hayes Standard commands for GPRS.

Command	Function
ATD*<GPRS_SC>[*<called_address>][*<L2P>][*<cid>]]#	<p>Request GPRS service</p> <p><GPRS_SC>: GPRS Service Code a digit string (value 99)</p> <p><called_address> a string that identifies the called party in the address space</p> <p><L2P> a string which indicates the layer 2 protocol</p> <p><cid> a digit string which specifies a particular PDP context definition. The cid has to be defined by using the AT+CGDCONT command</p> <p>The dial command responds with CONNECT or ERROR</p>
ATD*<GPRS_SC_IP>[*<cid>]#	<p>Request GPRS IP service</p> <p><GPRS_SC> GPRS Service Code a digit string (value 98)</p> <p><cid> a digit string which specifies a particular PDP context definition. The cid has to be defined by using the AT+CGDCONT command</p> <p>The dial command responds with CONNECT or ERROR</p>
AT0	Return to on-line data state
ATS0	Automatic answer. The command may be used to turn off (n=0) and on (n>0) the automatic response to a network request for a PDP context activation.
ATS3	Termination character
ATS4	Response formatting character
ATS5	Command line editing character

2.3.6 Commands for GPRS

This section provides the descriptions of commands related to GPRS.

2.3.6.1 AT+CGACT

AT+CGACT	PDP context activate or deactivate
Test command AT+CGACT=?	Response +CGACT: (list of supported <state>s) OK/ERROR/+CME ERROR Parameter <state> indicates the state of PDP context activation 0 deactivated 1 activated
Read command AT+CGACT?	Response +CGACT:<cid>, <state>[<CR><LF>+CGACT:<cid>, <state>...] OK/ERROR/+CME ERROR Parameter <cid> numeric PDP Context Identifier <state> See Test command
Write command AT+CGACT=[<state>[,<cid>[,<cid>[...]]]]	Parameter <cid> See Read command <state> See Test command Response OK/ERROR/+CME ERROR

2.3.6.2 AT+CGANS

AT+CGANS	Manual response to a network request for PDP context activation
Test command AT+CGANS=?	Response +CGANS(list of supported <response>s), (list of supported <L2P>s) OK/ERROR/+CME ERROR Parameter <response> 0 the request is rejected 1 the request is answered <L2P> layer 2 protocol to be used between the TE and MT PPP
Write command AT+CGANS=[<response>[,<L2P>[,<cid>]]]	Parameter <response> See Test command <state> See Test command <cid> numeric PDP Context Identifier Response CONNECT/ERROR/+CME ERROR

2.3.6.3 AT+CGATT

AT+CGATT	GPRS attach or detach
Test command AT+CGATT=?	Response +CGATT: (list of supported <state>s) OK/ERROR/+CME ERROR Parameter <state> 0 detached 1 attached
Read command AT+CGATT?	Response +CGATT: <state> OK/ERROR/+CME ERROR Parameter <state> See Test command
Write command AT+CGATT=[<state>]	Parameter <state> See Test command Response OK/ERROR/+CME ERROR

2.3.6.4 AT+CGAUTO

AT+CGAUTO	Auto response to a network request for PDP context activation
Test command AT+CGAUTO=?	Response +CGAUTO: (list of supported <n>s) OK/ERROR/+CME ERROR Parameter <n> 0 indicates the state of PDP context activation 1 turn off automatic response for GPRS only 3 turn on automatic response for GPRS only modem compatibility mode, GPRS and circuit switched calls (default)
Read command AT+CGAUTO?	Response +CGAUTO: <n> OK/ERROR/+CME ERROR Parameter <n> See Test command
Write command AT+CGAUTO=[<n>]	Parameter <n> See Test command Response OK/ERROR/+CME ERROR

2.3.6.5 AT+CGCLASS

AT+CGCLASS	GPRS mobile station class
Test command AT+CGCLASS=?	Response +CGCLASS: (list of supported <class>s) OK/ERROR/+CME ERROR Parameter <class> B class B C class C in GPRS and circuit switched alternate mode CG class C in GPRS only mode CC class C in circuit switched only mode (lowest)
Read command AT+CGCLASS?	Response +CGCLASS: <class> OK/ERROR/+CME ERROR Parameter <n> See Test command
Write command AT+CGCLASS=[<class>]	Parameter <class> See Test command Response OK/ERROR/+CME ERROR

2.3.6.6 AT+CGDATA

AT+CGDATA	Enter data state
Test command AT+CGDATA=?	Response +CGDATA: (list of supported <L2P>s) OK/ERROR/+CME ERROR Parameter <L2P> layer 2 protocol to be used between the TE and MT PPP
Write command AT+CGDATA=[<L2P> , [<cid> [, <cid> [, ...]]]]	Parameter <L2P> See Test command <cid> numeric PDP Context Identifier Response CONNECT/ERROR/+CME ERROR

2.3.6.7 AT+CGDCONT

AT+CGDCONT	Define PDP Context																
<p>Test command AT+CGDCONT=?</p>	<p>Response +CGDCONT: (range of supported <cid>s), <PDP_type>, , , (list of supported <d_comp>s), (list of supported <h_comp>s) [<cr><LF>+CGDCONT: (range of supported <cid>s), <PDP_type>, , , (list of supported <d_comp>s), (list of supported <h_comp>s) [. . .] OK/ERROR/+CME ERROR</cr></p> <p>Parameter</p> <table border="0"> <tr> <td data-bbox="443 510 699 539"><cid></td> <td data-bbox="699 510 1388 539">numeric PDP Context Identifier</td> </tr> <tr> <td data-bbox="443 551 699 580"><PDP_type></td> <td data-bbox="699 551 1388 580">string parameter of Packet Data Protocol type</td> </tr> <tr> <td data-bbox="443 591 699 620"></td> <td data-bbox="699 591 1388 620">PPP</td> </tr> <tr> <td data-bbox="443 631 699 660"></td> <td data-bbox="699 631 1388 660">IP</td> </tr> <tr> <td data-bbox="443 672 699 701"><d_comp></td> <td data-bbox="699 672 1388 701">numeric parameter that controls PDP data compression</td> </tr> <tr> <td data-bbox="443 712 699 741"></td> <td data-bbox="699 712 1388 741">0</td> </tr> <tr> <td data-bbox="443 752 699 781"><h_comp></td> <td data-bbox="699 752 1388 781">numeric parameter that controls PDP header compression</td> </tr> <tr> <td data-bbox="443 792 699 822"></td> <td data-bbox="699 792 1388 822">0</td> </tr> </table>	<cid>	numeric PDP Context Identifier	<PDP_type>	string parameter of Packet Data Protocol type		PPP		IP	<d_comp>	numeric parameter that controls PDP data compression		0	<h_comp>	numeric parameter that controls PDP header compression		0
<cid>	numeric PDP Context Identifier																
<PDP_type>	string parameter of Packet Data Protocol type																
	PPP																
	IP																
<d_comp>	numeric parameter that controls PDP data compression																
	0																
<h_comp>	numeric parameter that controls PDP header compression																
	0																
<p>Read command AT+CGDCONT?</p>	<p>Response +CGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <data_comp>, <head_comp> [<cr><LF>+CGDCONT: <cid>, <PDP_type>, <APN>, <PDP_addr>, <data_comp>, <head_comp> [. . .] OK/ERROR/+CME ERROR</cr></p> <p>Parameter</p> <table border="0"> <tr> <td data-bbox="443 999 699 1028"><cid></td> <td data-bbox="699 999 1388 1028">See Test command</td> </tr> <tr> <td data-bbox="443 1039 699 1068"><PDP_type></td> <td data-bbox="699 1039 1388 1068">See Test command</td> </tr> <tr> <td data-bbox="443 1079 699 1108"><APN></td> <td data-bbox="699 1079 1388 1108">string parameter for Access Point Name</td> </tr> <tr> <td data-bbox="443 1120 699 1149"><PDP_addr></td> <td data-bbox="699 1120 1388 1149">string parameter in IP V4 address notification</td> </tr> <tr> <td data-bbox="443 1160 699 1189"><d_comp></td> <td data-bbox="699 1160 1388 1189">See Test command</td> </tr> <tr> <td data-bbox="443 1200 699 1229"><h_comp></td> <td data-bbox="699 1200 1388 1229">See Test command</td> </tr> </table>	<cid>	See Test command	<PDP_type>	See Test command	<APN>	string parameter for Access Point Name	<PDP_addr>	string parameter in IP V4 address notification	<d_comp>	See Test command	<h_comp>	See Test command				
<cid>	See Test command																
<PDP_type>	See Test command																
<APN>	string parameter for Access Point Name																
<PDP_addr>	string parameter in IP V4 address notification																
<d_comp>	See Test command																
<h_comp>	See Test command																
<p>Write command AT+CGDCONT=[<cid> [,<PDP_type> [,<APN> [,<PDP_addr>]]]]</p>	<p>Parameter</p> <table border="0"> <tr> <td data-bbox="443 1290 699 1319"><cid></td> <td data-bbox="699 1290 1388 1319">See Test command</td> </tr> <tr> <td data-bbox="443 1330 699 1359"><PDP_type></td> <td data-bbox="699 1330 1388 1359">See Test command</td> </tr> <tr> <td data-bbox="443 1370 699 1400"><APN></td> <td data-bbox="699 1370 1388 1400">See Read command</td> </tr> <tr> <td data-bbox="443 1411 699 1440"><PDP_addr></td> <td data-bbox="699 1411 1388 1440">See Read command</td> </tr> </table> <p>Response OK/ERROR/+CME ERROR</p>	<cid>	See Test command	<PDP_type>	See Test command	<APN>	See Read command	<PDP_addr>	See Read command								
<cid>	See Test command																
<PDP_type>	See Test command																
<APN>	See Read command																
<PDP_addr>	See Read command																

2.3.6.8 AT+CGEREP

AT+CGEREP	GPRS event reporting
Test command AT+CGEREP=?	Response +CGEREP: (list of supported <mode>s),(list of supported <bfr>s) OK/ERROR/+CME ERROR Parameter <mode> numeric parameter 0 buffer unsolicited result codes in the MT; if MT result code buffer is full, the oldest ones can be <u>discarded. No codes are forwarded to the TE</u> 1 discard unsolicited result codes when MT-TE link is reserved (e.g. in on-line data mode); otherwise forward them directly to the TE 2 buffer unsolicited result codes in the MT when MT-TE link is reserved (e.g. in on-line data mode) and flush them to the TE when MT-TE link becomes available; otherwise forward them directly to the TE <bfr> numeric parameter 0 MT buffer of unsolicited result codes defined within this command is cleared when <mode> 1 or 2 is entered 1 MT buffer of unsolicited result codes defined within this command is flushed to the TE when <mode> 1 or 2 is entered
Read command AT+CGEREP?	Response +CGEREP: <mode>, <bfr> OK/ERROR/+CME ERROR Parameter <mode> See Test command <bfr> See Test command
Write command AT+CGEREP=[<mode>[,<bfr>]]	Response OK/ERROR/+CME ERROR Parameter <mode> See Test command <bfr> See Test command Unsolicited message: +CGEV: REJECT <PDP_type>, <PDP_addr> +CGEV: NW REACT <PDP_type>, <PDP_addr> +CGEV: NW DEACT <PDP_type>, <PDP_addr> +CGEV: ME DEACT <PDP_type>, <PDP_addr> +CGEV: NW DETACH +CGEV: ME DETACH +CGEV: NW CLASS <class> +CGEV: ME CLASS <class>

2.3.6.9 AT+CGQMIN

AT+CGQMIN	Quality of Service Profile (Minimum acceptable)																																	
<p>Test command AT+CGQMIN=?</p>	<p>Response +CGQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s) [<CR><LF>+CGQMIN: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s)[...]] OK/ERROR/+CME ERROR</p> <p>Parameter <PDP_type> string parameter of Packet Data Protocol type</p> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 40%;"></td> <td style="text-align: center;">PPP IP</td> <td></td> </tr> <tr> <td><precedence></td> <td style="text-align: center;">0</td> <td>numeric parameter for the precedence class network subscribed value</td> </tr> <tr> <td></td> <td style="text-align: center;">1 .. 3</td> <td></td> </tr> <tr> <td><delay></td> <td style="text-align: center;">0</td> <td>numeric parameter for the delay class network subscribed value</td> </tr> <tr> <td></td> <td style="text-align: center;">1 .. 4</td> <td></td> </tr> <tr> <td><reliability></td> <td style="text-align: center;">0</td> <td>numeric parameter for the reliability class network subscribed value</td> </tr> <tr> <td></td> <td style="text-align: center;">1..5</td> <td></td> </tr> <tr> <td><peak></td> <td style="text-align: center;">0</td> <td>numeric parameter for the peak throughput class network subscribed value</td> </tr> <tr> <td></td> <td style="text-align: center;">1 .. 7</td> <td></td> </tr> <tr> <td><mean></td> <td style="text-align: center;">0</td> <td>numeric parameter for the mean throughput class network subscribed value</td> </tr> <tr> <td></td> <td style="text-align: center;">1..12</td> <td></td> </tr> </table>		PPP IP		<precedence>	0	numeric parameter for the precedence class network subscribed value		1 .. 3		<delay>	0	numeric parameter for the delay class network subscribed value		1 .. 4		<reliability>	0	numeric parameter for the reliability class network subscribed value		1..5		<peak>	0	numeric parameter for the peak throughput class network subscribed value		1 .. 7		<mean>	0	numeric parameter for the mean throughput class network subscribed value		1..12	
	PPP IP																																	
<precedence>	0	numeric parameter for the precedence class network subscribed value																																
	1 .. 3																																	
<delay>	0	numeric parameter for the delay class network subscribed value																																
	1 .. 4																																	
<reliability>	0	numeric parameter for the reliability class network subscribed value																																
	1..5																																	
<peak>	0	numeric parameter for the peak throughput class network subscribed value																																
	1 .. 7																																	
<mean>	0	numeric parameter for the mean throughput class network subscribed value																																
	1..12																																	
<p>Read command AT+CGQMIN?</p>	<p>Response +CGQMIN:<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[<CR><LF>+CGQMIN:<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[...]] OK/ERROR/+CME ERROR</p> <p>Parameter <cid> numeric PDP Context Identifier <PDP_type> See Test command <precedence> See Test command <delay> See Test command <reliability> See Test command <peak> See Test command <mean> See Test command</p>																																	
<p>Write command AT+CGQMIN=[<cid>,<precedence>,<delay>,<reliability>,<peak>,<mean>[...]]</p>																																		
	<p>Parameter <cid> See Read command <PDP_type> See Test command <precedence> See Test command <delay> See Test command <reliability> See Test command <peak> See Test command <mean> See Test command</p> <p>Response OK/ERROR/+CME ERROR</p>																																	

2.3.6.10 AT+CGQREQ

AT+CGQREQ	Quality of Service Profile (Requested)
Test command AT+CGQREQ=?	Response +CGQREQ: <PDP_type>, (list of supported <precedence>s), (list of supported <delay>s), (list of supported <reliability>s), (list of supported <peak>s), (list of supported <mean>s) [<CR><LF>]+CGQREQ: <PDP_type>, <precedence >, <delay>, <reliability>, <peak>, <mean>[...]] OK/ERROR/+CME ERROR Parameter <PDP_type> string parameter of Packet Data Protocol type PPP IP <precedence> numeric parameter for the precedence class 0 network subscribed value 1 .. 3 <delay> numeric parameter for the delay class 0 network subscribed value 1 .. 4 <reliability> numeric parameter for the reliability class 0 network subscribed value 1..5 <peak> numeric parameter for the peak throughput class 0 network subscribed value 1 .. 7 <mean> numeric parameter for the mean throughput class 0 network subscribed value 1..12
Read command AT+CGQREQ?	Response +CGQREQ: <cid>, <precedence >, <delay>, <reliability>, <peak>, <mean>[<CR><LF>+CGQREQ: <cid>, <precedence >, <delay>, <reliability.>, <peak>, <mean>[...]] OK/ERROR/+CME ERROR Parameter numeric PDP Context Identifier <cid> <PDP_type> See Test command <precedence> See Test command <delay> See Test command <reliability> See Test command <peak> See Test command <mean> See Test command
Cont. Next page	

Write command (cont.)	
AT+CGQREQ=[<cid>[,<precedence>[,<delay>[,<reliability>[,<peak>[,<mean>]]]]]]]	
Parameter	
<cid>	See Read command
<PDP_type>	See Test command
<precedence>	See Test command
<delay>	See Test command
<reliability>	See Test command
<peak>	See Test command
<mean>	See Test command
Response	
OK/ERROR/+CME ERROR	

2.3.6.11 AT+CGPADDR

AT+CGPADDR	Show PDP address
Test command AT+CGPADDR=?	Response +CGPADDR: (list of defined <cid>s) OK/ERROR/+CME ERROR Parameter <cid> numeric PDP Context Identifier
Write command AT+CGPADDR=[<L2P> , [<cid> [, <cid> [, ...]]]]	Parameter <L2P> layer 2 protocol to be used between the TE and MT PPP <cid> numeric PDP Context Identifier Response +CGPADDR:: <cid> , <PDP_addr> [<CR><LF>+CGPADDR: <cid> , <PDP_ad dr>[...]] OK/ERROR/+CME ERROR

2.3.6.12 AT+CGREG

AT+CGREG		GPRS network registration status	
Test command AT+CGREG=?	Response +CGREG: (list of supported <n>s) OK/ERROR/+CME ERROR	Parameter <n>	0 Suppresses the unexpected network-status messages Displays the unexpected network-status messages:OK / ERROR / +CME ERROR
Read command AT+CGREG?	Response +CGREG: <n>,<stat>[,<lac>,<ci>] OK/ERROR/+CME ERROR	Parameter <n> <stat> <lac> <ci>	See Test command 0 Not registered, not currently searching 1 registered, home network 2 Not registered, but currently searching 3 registration denied by network 4 Unknown 5 Registered, roaming Hexadecimal 2-byte string type of location area code Hexadecimal 2-byte string type of cell ID
Write command AT+CGREG=[<n>]	Parameter <n> Response OK/ERROR/+CME ERROR Unsolicited message +CGREG: <stat>		See Test command

2.3.6.13 AT+CGSMS

AT+CGSMS	Select service for MO SMS messages
Test command AT+CGSMS=?	Response +CGSMS: (list of currently available <service>s) OK/ERROR/+CME ERROR Parameter <service> numeric parameter for service or service preference 0 GPRS 1 circuit switched 2 GPRS preferred (use circuit switched if GPRS not available) 3 circuit switched preferred (use GPRS if circuit switched not available)
Read command AT+CGSMS?	Response +CGSMS: <service> OK/ERROR/+CME ERROR Parameter <service> See Test command
Write command AT+CGSMS=[< service >]	Parameter <service> See Test command Response OK/ERROR/+CME ERROR

2.3.7 Commands related to mobile equipment errors

2.3.7.1 AT+CMEE

AT+CMEE	Expanded error messages according to GSM 07.07
Test command AT+CMEE=?	Response +CMEE: (list of supported <n>s) Parameter <n> 0 Suppresses the expanded error format 1 Expanded error messages as number 2 Expanded error messages as text
Read command AT+CMEE?	Response +CMEE: <n> Parameter <n> See Read command
Write command AT+CMEE=<n>	Parameter <n> See Read command Response OK/ERROR/+CME ERROR Description: For detailed information on the values possible for +CME ERROR see section 3.1. +CMS errors have been defined for SMS; for detailed information on the values possible for +CMS ERROR see section 3.2.

2.3.8 TIA IS-101 commands (“Voice control interim standard for asynchronous DCE”)

This section provides the descriptions of other AT commands.

2.3.8.1 AT+VTD

AT+VTD	Set duration of a DTMF tone
Test command AT+VTD=?	Response +VTD: (list of supported <duration>s) OK/ERROR/+CME ERROR Parameter 1-255 Duration of tone (in tenths of seconds) <duration>
Read command AT+VTD?	Response +VTD: <duration> OK/ERROR/+CME ERROR
Write command AT+VTD=<duration>	
	Parameter <duration> See Test command Response OK/ERROR

2.3.8.2 AT+VTS

AT+VTS	Send a DTMF tone
Test command AT+VTS=?	Response (list of supported <dtmf>s), (list of supported <duration>s) OK/ERROR/+CME ERROR Parameter 0-9, exactly one character of the list <dtmf> #, *, A-D <duration> 1 .. 255 Duration of tone (in tenths of seconds)
Write command AT+VTS=<dtmf>[,<duration>] Or AT+VTS=<dtmf-string>	
	Parameter <dtmf> character from the list, see Test command <dtmf-string> max. 29 characters in quotation marks ("...") (no duration cannot be specified) Response OK/ERROR/+CME ERROR

2.3.9 AT Cellular commands according to GSM 07.05 for SMS

GSM 07.05 commands are used for operating the SMS functions of the GSM mobile phone. The GSM module mobile supports the SMS PDU mode.

2.3.9.1 AT+CMGC

AT+CMGC		Send an SMS command
Test command AT+CMGC=?	Response OK	
Write command If PDU mode (+CMGF=0) AT+CMGS=<length><CR> PDU is given: <ctrl-Z/ESC>	Parameter <length> Length of PDU <pdu> See AT+CMGL command <mr> Message reference	
	Response If sending is successful: +CMGC: <mr> If sending is not successful: +CMS ERROR	

2.3.9.2 AT+CMGD

AT+CMGD		Delete an SMS in the SMS memory
Test command At+CMGD=?	Response OK	
Write command AT+CMGD=<index>	Parameter <index> Index of message in the selected memory <mem1>	
	Response OK / ERROR / +CMS ERROR	

2.3.9.3 AT+CMGF

AT+CMGF		SMS format
Test command AT+CMGF=?	Response +CMGF: (list of supported <mode>s) Parameter <mode> 0 PDU mode	
Read command AT+CMGF?	Response +CMGF: <mode> Parameter <mode> 0 PDU mode	
Write command AT+CMGF=[<mode>]	Parameter <mode> 0 PDU mode Response OK / ERROR	

2.3.9.4 AT+CMGL

AT+CMGL	List SMS Revision according to GSM 07.05 Version 4.7.0										
Test command AT+CMGL=?	Response +CMGL: (list of supported <stat>s) Parameter <stat> <table border="1"> <tr> <td>0</td> <td>REC UNREAD i.e. received messages unread (default)</td> </tr> <tr> <td>1</td> <td>REC READ i.e. received messages read</td> </tr> <tr> <td>2</td> <td>STO UNSENT i.e. stored unsent messages</td> </tr> <tr> <td>3</td> <td>STO SENT i.e. stored sent messages</td> </tr> <tr> <td>4</td> <td>ALL i.e. all messages</td> </tr> </table>	0	REC UNREAD i.e. received messages unread (default)	1	REC READ i.e. received messages read	2	STO UNSENT i.e. stored unsent messages	3	STO SENT i.e. stored sent messages	4	ALL i.e. all messages
0	REC UNREAD i.e. received messages unread (default)										
1	REC READ i.e. received messages read										
2	STO UNSENT i.e. stored unsent messages										
3	STO SENT i.e. stored sent messages										
4	ALL i.e. all messages										
Write command AT+CMGL[=<stat>]	<table border="1"> <tr> <td>Parameter <stat></td> <td>See Test command</td> </tr> <tr> <td>Response</td> <td>If PDU mode (+CMGF=0) and command are successful: +CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu>[<CR><LF> +CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF>[...]]</td> </tr> <tr> <td>Parameter <pdu></td> <td>The PDU begins with the service-center address (according to GSM04.11), followed by the TPDU according to GSM03.40, in hexadecimal format</td> </tr> <tr> <td></td> <td>otherwise: +CMS ERROR</td> </tr> </table>	Parameter <stat>	See Test command	Response	If PDU mode (+CMGF=0) and command are successful: +CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu>[<CR><LF> +CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF>[...]]	Parameter <pdu>	The PDU begins with the service-center address (according to GSM04.11), followed by the TPDU according to GSM03.40, in hexadecimal format		otherwise: +CMS ERROR		
Parameter <stat>	See Test command										
Response	If PDU mode (+CMGF=0) and command are successful: +CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu>[<CR><LF> +CMGL:<index>,<stat>,[<alpha>],<length><CR><LF><pdu><CR><LF>[...]]										
Parameter <pdu>	The PDU begins with the service-center address (according to GSM04.11), followed by the TPDU according to GSM03.40, in hexadecimal format										
	otherwise: +CMS ERROR										

2.3.9.5 AT+CMGR

AT+CMGR	Read in an SMS Revision according to GSM 07.05 Version 4.7.0												
Test command AT+CMGR=?	Response OK												
Write command AT+CMGR=<index>	<table border="1"> <tr> <td>Parameter <index></td> <td>Index of message in selected memory <mem1></td> </tr> <tr> <td>Response</td> <td>If PDU mode (+CMGF=0) and command are successful: +CMGR: <stat>,,<length><CR><LF><pdu></td> </tr> <tr> <td>Parameter <pdu></td> <td>See AT+CMGL</td> </tr> <tr> <td><stat></td> <td>See AT+CMGL</td> </tr> <tr> <td><length></td> <td>See AT+CMGL</td> </tr> <tr> <td></td> <td>otherwise: +CMS ERROR</td> </tr> </table>	Parameter <index>	Index of message in selected memory <mem1>	Response	If PDU mode (+CMGF=0) and command are successful: +CMGR: <stat>,,<length><CR><LF><pdu>	Parameter <pdu>	See AT+CMGL	<stat>	See AT+CMGL	<length>	See AT+CMGL		otherwise: +CMS ERROR
Parameter <index>	Index of message in selected memory <mem1>												
Response	If PDU mode (+CMGF=0) and command are successful: +CMGR: <stat>,,<length><CR><LF><pdu>												
Parameter <pdu>	See AT+CMGL												
<stat>	See AT+CMGL												
<length>	See AT+CMGL												
	otherwise: +CMS ERROR												

2.3.9.6 AT+CMGS

AT+CMGS		Send an SMS																											
Test command AT+CMGS=?	Response OK																												
Write command If PDU mode (+CMGF=0) AT+CMGS=<length><CR> PDU is given: <ctrl-Z/ESC>	<table border="0"> <tr> <td>Parameter</td> <td></td> <td></td> </tr> <tr> <td><length></td> <td>Length of PDU</td> <td></td> </tr> <tr> <td><pdu></td> <td>See AT+CMGL command</td> <td></td> </tr> <tr> <td><mr></td> <td>Message reference</td> <td></td> </tr> <tr> <td>Response</td> <td colspan="2"></td> </tr> <tr> <td></td> <td>If sending is successful:</td> <td></td> </tr> <tr> <td></td> <td>+CMGS: <mr></td> <td></td> </tr> <tr> <td></td> <td>If sending is not successful:</td> <td></td> </tr> <tr> <td></td> <td>+CMS ERROR</td> <td></td> </tr> </table>		Parameter			<length>	Length of PDU		<pdu>	See AT+CMGL command		<mr>	Message reference		Response				If sending is successful:			+CMGS: <mr>			If sending is not successful:			+CMS ERROR	
Parameter																													
<length>	Length of PDU																												
<pdu>	See AT+CMGL command																												
<mr>	Message reference																												
Response																													
	If sending is successful:																												
	+CMGS: <mr>																												
	If sending is not successful:																												
	+CMS ERROR																												

2.3.9.7 AT+CMGW

AT+CMGW		Write an SMS to the SMS memory																								
Test command AT+CMGW=?	Response OK																									
Write command If PDU mode (+CMGF=0) AT+CMGW=<length>[,<stat>]<CR> PDU is given: <ctrl-Z/ESC>	<table border="0"> <tr> <td>Parameter</td> <td></td> <td></td> </tr> <tr> <td><length></td> <td>Length of PDU</td> <td></td> </tr> <tr> <td><stat></td> <td>See AT+CMGL command</td> <td></td> </tr> <tr> <td><pdu></td> <td>See AT+CMGL command</td> <td></td> </tr> <tr> <td><index></td> <td>Index of message in selected memory <mem1></td> <td></td> </tr> <tr> <td>Response</td> <td colspan="2"></td> </tr> <tr> <td></td> <td>+CMGW: <index></td> <td></td> </tr> <tr> <td></td> <td>+CMS ERROR</td> <td></td> </tr> </table>		Parameter			<length>	Length of PDU		<stat>	See AT+CMGL command		<pdu>	See AT+CMGL command		<index>	Index of message in selected memory <mem1>		Response				+CMGW: <index>			+CMS ERROR	
Parameter																										
<length>	Length of PDU																									
<stat>	See AT+CMGL command																									
<pdu>	See AT+CMGL command																									
<index>	Index of message in selected memory <mem1>																									
Response																										
	+CMGW: <index>																									
	+CMS ERROR																									

2.3.9.8 AT+CMMS

AT+CMMS	More (Short) Message to Send
Test command AT+CMMS=?	Response +CMGF: (list of supported <mode>s)
	Parameter <mode>
	0 Disable
	1 Keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closesTA switches <n> to 0
	2 keep link enabled until time between last send messages command response and next send command exceeds 5 seconds then ME closes link TA does NOT switch <n> to 0
Read command AT+CMMS?	Response +CMMS: <mode> Parameter <mode> See Test Command
Write command AT+CMMS=[<mode>]	Parameter <mode> Response OK/ERROR

2.3.9.9 AT+CMSS

AT+CMSS	Send an SMS from the SMS memory
Test command AT+CMSS=?	Response OK
Write command AT+CMSS=<index>[,<da>[,<toda>]]	Parameter <index> Index of message in selected memory <mem1> <da> Destination address in string format <toda> Format of destination address <mr> Message reference Response If sending is successful: +CMSS: <mr> If sending is not successful: +CMS ERROR

2.3.9.10 AT+CNMA

AT+CNMA	Acknowledgment of a short message directly output (without storing on the chip card) <i>(NOTE: This command is only available if Phase 2+ compatibility has been activated by means of AT+CSMS=1)</i>
Test command AT+CNMA=?	Response +CNMA: (list of supported <n>s) Parameter <n> 0 Mode of functioning analogously to GSM 07.05 text mode
Write command AT+CNMA=[<n>]	Parameter <n> See Test command

	Response OK/ERROR/+CMS ERROR
--	---------------------------------

2.3.9.11 AT+CNMI

AT+CNMI	Display new incoming SMS												
Notes	<p>TA selects the procedure how the receipt of new SMS messages from the network is indicated to the TE when TE is active, e.g. DTR signal is ON. If TE is inactive (e.g. DTR signal is OFF), message receiving should be done as specified in GSM 03.38.</p> <ol style="list-style-type: none"> If the DTR signal is not available or the state of the signal is ignored (V.25ter command &D0), reliable message transfer can be assured by using AT+CNMA acknowledgment procedure. The rules <mt>=2 and <mt>=3 for storing received SM are possible only if phase 2+ compatibility is activated with AT+CSMS=1 The parameter <ds>=1 is only available in phase 2+ 												
Test command AT+CNMI=?	<p>Response +CNMI: (list of supported <mode>s),(list of supported <mt>s),(list of supported <bm>s),(list of supported <ds>s),(list of supported <bfr>s)</p> <p>Parameter <mode></p> <table> <tr> <td>0</td> <td>Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.</td> </tr> <tr> <td>1</td> <td>Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE</td> </tr> </table> <p><mt></p> <p>Rules for storing received SMS depend on the relevant data coding method (refer to GSM 03.38), preferred memory storage AT+CPMS) setting and this value</p> <p>Note If the AT command interface is acting as the only display device, the ME must support storage of class 0 messages and messages in the message waiting indication group (discard message)</p> <table> <tr> <td>0</td> <td>No SMS-DELIVER indications are routed to the TE</td> </tr> <tr> <td>1</td> <td>If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code +CMTI: <mem>, <index></td> </tr> <tr> <td>2</td> <td>SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message), are routed directly to the TE using unsolicited result code: +CMT: <length><CR><LF<>pdu> (PDU mode enabled)</td> </tr> <tr> <td>3</td> <td>Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.</td> </tr> </table>	0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.	1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE	0	No SMS-DELIVER indications are routed to the TE	1	If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code +CMTI: <mem>, <index>	2	SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message), are routed directly to the TE using unsolicited result code: +CMT: <length><CR><LF<>pdu> (PDU mode enabled)	3	Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.
0	Buffer unsolicited result codes in the TA. If TA result code buffer is full, indications can be buffered in some other place or the oldest indications may be discarded and replaced with the new received indications.												
1	Discard indication and reject new received message unsolicited result codes when TA-TE link is reserved (e.g. in on-line data mode). Otherwise forward them directly to the TE												
0	No SMS-DELIVER indications are routed to the TE												
1	If SMS-DELIVER is stored in ME/TA, indication of the memory location is routed to the TE using unsolicited result code +CMTI: <mem>, <index>												
2	SMS-DELIVERs, except class 2 messages and messages in the message waiting indication group (store message), are routed directly to the TE using unsolicited result code: +CMT: <length><CR><LF<>pdu> (PDU mode enabled)												
3	Class 3 SMS-DELIVERs are routed directly to the TE using unsolicited result codes defined in <mt>=2. Messages of other data coding schemes result in indication as defined in <mt>=1.												
Cont. next page													

<p>Cont.</p>	<table border="1"> <tr> <td data-bbox="427 219 563 315"><bm></td> <td data-bbox="571 219 1388 315"> <p>Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38), the setting of Select CBM Types AT+CSCB) and these values:</p> </td> </tr> <tr> <td data-bbox="427 327 563 349">0</td> <td data-bbox="571 327 1388 349"> <p>No CBM indications are routed to the TE.</p> </td> </tr> <tr> <td data-bbox="427 353 563 443">2</td> <td data-bbox="571 353 1388 443"> <p>New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled)</p> </td> </tr> <tr> <td data-bbox="427 448 563 504">3</td> <td data-bbox="571 448 1388 504"> <p>Class 3 CBMs are routed directly to TE using unsolicited result codes as defined in <bm>=2</p> </td> </tr> <tr> <td data-bbox="427 510 563 533"><ds></td> <td data-bbox="571 510 1388 533"> <p>0 No SMS-STATUS-REPORTs are routed to the TE</p> </td> </tr> <tr> <td data-bbox="427 537 563 627">1</td> <td data-bbox="571 537 1388 627"> <p>SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled)</p> </td> </tr> <tr> <td data-bbox="427 631 563 757">2</td> <td data-bbox="571 631 1388 757"> <p>If SMS-STATUS-REPORT is routed into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem>,<index></p> </td> </tr> <tr> <td data-bbox="427 761 563 817"><bfr></td> <td data-bbox="571 761 1388 817"> <p>1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1 . . . 3 is entered.</p> </td> </tr> <tr> <td data-bbox="427 824 563 857"><mem></td> <td data-bbox="571 824 1388 857"> <p>See AT+CPMS command</p> </td> </tr> <tr> <td data-bbox="427 862 563 884"><index></td> <td data-bbox="571 862 1388 884"> <p>Index of the record on the chip card</p> </td> </tr> <tr> <td data-bbox="427 891 563 925"><length></td> <td data-bbox="571 891 1388 925"> <p>Length of <pdu></p> </td> </tr> <tr> <td data-bbox="427 929 563 963"><pdu></td> <td data-bbox="571 929 1388 963"> <p>See AT+CMGL command</p> </td> </tr> </table>	<bm>	<p>Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38), the setting of Select CBM Types AT+CSCB) and these values:</p>	0	<p>No CBM indications are routed to the TE.</p>	2	<p>New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled)</p>	3	<p>Class 3 CBMs are routed directly to TE using unsolicited result codes as defined in <bm>=2</p>	<ds>	<p>0 No SMS-STATUS-REPORTs are routed to the TE</p>	1	<p>SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled)</p>	2	<p>If SMS-STATUS-REPORT is routed into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem>,<index></p>	<bfr>	<p>1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1 . . . 3 is entered.</p>	<mem>	<p>See AT+CPMS command</p>	<index>	<p>Index of the record on the chip card</p>	<length>	<p>Length of <pdu></p>	<pdu>	<p>See AT+CMGL command</p>
<bm>	<p>Rules for storing received CBMs depend on the relevant data coding method (refer to GSM 03.38), the setting of Select CBM Types AT+CSCB) and these values:</p>																								
0	<p>No CBM indications are routed to the TE.</p>																								
2	<p>New CBMs are routed directly to the TE using unsolicited result code: +CBM: <length><CR><LF><pdu> (PDU mode enabled)</p>																								
3	<p>Class 3 CBMs are routed directly to TE using unsolicited result codes as defined in <bm>=2</p>																								
<ds>	<p>0 No SMS-STATUS-REPORTs are routed to the TE</p>																								
1	<p>SMS-STATUS-REPORTs are routed to the TE using unsolicited result code: +CDS: <length><CR><LF><pdu> (PDU mode enabled)</p>																								
2	<p>If SMS-STATUS-REPORT is routed into ME/TA, indication of the memory location is routed to the TE using unsolicited result code: +CDSI: <mem>,<index></p>																								
<bfr>	<p>1 TA buffer of unsolicited result codes defined within this command is cleared when <mode> 1 . . . 3 is entered.</p>																								
<mem>	<p>See AT+CPMS command</p>																								
<index>	<p>Index of the record on the chip card</p>																								
<length>	<p>Length of <pdu></p>																								
<pdu>	<p>See AT+CMGL command</p>																								
<p>Read command AT+CNMI?</p>	<p>Response +CNMI: <mode> , <mt> , <bm> , <ds> , <bfr></p> <p>Parameter</p> <table border="1"> <tr> <td data-bbox="427 1081 563 1104"><mode></td> <td data-bbox="571 1081 1388 1104">See Test command</td> </tr> <tr> <td data-bbox="427 1108 563 1131"><mt></td> <td data-bbox="571 1108 1388 1131">See Test command</td> </tr> <tr> <td data-bbox="427 1135 563 1158"><bm></td> <td data-bbox="571 1135 1388 1158">See Test command</td> </tr> <tr> <td data-bbox="427 1162 563 1184"><ds></td> <td data-bbox="571 1162 1388 1184">See Test command</td> </tr> <tr> <td data-bbox="427 1189 563 1211"><bfr></td> <td data-bbox="571 1189 1388 1211">See Test command</td> </tr> </table>	<mode>	See Test command	<mt>	See Test command	<bm>	See Test command	<ds>	See Test command	<bfr>	See Test command														
<mode>	See Test command																								
<mt>	See Test command																								
<bm>	See Test command																								
<ds>	See Test command																								
<bfr>	See Test command																								
<p>Write command AT+CNMI=[<mode>[,<mt>[,<bm>[,<ds>[,<bfr>]]]]]</p>	<p>Parameter</p> <table border="1"> <tr> <td data-bbox="427 1339 563 1361"><mode></td> <td data-bbox="571 1339 1388 1361">See Test command</td> </tr> <tr> <td data-bbox="427 1366 563 1388"><mt></td> <td data-bbox="571 1366 1388 1388">See Test command</td> </tr> <tr> <td data-bbox="427 1393 563 1415"><bm></td> <td data-bbox="571 1393 1388 1415">See Test command</td> </tr> <tr> <td data-bbox="427 1420 563 1442"><ds></td> <td data-bbox="571 1420 1388 1442">See Test command</td> </tr> <tr> <td data-bbox="427 1447 563 1469"><bfr></td> <td data-bbox="571 1447 1388 1469">See Test command</td> </tr> </table> <p>Response OK/ERROR/+CMS ERROR</p>	<mode>	See Test command	<mt>	See Test command	<bm>	See Test command	<ds>	See Test command	<bfr>	See Test command														
<mode>	See Test command																								
<mt>	See Test command																								
<bm>	See Test command																								
<ds>	See Test command																								
<bfr>	See Test command																								
	<p>Unsolicited message +CMTI: <mem> , <index> +CMT: <length><CR><LF><pdu> +CDS: <length><CR><LF><pdu> +CDSI: <mem> , <index></p> <p>During each SMS or Cell Broadcast Message the Ring Line will remain for one second logically 0.</p>																								

2.3.9.12 AT+CPMS

AT+CPMS	Preferred SMS message storage Revision according to GSM 07.05 Version 4.7.0
Test command AT+CPMS=?	<p>Response +CPMS: (list of supported <mem1>s),(list of supported <mem2>s) ,(list of supported <mem3>s)</p> <p>Parameter <mem1> Memory from which messages are read and deleted</p> <p>SM SIM message storage ME Mobile Equipment message storage MT Any of the storages associated with ME</p> <p><mem2> Messages will be written and sent to this memory storage: SM SIM message storage ME Mobile Equipment message storage MT Any of the storages associated with ME</p> <p><mem3> Memory in which received messages are stored, if routing to TE is not set (see AT+CNMI command with parameter <mt>=2) MT Any of the storages associated with ME</p>
Read command AT+CPMS?	<p>Response +CPMS: <mem1> , <used1> , <total1> , <mem2> , <used2> , <total2> , <mem3> , <used3> , <total3></p> <p>Parameter <memx> Memory from which messages are read and deleted</p> <p><usedx> Number of messages currently in <memx></p> <p><totalx> Total number of messages that can be stored in <memx></p> <p>></p>
Write command AT+CPMS= <mem1>[,<mem2>[,<mem3>]]	<p>Parameter <mem1> See Test command</p> <p><mem2> See Test command</p> <p><mem3> See Test command</p> <p>+CPMS: <used1> , <total1> , <used2> , <total2> , <used3> , <total3></p> <p>OK/ERROR/+CMS ERROR</p>
Notes	<p>1) The Mobil Equipment storage "ME" has space for 25 short messages</p> <p>2) The storage "MT" is an addition of the storages "ME" and "SM". If "MT" is chosen as <mem1> or <mem2> the first indices to read from, write to or delete from is the "ME" storage. The storages with index 26 or higher are associated with the "SM" storage.</p> <p>3) Incoming short messages with message class 1 or 2 (see GSM 03.38) will be stored in the "ME" or "SM" storage only. Therefore, the AT^SMGO:2 indication (see AT^SMGO command) can occur without a preceding AT^SMGO:1 indication.</p>

2.3.9.13 AT+CSCA

AT+CSCA	Address of the SMS service center
Test command AT+CSCA=?	Response OK
Read command AT+CSCA?	Response +CSCA: <sca> , <tosca> Parameter <sca> Service-center address in string format <tosca> Service-center address format Parameter <sca> Service-center address in string format
Write command AT+CSCA= <sca>[,<tosca>]	<tosca> Service-center address format Response OK / ERROR

2.3.9.14 AT+CSCB

AT+CSCB	Select cell broadcast messages
Test command AT+CSCB=?	Response +CSCB: (list of supported <mode>s) Parameter <mode> 0 Accepts messages that are defined in <mids> and <dcss> 1 Does not accept messages that are defined in <mids> and <dcss>
Read command AT+CSCB?	Response +CSCB: <mode> , <mids> , <dcss> Parameter <mode> See Test command <mids> String type; combinations of CBM message IDs <dcss> String type; combinations of CBM data coding schemes
Write command AT+CSCB=[<mode>[,<mids>[,<dcss>]]]	

2.3.9.15 AT+CSMS

AT+CSMS	Selection of message service Revision according to GSM 07.05 Version 5.0.0		
Test command AT+CSMS=?	Response +CSMS: (list of supported <service>s)	Parameter <service>	
		0	GSM 3.40 and 3.41
		1	GSM 3.40 and 3.41 and compatibility of the AT command syntax for phase 2+
	NOTE	Deactivating phase 2+ compatibility is only possible if the direct output of short messages AT+CNMI=1,2 or AT+CNMI=1,3 is not activated. If necessary, the latter should be deactivated first	
Read command AT+CSMS?	Response +CSMS: <service>, <mt>, <mo>, <bm>	Parameter <service>	
		0	GSM 3.40 and 3.41
	<mt>		Mobile terminated messages
		1	Type supported
	<mo>		Mobile originated messages
		1	Type supported
	<bm>		Broadcast type messages
		1	Type not supported
Write command AT+CSMS= <service>			
	Parameter <service>	0	GSM 3.40 and 3.41
	Response +CSMS: <mt>,<mo>,<bm> OK/ERROR/+CME ERROR		

2.3.10 Modem commands

This section provides the descriptions of modem commands.

2.3.10.1 AT+CBST

AT+CBST	Select bearer service type																		
Test command AT+ CBST=?	Selects the bearer service <name> with data rate <speed> and the connection element <ce> to be used when data calls are originated. Response +CBST: (list of supported <speed>s), (list of supported <name>s), (list of supported <ce>s) OK Parameter <speed> <table style="margin-left: 20px;"> <tr><td>0</td><td>auto bauding</td></tr> <tr><td>4</td><td>2400 bps (V.22bis)</td></tr> <tr><td>6</td><td>4800 bps (V.32)</td></tr> <tr><td><u>7</u></td><td>9600 bps (V.32)</td></tr> <tr><td>14</td><td>14400 bps (V.34)</td></tr> <tr><td>68</td><td>2400 bps (V.110)</td></tr> <tr><td>70</td><td>4800 bps (V.110)</td></tr> <tr><td>71</td><td>9600 bps (V.110)</td></tr> <tr><td>75</td><td>14400 bps (V.110)</td></tr> </table> <hr/> <name> <u>0</u> asynchronous modem <hr/> <ce> 1 non-transparent	0	auto bauding	4	2400 bps (V.22bis)	6	4800 bps (V.32)	<u>7</u>	9600 bps (V.32)	14	14400 bps (V.34)	68	2400 bps (V.110)	70	4800 bps (V.110)	71	9600 bps (V.110)	75	14400 bps (V.110)
0	auto bauding																		
4	2400 bps (V.22bis)																		
6	4800 bps (V.32)																		
<u>7</u>	9600 bps (V.32)																		
14	14400 bps (V.34)																		
68	2400 bps (V.110)																		
70	4800 bps (V.110)																		
71	9600 bps (V.110)																		
75	14400 bps (V.110)																		
Read command AT+ CBST?	Response +CBST: <speed> , <name> , <ce> OK																		
Write command AT+ CBST=<speed>[,0,1]																			
	Parameter <speed> See Test command Response OK																		

2.3.10.2 AT+CRLP

AT+CRLP	Select radio link protocol parameter for originating non-transparent data call
Test command AT+ CRLP =?	<p>Response</p> <p>This modem command sets radio link protocol (RLP) parameters used when non-transparent data calls are initiated. This command returns supported values as a compound value.</p> <p>+CRLP: (list of supported <iws>s), (list of supported <mws>s), (list of supported <T1>s), (list of supported <N2>s) <verx></p> <p>Parameter</p> <p><iws> 0-<u>61</u> Interworking window size (IWF to MS) (Default: 61)</p> <p><mws> 0-<u>61</u> Mobile window size (MS to IWF) (Default: 61)</p> <p><T1> 48-255 Acknowledgement timer (T1 in 10 ms units) (Default: 78)</p> <p><N2> 1-255 Re-transmission attempts N2 (Default: 6)</p> <p><verx></p> <p> 0 RLP version supported: single-link basic version</p>
Read command AT+ CRLP?	<p>Response</p> <p>The command returns current settings for the supported RLP version 0.</p> <p>+CRLP: <iws>, <mws>, <T1>, <N2> [, <verx>]</p> <p>OK</p> <p>Parameter</p> <p><iws> See Test command</p> <p><mws> See Test command</p> <p><T1> See Test command</p> <p><N2> See Test command</p> <p><verx> See Test command</p>
Write command AT+CRLP= [<iws>[,<mws>[,<T1> [,<N2>[,<verx>]]]]]	<p>Parameter</p> <p><iws> See Test command</p> <p><mws> See Test command</p> <p><T1> See Test command</p> <p><N2> See Test command</p> <p><verx> See Test command</p> <p>Response</p>

2.3.11 Fax commands

The following commands can be used for FAX transmission. If the ME is acting as a FAX modem to a PC-based application, it is necessary to select the appropriate service class (FAX class) provided by the ME. The ME reports its FAX service class capabilities, both the current setting and the range of services available, via the AT+FCLASS command.

Note: According to EIA/TIA-592-A, the Error Correcting Mode (ECM) should not be used when sending FAXes over GSM.

+FCLASS parameter	Service Class	Reference, Standard
-------------------	---------------	---------------------

0		e.g. TIA/EIA-602 or ITU V.25ter
1	Service Class 1	EIA/TIA-578-A
2	Vendor-specific	this document and EIA PN-2388 (draft)

The following FAX commands are dummy commands. Invoking these commands will not cause ERROR result codes, but these commands have no functionality either:

Command	Meaning
AT+FAA	Auto Answer mode
AT+FECM	Error Correction Mode control
AT+FLNFC	Page Length format conversion
AT+FLPL	Indicate document available for polling
AT+FMINSP	Minimum Phase C speed
AT+FRBC	Phase C data receive byte count
AT+FREL	Phase C received EOL alignment
AT+FSPL	Enable polling
AT+FTBC	Phase C data transmit byte count
AT+FWDFC	Page width format conversion

Table 2-8: List of dummy FAX commands

2.3.11.1 AT+FBADLIN

AT+ FBADLIN	Define or read number of bad lines
	<p>Used for FAX class 2 only</p> <p>This command defines the “Copy Quality OK” threshold. If pixel count errors were detected in normal resolution (98 dpi) mode in as many consecutive lines as defined in <badlin>, the copy quality is unacceptable.</p> <p>If pixel count errors were detected in fine resolution (196 dpi) mode in twice as many consecutive lines as defined in <badlin>, the copy quality is unacceptable.</p> <p>“Copy Quality Not OK” occurs if either the error percentage is too high or if too many consecutive lines contain errors</p>
Read command AT+ FBADLIN?	<p>Response <badlin> OK</p> <p>Parameter <badlin></p> <p style="text-align: right;">See Write command</p>
Write command AT+FBADLIN=<badlin>	<p>Parameter 0 . . . 255</p> <p><badlin></p> <p>0 indicates that error checking is present or disabled (Default value: 10)</p>

2.3.11.2 AT+FBADMUL

AT+ FBADMUL	Define, read or test number of bad lines
	<p>Used for FAX class 2 only</p> <p>This command defines the "Copy-Quality-OK" multiplier. The number of lines received with a bad pixel count is multiplied by this number. If the result exceeds the total number of lines on the page the error rate is considered too high. A threshold multiplier value of 20 corresponds to a 5% error rate.</p>
Read command AT+ FBADMUL?	<p>Response</p> <p>Parameter <n> OK</p>
Write command AT+ FBADMUL =<n>	<p>Parameter 0 . . . 255 0 indicates that error checking is present or disabled (Default value: 20)</p> <p><n></p>

2.3.11.3 AT+FBOR

AT+ FBOR	Query the bit order for receive mode
	<p>Used for FAX class 2 only</p> <p>Query the bit order for receive-mode. The mode is set by the ME dependent on the selected Service Class.</p>
Test command AT+FBOR=?	<p>Response +FBOR: (list of supported bit order modes <bor>s) OK</p> <p>Parameter <bor></p> <p>0 direct bit order for both Phase C and Phase B/D data</p> <p>1 Reversed bit order for Phase C data, direct bit order for Phase B/D data</p>
Read command AT+FBOR?	<p>Response</p> <p>Parameter <bor> OK</p>
Write command AT+FBOR=<bor>	<p>Response OK / ERROR</p>
	<p>Parameter <bor> OK</p>

2.3.11.4 AT+FCIG

AT+FCIG	Query or set the Local polling id
Test command AT+FCIG=?	<p>Used for FAX class 2 only</p> <p>Response +FCIG: (max. length of Local Polling ID string) (range of supported ASCII character values) OK</p> <p>Parameter <id> Local Polling ID string, max. length and possible content as reported by test command. Default value is empty string ("").</p> <p>See also "AT+FLID" command</p>
Read command AT+FCIG?	<p>Response <id> OK</p> <p>Parameter <id> See Test command</p>
Write command AT+FCIG=<id>	<p>Parameter <id> See Test command</p>

2.3.11.5 AT+FCQ

AT+FCQ	Control Copy Quality
Test command AT+FCQ=?	<p>This command controls Copy Quality checking when receiving a fax</p> <p>Used for FAX class 2 only</p> <p>Response +FCQ: (list of supported copy quality checking <cq>s) OK</p> <p>Parameter <cq></p> <p>0 No checking of copy quality performed. The ME will generate Copy Quality OK (MCF) responses to complete pages</p> <p>1 ME can check 1-D phase data. The connected application must check copy quality for 2-D phase C data</p>
Read command AT+FCQ?	<p>Response <cq> OK</p> <p>Parameter <cq> See Test command</p>
Write command AT+FCQ=<id>	<p>Parameter <cq> See Test command</p>

2.3.11.6 AT+FCLASS

AT+FCLASS	Select, read or test FAX service class
Test command AT+FCLASS=?	Response +FCLASS: (list of supported <n>s) OK Parameter <n> 0 data (e.g. EIA/TIA-602 or ITU V.25ter) 1 Fax class 1 (EIA/TIA-578-A, Service Class 1) 2 Vendor-specific (Fax class 2 (EIA/TIA SP-2388, an early draft version of EIA/TIA-592-A – Service class 2.1))
Read command AT+FCLASS?	Response <n> OK Parameter <n> See Test command
Write command AT+FCLASS=<n>	Parameter <n> See Test command

2.3.11.7 AT+FCR

AT+ FCR	Capability to receive
Write command AT+FCR=<cr>	Response OK Parameter <cr> 0 ME cannot receive message data. This value can be used when the application has insufficient storage. The ME can send and can be polled for a file.
	1 ME can receive message data. Used for FAX class 2 only

2.3.11.8 AT+FDCC

AT+FDCC	Select service for MO SMS messages																
<p>Test command AT+FDCC=?</p>	<p>This command allows the connected application to sense and constrain the capabilities of the facsimile DCE (=ME), from the choices defined in ITU T.30 Table 2.</p> <p>Used for Faxclass 2 only</p> <p>Response +FDCC: (list of <VR>s), (list of
s), (list of <WD>s), (list of <LN>s), (list of <DF>s), (list of <EC>s), (list of <BF>s), (list of <ST>s)</p> <p>Parameter</p> <table border="0"> <tr><td>VR</td><td>Vertical Resolution</td></tr> <tr><td>BR</td><td>Bit rate</td></tr> <tr><td>WD</td><td>Page Width</td></tr> <tr><td>LN</td><td>Page length</td></tr> <tr><td>DF</td><td>Data compression Format</td></tr> <tr><td>EC</td><td>Error Correction mode</td></tr> <tr><td>BF</td><td>Binary File transfer mode</td></tr> <tr><td>ST</td><td>Scan Time / line</td></tr> </table> <p>Note: For further information see AT+FDIS</p>	VR	Vertical Resolution	BR	Bit rate	WD	Page Width	LN	Page length	DF	Data compression Format	EC	Error Correction mode	BF	Binary File transfer mode	ST	Scan Time / line
VR	Vertical Resolution																
BR	Bit rate																
WD	Page Width																
LN	Page length																
DF	Data compression Format																
EC	Error Correction mode																
BF	Binary File transfer mode																
ST	Scan Time / line																
<p>Read command AT+FDCC?</p>	<p>Response <dcc> OK</p> <p>Parameter</p> <table border="0"> <tr><td>VR</td><td>See Test command</td></tr> <tr><td>BR</td><td>See Test command</td></tr> <tr><td>WD</td><td>See Test command</td></tr> <tr><td>LN</td><td>See Test command</td></tr> <tr><td>DF</td><td>See Test command</td></tr> <tr><td>EC</td><td>See Test command</td></tr> <tr><td>BF</td><td>See Test command</td></tr> <tr><td>ST</td><td>See Test command</td></tr> </table>	VR	See Test command	BR	See Test command	WD	See Test command	LN	See Test command	DF	See Test command	EC	See Test command	BF	See Test command	ST	See Test command
VR	See Test command																
BR	See Test command																
WD	See Test command																
LN	See Test command																
DF	See Test command																
EC	See Test command																
BF	See Test command																
ST	See Test command																
<p>Write command AT+FDCC=<VR>,
,<WD>,<LN>,<DF>,<EC>,<BF>,<ST></p>	<p>Response +FDCC: (list of <VR>s), (list of
s), (list of <WD>s), (list of <LN>s), (list of <DF>s), (list of <EC>s), (list of <BF>s), (list of <ST>s)</p> <p>Parameter</p> <table border="0"> <tr><td>VR</td><td>See Test command</td></tr> <tr><td>BR</td><td>See Test command</td></tr> <tr><td>WD</td><td>See Test command</td></tr> <tr><td>LN</td><td>See Test command</td></tr> <tr><td>DF</td><td>See Test command</td></tr> <tr><td>EC</td><td>See Test command</td></tr> <tr><td>BF</td><td>See Test command</td></tr> <tr><td>ST</td><td>See Test command</td></tr> </table>	VR	See Test command	BR	See Test command	WD	See Test command	LN	See Test command	DF	See Test command	EC	See Test command	BF	See Test command	ST	See Test command
VR	See Test command																
BR	See Test command																
WD	See Test command																
LN	See Test command																
DF	See Test command																
EC	See Test command																
BF	See Test command																
ST	See Test command																

2.3.11.9 AT+FDFFC

AT+FDFFC	Data Compression Format Conversion
	<p>Used for FAX class 2 only</p> <p>This parameter determines whether there is a mismatch in the ME response between the data format negotiated for the facsimile session (reported by the +FDCS:DF subparameter) and the Phase C data desired by the controlling application, indicated by the optional +FDT:DF subparameter, or the +FDIS=DF subparameter for the +FDR operation.</p>
<p>Test command AT+FDFFC=?</p>	<p>Response +FDFFC: (list of supported <df>s) OK Parameter <df> 0 mismatch checking is always disabled. The controlling application has to check the +FDCS: DF subparameter and transfer matching data</p>
<p>Read command AT+FDFFC?</p>	<p>Response <df> OK Parameter <df> See Test Command</p>
<p>Write command AT+FDFFC=<df></p>	<p>Response +FDFFC: (list of supported <df>s) OK Parameter <df> See Test Command</p>

2.3.11.10 AT+FDIS

AT+FDIS	Query or set session parameters																																																																												
	<p>Used for FAX class 2 only</p> <p>This command allows the controlling application to set and constrain the capabilities used for the current session. +FDIS is used to generate DIS or DTC messages directly. +FDIS (and received DIS messages) is also used to generate DCS messages.</p>																																																																												
<p>Test command AT+FDIS=?</p>	<p>Response +FDIS: (list of <VR>s), (list of
s), (list of <WD>s), (list of <LN>s), (list of <DF>s), (list of <EC>s), (list of <BF>s), (list of <ST>s)</p> <p>Parameter</p> <table border="0"> <tr> <td style="vertical-align: top;">VR</td> <td>Vertical Resolution</td> </tr> <tr> <td>0</td> <td>normal, 98 lpi</td> </tr> <tr> <td>1</td> <td>fine, 196 lpi</td> </tr> <tr> <td style="vertical-align: top;">BR</td> <td>Bit rate</td> </tr> <tr> <td>0</td> <td>2400 bit/s, V.27ter</td> </tr> <tr> <td>1</td> <td>4800 bit/s, V.27ter</td> </tr> <tr> <td>2</td> <td>7200 bit/s, V.29</td> </tr> <tr> <td>3</td> <td>9600 bit/s, V.29</td> </tr> <tr> <td style="vertical-align: top;">WD</td> <td>Page Width</td> </tr> <tr> <td>0[*])</td> <td>1728 pixels in 215mm</td> </tr> <tr> <td>1</td> <td>2048 pixels in 255 mm</td> </tr> <tr> <td>2</td> <td>2432 pixels in 303 mm</td> </tr> <tr> <td>3</td> <td>1216 pixels in 151 mm</td> </tr> <tr> <td>4</td> <td>864 pixels in 107 mm</td> </tr> <tr> <td style="vertical-align: top;">LN</td> <td>Page length</td> </tr> <tr> <td>0</td> <td>A4, 297mm</td> </tr> <tr> <td>1</td> <td>B4, 364mm</td> </tr> <tr> <td>2</td> <td>unlimited length</td> </tr> <tr> <td style="vertical-align: top;">DF</td> <td>Data compression Format</td> </tr> <tr> <td>0[*])</td> <td>1-D modified Huffman</td> </tr> <tr> <td>1</td> <td>2-D modified read</td> </tr> <tr> <td>2</td> <td>2-D uncompressed mode</td> </tr> <tr> <td style="vertical-align: top;">EC</td> <td>Error Correction mode</td> </tr> <tr> <td>0[*])</td> <td>disable ECM</td> </tr> <tr> <td>1</td> <td>enable ECM, 64 bytes/frame</td> </tr> <tr> <td>2</td> <td>enable ECM, 256 bytes/frame</td> </tr> <tr> <td style="vertical-align: top;">BF</td> <td>Binary Fole transfer mode</td> </tr> <tr> <td>0[*])</td> <td>disable BFT</td> </tr> <tr> <td>1</td> <td>enable BFT</td> </tr> <tr> <td style="vertical-align: top;">ST</td> <td>Scan Time / line</td> </tr> <tr> <td>0[*])</td> <td>0 ms (at VR= normal)</td> </tr> <tr> <td>1</td> <td>5 ms</td> </tr> <tr> <td>2</td> <td>10 ms</td> </tr> <tr> <td>3</td> <td>10 ms</td> </tr> <tr> <td>4</td> <td>20 ms</td> </tr> <tr> <td>5</td> <td>20 ms</td> </tr> <tr> <td>6</td> <td>40 ms</td> </tr> <tr> <td>7</td> <td>40 ms</td> </tr> </table>	VR	Vertical Resolution	0	normal, 98 lpi	1	fine, 196 lpi	BR	Bit rate	0	2400 bit/s, V.27ter	1	4800 bit/s, V.27ter	2	7200 bit/s, V.29	3	9600 bit/s, V.29	WD	Page Width	0 [*])	1728 pixels in 215mm	1	2048 pixels in 255 mm	2	2432 pixels in 303 mm	3	1216 pixels in 151 mm	4	864 pixels in 107 mm	LN	Page length	0	A4, 297mm	1	B4, 364mm	2	unlimited length	DF	Data compression Format	0 [*])	1-D modified Huffman	1	2-D modified read	2	2-D uncompressed mode	EC	Error Correction mode	0 [*])	disable ECM	1	enable ECM, 64 bytes/frame	2	enable ECM, 256 bytes/frame	BF	Binary Fole transfer mode	0 [*])	disable BFT	1	enable BFT	ST	Scan Time / line	0 [*])	0 ms (at VR= normal)	1	5 ms	2	10 ms	3	10 ms	4	20 ms	5	20 ms	6	40 ms	7	40 ms
VR	Vertical Resolution																																																																												
0	normal, 98 lpi																																																																												
1	fine, 196 lpi																																																																												
BR	Bit rate																																																																												
0	2400 bit/s, V.27ter																																																																												
1	4800 bit/s, V.27ter																																																																												
2	7200 bit/s, V.29																																																																												
3	9600 bit/s, V.29																																																																												
WD	Page Width																																																																												
0 [*])	1728 pixels in 215mm																																																																												
1	2048 pixels in 255 mm																																																																												
2	2432 pixels in 303 mm																																																																												
3	1216 pixels in 151 mm																																																																												
4	864 pixels in 107 mm																																																																												
LN	Page length																																																																												
0	A4, 297mm																																																																												
1	B4, 364mm																																																																												
2	unlimited length																																																																												
DF	Data compression Format																																																																												
0 [*])	1-D modified Huffman																																																																												
1	2-D modified read																																																																												
2	2-D uncompressed mode																																																																												
EC	Error Correction mode																																																																												
0 [*])	disable ECM																																																																												
1	enable ECM, 64 bytes/frame																																																																												
2	enable ECM, 256 bytes/frame																																																																												
BF	Binary Fole transfer mode																																																																												
0 [*])	disable BFT																																																																												
1	enable BFT																																																																												
ST	Scan Time / line																																																																												
0 [*])	0 ms (at VR= normal)																																																																												
1	5 ms																																																																												
2	10 ms																																																																												
3	10 ms																																																																												
4	20 ms																																																																												
5	20 ms																																																																												
6	40 ms																																																																												
7	40 ms																																																																												
Cont. Next page																																																																													

Cont.	*) Note: Only the default value needs to be implemented. Use test command to check which parameter values are in fact possible!
Read command AT+FDIS?	Response <cdec> OK Parameter VR See Test command BR See Test command WD See Test command LN See Test command DF See Test command EC See Test command BF See Test command ST See Test command
Write command AT+FDIS=<VR>, ,<WD>,<LN>,<DF>,<EC>,<BF>,<ST>	Response +FDIS: (list of <VR>s), (list of s), (list of <WD>s), (list of <LN>s), (list of <DF>s), (list of <EC>s), (list of <BF>s), (list of <ST>s) Parameter VR See Test command BR See Test command WD See Test command LN See Test command DF See Test command EC See Test command BF See Test command ST See Test command

2.3.11.11 AT+FDR

AT+FDR	Begin or continue phase C data reception
Execute command AT+FDR	Used for FAX class 2 only This command initiates transition to Phase C data reception. Response CONNECT/OK/ERROR

2.3.11.12 AT+FDT

AT+FDT	Data Transmission																																				
	<p>Used for FAX class 2 only</p> <p>This command requests the ME to transmit a Phase C page. When the ME is ready to accept Phase C data, it issues the negotiation responses and the CONNECT result code to the application.</p> <p>In Phase B, this command releases the ME to proceed with negotiation, and releases the DCS message to the remote station.</p> <p>In Phase C, this command resumes transmission after the end of a data stream transmitted before.</p>																																				
Execute command AT+FDT																																					
	<table border="0"> <tr> <td style="vertical-align: top;">Parameter <dt></td> <td style="vertical-align: top;">list of <DF>s, <VR>s, <WD>s, <LN>s</td> </tr> <tr> <td style="vertical-align: top;">DF</td> <td style="vertical-align: top;">Data compression Format</td> </tr> <tr> <td style="vertical-align: top;">0 *)</td> <td style="vertical-align: top;">1-D modified Huffman</td> </tr> <tr> <td style="vertical-align: top;">1</td> <td style="vertical-align: top;">2-D modified read</td> </tr> <tr> <td style="vertical-align: top;">2</td> <td style="vertical-align: top;">2-D uncompressed mode</td> </tr> <tr> <td style="vertical-align: top;">VR</td> <td style="vertical-align: top;">Vertical Resolution</td> </tr> <tr> <td style="vertical-align: top;">0</td> <td style="vertical-align: top;">normal, 98 lpi</td> </tr> <tr> <td style="vertical-align: top;">1</td> <td style="vertical-align: top;">fine, 196 lpi</td> </tr> <tr> <td style="vertical-align: top;">WD</td> <td style="vertical-align: top;">Page Width</td> </tr> <tr> <td style="vertical-align: top;">0 *)</td> <td style="vertical-align: top;">1728 pixels in 215mm</td> </tr> <tr> <td style="vertical-align: top;">1</td> <td style="vertical-align: top;">2048 pixels in 255 mm</td> </tr> <tr> <td style="vertical-align: top;">2</td> <td style="vertical-align: top;">2432 pixels in 303 mm</td> </tr> <tr> <td style="vertical-align: top;">3</td> <td style="vertical-align: top;">1216 pixels in 151 mm</td> </tr> <tr> <td style="vertical-align: top;">4</td> <td style="vertical-align: top;">864 pixels in 107 mm</td> </tr> <tr> <td style="vertical-align: top;">LN</td> <td style="vertical-align: top;">Page length</td> </tr> <tr> <td style="vertical-align: top;">0</td> <td style="vertical-align: top;">A4, 297mm</td> </tr> <tr> <td style="vertical-align: top;">1</td> <td style="vertical-align: top;">B4, 364mm</td> </tr> <tr> <td style="vertical-align: top;">2</td> <td style="vertical-align: top;">unlimited length</td> </tr> </table>	Parameter <dt>	list of <DF>s, <VR>s, <WD>s, <LN>s	DF	Data compression Format	0 *)	1-D modified Huffman	1	2-D modified read	2	2-D uncompressed mode	VR	Vertical Resolution	0	normal, 98 lpi	1	fine, 196 lpi	WD	Page Width	0 *)	1728 pixels in 215mm	1	2048 pixels in 255 mm	2	2432 pixels in 303 mm	3	1216 pixels in 151 mm	4	864 pixels in 107 mm	LN	Page length	0	A4, 297mm	1	B4, 364mm	2	unlimited length
Parameter <dt>	list of <DF>s, <VR>s, <WD>s, <LN>s																																				
DF	Data compression Format																																				
0 *)	1-D modified Huffman																																				
1	2-D modified read																																				
2	2-D uncompressed mode																																				
VR	Vertical Resolution																																				
0	normal, 98 lpi																																				
1	fine, 196 lpi																																				
WD	Page Width																																				
0 *)	1728 pixels in 215mm																																				
1	2048 pixels in 255 mm																																				
2	2432 pixels in 303 mm																																				
3	1216 pixels in 151 mm																																				
4	864 pixels in 107 mm																																				
LN	Page length																																				
0	A4, 297mm																																				
1	B4, 364mm																																				
2	unlimited length																																				
	Response CONNECT																																				

2.3.11.13 AT+FET

AT+FET	End a page or document												
	<p>Used for FAX class 2 only</p> <p>This command indicates that the current page or part thereof is complete. An ERROR response code results if this command is issued while the mode is on-hook.</p>												
Write command AT+FET=<ppm>	<table border="0"> <tr> <td style="vertical-align: top;">Parameter: <ppm></td> <td style="vertical-align: top;">Post Page Message Codes</td> </tr> <tr> <td style="vertical-align: top;">1</td> <td style="vertical-align: top;">another document next</td> </tr> <tr> <td style="vertical-align: top;">2</td> <td style="vertical-align: top;">no more pages or documents</td> </tr> <tr> <td style="vertical-align: top;">4</td> <td style="vertical-align: top;">another page, procedure interrupt</td> </tr> <tr> <td style="vertical-align: top;">5</td> <td style="vertical-align: top;">another document, procedure interrupt</td> </tr> <tr> <td style="vertical-align: top;">Response OK/ERROR</td> <td></td> </tr> </table>	Parameter: <ppm>	Post Page Message Codes	1	another document next	2	no more pages or documents	4	another page, procedure interrupt	5	another document, procedure interrupt	Response OK/ERROR	
Parameter: <ppm>	Post Page Message Codes												
1	another document next												
2	no more pages or documents												
4	another page, procedure interrupt												
5	another document, procedure interrupt												
Response OK/ERROR													

2.3.11.14 AT+FK

AT+FK	Kill operation, orderly FAX abort
Execute command AT+FK	Used for FAX class 2 only This command causes the TA to terminate the session in an orderly manner. Response OK / ERROR

2.3.11.15 AT+FLID

AT+FLID	Query or set session parameters Used for FAX class 2 only
Test command AT+FLID=?	Parameter <lid> Local ID string, max. length and possible content as reported by test command. Default value is empty string (""). See also the "AT+FCIG" command Response +FLID: (max. character length of Local ID string) (range of supported ASCII character values) OK
Read command AT+FLID?	Response <lid> OK Parameter <lid> See Test Command
Write command AT+FLID=<lid>	Parameter <lid> See Test command Response +FLID: (max. character length of Local ID string) (range of supported ASCII character values) OK

2.3.11.16 AT+FMDL

AT+FMDL	Identify Product Model
Read command AT+FMDL?	Used for FAX class 2 only Send the model identification to the TA. Response Gipsy Soft Protocolstack OK

2.3.11.17 AT+FMFR

AT+FMFR	Request Manufacturer Identification
Read command AT+FMFR?	Used for FAX class 2 only Send the model identification to the TA. Response Siemens OK

2.3.11.18 AT+FOPT

AT+FOPT	Set bit order independently
Write command AT+FOPT=<opt>	Used for FAX class 2 only Model-specific command to set bit order independently of the understanding which is "mirrored" and which is direct. Parameter: <opt> 0 non-standard 1 standard Response OK

2.3.11.19 AT+FPHCTO

AT+FPHCTO	DTE Phase C Response Timeout
Read command AT+FPHCTO?	Used for FAX class 2 only Send the model identification to the TA. Response <tout> OK/ERROR
Write command AT+FPHCTO=<tout>	Used for FAX class 2 only Model-specific command to set bit order independently of the understanding which is "mirrored" and which is direct. Parameter: <tout> 0 . . . 255 determines how long the DCE will wait for a command after reaching the end of data when transmitting in Phase C. When time-out is reached, the DCE assumes that there are no more pages or documents to send. Time-out value in 100ms units. 30 default Response <tout> OK/ERROR

2.3.11.20 AT+FREV

AT+FREV	Identify Product Revision
Read command AT+FREV?	Used for FAX class 2 only This command sends the revision identification to the TA. Response V2.550 OK

2.3.11.21 AT+FRH

AT+FRH	Receive Data Using HDLC Framing
Execute command AT+FRH=<mod>	Used for FAX class 1 only This command causes the TA to receive frames using the HDLC protocol and the modulation defined below. An ERROR response code results if this command is issued while the modem is on-hook. Parameter modulation mode <mod> 3 V21 Ch2 300 bps Response CONNECT/ERROR

2.3.11.22 AT+FRM

AT+FRM	Receive Data
Test command AT+FRM=?	Used for FAX class 1 only This command causes the TA to enter the receiver-mode using the modulation defined below. An ERROR response code results if this command is issued while the modem is on-hook Parameter <mod> 96 V.29 9600 bps 72 V.29 7200 bps 48 V.27ter 4800 bps 24 V.27ter 2400 bps Response (List of supported modulation modes <mod>s) OK
Write command AT+FRM=<mod>	Response CONNECT Parameter

2.3.11.23 AT+FRS

AT+FRS	Receive Silence
Write command AT+FRS=<time>	<p>Used for FAX class 1 only This command causes the TA to report an OK result code to the TE after <time> 10 millisecond intervals of silence have been detected on the line. This command is aborted if any character is received by the DTE. The modem discards the aborting character and issues an OK result code. An ERROR response code results if this command is issued while the mode is on-hook.</p> <p>Parameter <time> 0 .. 255 number of 10 millisecond intervals</p> <p>Response (List of supported modulation modes <mod>s) OK</p>

2.3.11.24 AT+FTH

AT+FTH	Transmit Data Using HDLC Framing
Write command AT+FTH=<mod>	<p>Used for FAX class 1 only This command causes the TA to transmit data using HDLC protocol and the modulation mode defined below. An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Parameter 3 V.21 Ch2 300 bps</p> <p><mod></p> <p>Response CONNECT</p>

2.3.11.25 AT+FTM

AT+FTM	Transmit Data												
Test command AT+FTM=?	<p>Used for FAX class 1 only This command causes the TA to transmit data using the modulation mode defined below. An ERROR response code results if this command is issued while the modem is on-hook.</p> <p>Parameter modulation mode <mod></p> <table> <tr> <td>96</td> <td>V.29</td> <td>9600 bps</td> </tr> <tr> <td>72</td> <td>V.29</td> <td>7200 bps</td> </tr> <tr> <td>48</td> <td>V.27ter</td> <td>4800 bps</td> </tr> <tr> <td>24</td> <td>V.27ter</td> <td>2400 bps</td> </tr> </table>	96	V.29	9600 bps	72	V.29	7200 bps	48	V.27ter	4800 bps	24	V.27ter	2400 bps
96	V.29	9600 bps											
72	V.29	7200 bps											
48	V.27ter	4800 bps											
24	V.27ter	2400 bps											
Write command AT+FTM=<mod>	<p>Parameter <mod> See Test command</p> <p>Response CONNECT</p>												

2.3.11.26 AT+FTS

AT+FTS	Stop Transmission and Wait
Write command AT+FTS=<time>	<p>Used for FAX class 1 only</p> <p>This command causes the TA to terminate a transmission and wait for <time> 10 millisecond intervals before responding with the OK result code to the DTE. An ERROR response code results if this command is issued while the modem is on-hook</p> <p>Parameter <time> 0 .. 85 number of 10 millisecond intervals</p>

2.3.11.27 AT+FVRF

AT+FVRFC	Vertical resolution format conversion
Test command AT+FVRFC=?	<p>Used for FAX class 2 only</p> <p>This command determines the DCE response to a mismatch between the vertical resolution negotiated for the facsimile session and the Phase C data desired by the DTE. An ERROR response code results if this command is issued while the modem is on-hook</p> <p>Response (List of supported mismatch checking modes)</p> <p>OK</p> <p>Parameter 0 disable mismatch checking</p> <p> 2 enable mismatch checking, with resolution conversion of 1-D data in the DCE and an implied AT+FK command executed on 2-D mismatch detection</p>
Read command AT+FVRFC?	<p>Response <vrfc></p> <p>OK</p> <p>Parameter <vrfc></p> <p style="text-align: right;">See Test command</p>
Write command AT+FVRFC=<vrfc>	<p>Response OK</p> <p>Parameter <vrfc></p> <p style="text-align: right;">See Test command</p>

2.4 General commands according to ITU-T Recommendation V.25 ter

This section provides the descriptions of general ITU-T Recommendation V.25ter commands.

2.4.1.1 AT+GCAP

AT+GCAP	Request Capabilities List
Test command AT+GCAP=?	<p>Response OK/ERROR</p>
Read command AT+GCAP?	<p>Response +GCAP: <mode></p> <p>Parameter <mode> : e.g. +CGSM,+FCLASS</p>

2.4.1.2 AT+IPR

AT+IPR	Fixed DTE rate
Test command AT+IPR=?	Response +IPR:(list of fixed-only <rate> values) OK/ERROR/+CME ERROR
	Parameter: <rate> bits per second at which the DTE-DCE interface should operate
Read command AT+IPR?	Response +IPR: <rate> OK/ERROR/+CME ERROR Parameter <rate> See Test command
Write command AT+IPR=<rate>	Response OK/ERROR/+CME ERROR
Write command AT+IPR=<rate>	Parameter See Test command <rate>

2.4.2 User-defined commands for controlling the GSM mobile phone

Since user-defined commands cannot be implemented according to official syntax, the character string "+C" is replaced by "^S" ("^" = 0x5E). In future, if a user-defined command is accepted in the same syntax in GSM recommendations, the command can be addressed using either command string.

2.4.2.1 AT^SACM

AT^SACM	Output ACM (accumulated call meter) and ACMmax
Test command AT^SACM=?	Response ^SACM: (list of supported <n>s)
Execute command AT^SACM	Response ^SACM: <n> , <acm> , <acm_max> OK/ERROR/+CME ERROR Parameter <n> See Write command <acm> Accumulated call meter <acm_max> Maximum accumulated call meter
Write command AT^SACM=<n>	Parameter <n> 0 Suppresses the unsolicited message 1 Displays the unsolicited message Unsolicited message ^SACM: <m>; Parameter <m> 1 ACM limit almost reached 2 ACM greater than ACMmax 3 ACM range overflow

2.4.2.2 AT^SBNR

AT^SBNR	Binary Read
Test command AT^SBNR=?	Response ^SBNR: (list of supported <types>s, (list of supported <subtype>s)) OK/ERROR/+CME ERROR Parameter: <type> see AT^SBNW command <subtype> see AT^SBNW command
Write command AT^SBNR=<type>,<subtype>	Response ^SBNR: <type>,<subtype>,1,<maxNumber> <CR><LF><data><CR><LF> ^SBNR: <type>,<subtype>,2,<maxNumber> <CR><LF><data><CR><LF>[. . .] OK/ERROR/+CME ERROR Parameter: <type> see AT^SBNW command <subtype> see AT^SBNW command <data> data in hexadecimal form (PDU) <maxNumber> see AT^SBNW command See "Appendix B" for examples

2.4.2.3 AT^SBNW

AT^SBNW	Binary Write												
Test command AT^SBNW=?	Response ^SBNW: (list of supported <types>s, list of supported <subtype>s) OK/ERROR/+CME ERROR:												
	Parameter: <table border="0"> <tr> <td style="padding-right: 20px;"><type></td> <td style="padding-right: 20px;">bmp</td> <td>Bitmap; Windows bitmap format compression; 2/16/256 colours <subtype> 0 shown permanently when registered in home network <subtype> 1 shown temporarily, deleted by more important display contents</td> </tr> <tr> <td></td> <td>mid</td> <td>ring tones in standard MIDI format 0, without polyphony specification: http://www.midi.org <subtype> 0 first (and only) entry of type mid</td> </tr> <tr> <td></td> <td>vcs</td> <td>vcal format specification: http://www.imc.org/pdi <subtype> 0 first (and only) entry of type vcs <subtype> 1 entry of type vcs</td> </tr> <tr> <td></td> <td>vcf</td> <td>vcard format specification: http://www.imc.org/pdi <subtype> 0 first (and only) entry of type vcf <subtype> 1 entry of type vcf</td> </tr> </table>	<type>	bmp	Bitmap; Windows bitmap format compression; 2/16/256 colours <subtype> 0 shown permanently when registered in home network <subtype> 1 shown temporarily, deleted by more important display contents		mid	ring tones in standard MIDI format 0, without polyphony specification: http://www.midi.org <subtype> 0 first (and only) entry of type mid		vcs	vcal format specification: http://www.imc.org/pdi <subtype> 0 first (and only) entry of type vcs <subtype> 1 entry of type vcs		vcf	vcard format specification: http://www.imc.org/pdi <subtype> 0 first (and only) entry of type vcf <subtype> 1 entry of type vcf
<type>	bmp	Bitmap; Windows bitmap format compression; 2/16/256 colours <subtype> 0 shown permanently when registered in home network <subtype> 1 shown temporarily, deleted by more important display contents											
	mid	ring tones in standard MIDI format 0, without polyphony specification: http://www.midi.org <subtype> 0 first (and only) entry of type mid											
	vcs	vcal format specification: http://www.imc.org/pdi <subtype> 0 first (and only) entry of type vcs <subtype> 1 entry of type vcs											
	vcf	vcard format specification: http://www.imc.org/pdi <subtype> 0 first (and only) entry of type vcf <subtype> 1 entry of type vcf											
	<actNumber> 0 deletes entry of the current subtype other current packet number												
	<maxNumber> maximum number of packets												
Write command AT^SBNW=<type>,<subtype>, [<actNumber>[, <maxNumber>]]<CR> PDU is given: <ctrl-Z/ESC>	Response OK/ERROR/+CME ERROR Parameter: see Test command <type> <subtype> see Test command <actNumber> see Test command <maxNumber> see Test command												
Notes:	<ul style="list-style-type: none"> - It is not possible to upload data when a call is active or in progress. - If a call is active the mobile responds with +CME ERROR: PHONE BUSY, the current upload sequence is aborted and all data packets are discarded. - If uploaded data is not useable (e.g. wrong data format) the mobile responds with +CME ERROR: INV CHAR IN TEXT after the last packet is uploaded. - To get the extended +CME ERROR response, AT+CMEE=2 has to be sent first. Otherwise the mobile only returns an ERROR. (see 1) - If <actNumber> and <maxNumber> are omitted during the upload, the mobile aborts the whole input sequence for the current subtype. - If <actNumber> is 0 during the upload and <maxNumber> is omitted, the mobile deletes the current record with index <subtype> - Packets have to be uploaded in the right order! 												
Restriction	The maximum pdu size is 176 bytes (or 352 characters) See "Appendix B" for examples.												

2.4.2.7 AT^SDBR

AT^SDBR		Database Read	
Test command AT^SDBR=?	Response ^SDBR: (list of supported <index>s) OK/ERROR/+CME ERROR		
Write command AT^SDBR=<index1> [,<number typ>]	Parameter: <index>		Location number stored in the alphabetically-sorted addressbook Response [^SDBR: <number typ>, <number>, <typ>, <text>[[...] <CR><LF>^SDBR: <number typ>, <number>, <typ>, <text>]] OK/ERROR/+CME ERROR
	Parameter <number typ>		Number type
		0	phone number 'HOME'
		1	phone number 'OFFICE'
		2	phone number 'MOBILE'
		3	phone number 'FAX'
	<number>		Telephone number
	<typ>		Type of number
	<text>		Text corresponding to the telephone number
	NOTE:	In the <text> field, special characters like the following may appear: '"\' (0x22), '@\' (0x00), 'ð' (0x08), 'Ö' (0x5c). (See also AT+CPBW and Appendix A: "Using special characters in certain commands (e. g., +CPBR/+CPBW")	

2.4.2.8 AT^SDLD

AT^SDLD		Delete the "last number redial" memory	
Test command AT^SDLD=?	Response OK		
Execute command AT^SDLD	Response OK/ERROR/+CME ERROR		

2.4.2.9 AT^SGAUTH

AT^SGAUTH	Select Type of Authentication for PPP connection
Test command AT^SGAUTH=?	Response ^SGAUTH: (list of supported <auth>s) OK/ERROR/+CME ERROR Parameter <auth> indicates typ of supported authentication 0 none 1 PAP 2 CHAP 3 PAP and CHAP
Read command AT^SGAUTH?	Response +CGACT: <auth> OK/ERROR/+CME ERROR Parameter <auth> See Test command
Write command AT^SGAUTH =<auth>	Response OK/ERROR/+CME ERROR Parameter <auth> See Test command

2.4.2.10 AT^SICO

AT^SICO	Icon control
Test command AT^SICO =?	Response ^SICO: (list of supported <n>s),(list of supported <m>s) OK
Write command AT^SICO =<n>,<m>	Response for <m> = 0 and 1 OK/ERROR/+CME ERROR Response for <m> = 2 ^SICO: <s> OK Parameter <n> Type of icon 0 GPS icon ----- <m> 0 hide icon 1 show icon 2 query icon status ----- <s> Status 0 icon hidden 1 icon shown

2.4.2.11 AT^SLCK

AT^SLCK	Switch locks (including user-defined locks) on and off																																
<p>Test command AT^SLCK=?</p>	<p>Response ^SLCK: (list of supported <fac>s) OK/ERROR/+CME ERROR</p> <p>Parameter <fac></p> <table border="0"> <tr><td>PS</td><td>Phone locked to SIM (device code)</td></tr> <tr><td>SC</td><td>SIM card (PIN)</td></tr> <tr><td>FD</td><td>FDN lock</td></tr> <tr><td>AO</td><td>BAOC (bar all outgoing calls)</td></tr> <tr><td>OI</td><td>BOIC (bar outgoing international calls)</td></tr> <tr><td>OX</td><td>BOIC-exHC (bar outgoing international calls except to home country)</td></tr> <tr><td>AI</td><td>BAIC (bar all incoming calls)</td></tr> <tr><td>IR</td><td>BIC-Roam (bar incoming calls when roaming outside the home country)</td></tr> <tr><td>AB</td><td>All barring services</td></tr> <tr><td>AG</td><td>All outgoing barring services</td></tr> <tr><td>AC</td><td>All incoming barring services</td></tr> <tr><td>PN</td><td>Network personalization (GSM 02.22, [4])</td></tr> <tr><td>PC</td><td>Corporate personalization (GSM 02.22, [4])</td></tr> <tr><td>PU</td><td>Network subset personalization (GSM 02.22, [4])</td></tr> <tr><td>PP</td><td>Service provider personalization (GSM 02.22, [4])</td></tr> <tr><td>PF</td><td>Phone locked to very first inserted SIM</td></tr> </table>	PS	Phone locked to SIM (device code)	SC	SIM card (PIN)	FD	FDN lock	AO	BAOC (bar all outgoing calls)	OI	BOIC (bar outgoing international calls)	OX	BOIC-exHC (bar outgoing international calls except to home country)	AI	BAIC (bar all incoming calls)	IR	BIC-Roam (bar incoming calls when roaming outside the home country)	AB	All barring services	AG	All outgoing barring services	AC	All incoming barring services	PN	Network personalization (GSM 02.22, [4])	PC	Corporate personalization (GSM 02.22, [4])	PU	Network subset personalization (GSM 02.22, [4])	PP	Service provider personalization (GSM 02.22, [4])	PF	Phone locked to very first inserted SIM
PS	Phone locked to SIM (device code)																																
SC	SIM card (PIN)																																
FD	FDN lock																																
AO	BAOC (bar all outgoing calls)																																
OI	BOIC (bar outgoing international calls)																																
OX	BOIC-exHC (bar outgoing international calls except to home country)																																
AI	BAIC (bar all incoming calls)																																
IR	BIC-Roam (bar incoming calls when roaming outside the home country)																																
AB	All barring services																																
AG	All outgoing barring services																																
AC	All incoming barring services																																
PN	Network personalization (GSM 02.22, [4])																																
PC	Corporate personalization (GSM 02.22, [4])																																
PU	Network subset personalization (GSM 02.22, [4])																																
PP	Service provider personalization (GSM 02.22, [4])																																
PF	Phone locked to very first inserted SIM																																
<p>Write command AT^SLCK = <fac>, <mode> [,<passwd> [,<class>]]</p>	<p>Parameter <fac></p> <hr/> <p>See Test command</p> <p><mode></p> <table border="0"> <tr><td>0</td><td> Cancels lock</td></tr> <tr><td>1</td><td> Activates lock</td></tr> <tr><td>2</td><td> Queries lock status</td></tr> </table> <hr/> <p><passwd></p> <p>Password</p> <hr/> <p><class></p> <table border="0"> <tr><td>1</td><td> Voice</td></tr> <tr><td>2</td><td> Data</td></tr> <tr><td>4</td><td> Fax</td></tr> <tr><td>7</td><td> Voice, Data and FAX (default)</td></tr> <tr><td>8</td><td> SMS</td></tr> <tr><td>16</td><td> data circuit sync</td></tr> <tr><td>32</td><td> data circuit async</td></tr> <tr><td>64</td><td> dedicated packet access</td></tr> <tr><td>128</td><td> dedicated PAD access</td></tr> <tr><td>X</td><td> combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX</td></tr> </table>	0	Cancels lock	1	Activates lock	2	Queries lock status	1	Voice	2	Data	4	Fax	7	Voice, Data and FAX (default)	8	SMS	16	data circuit sync	32	data circuit async	64	dedicated packet access	128	dedicated PAD access	X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX						
0	Cancels lock																																
1	Activates lock																																
2	Queries lock status																																
1	Voice																																
2	Data																																
4	Fax																																
7	Voice, Data and FAX (default)																																
8	SMS																																
16	data circuit sync																																
32	data circuit async																																
64	dedicated packet access																																
128	dedicated PAD access																																
X	combination of some of the above classes, e.g. 255 regroups all classes and 5 regroups Voice and FAX																																
<p>Cont. Next page</p>																																	

Cont.	<p>Response If <mode>=2 and command is successful ^SLCK: <status>[, <class1>[<CR><LF> ^SLCK: <status>, class2....]] OK/ERROR/+CME ERROR Parameter <status> 0 Off 1 On</p>
-------	---

2.4.2.12 AT^SLNG

AT^SLNG	Language settings
Test command AT^SLNG=?	<p>Response ^SLNG: (list of supported languages <lng>s) Parameter: <lng> Integer; language coded according to GSM 03.38 or mobile-specific language (>100)</p>
Read command AT^SLNG?	<p>Response ^SLNG: <lng></p>
Write command AT^SLNG=<lng>	<p>Response OK/ERROR/+CME ERROR</p>

2.4.2.13 AT^SMGL

AT^SMGL	List SMS (without status change from <i>unread</i> to <i>read</i>) Revision according to GSM 07.05 Version 4.7.0															
Test command AT^SMGL=?	<p>Response ^SMGL: (list of supported <stat>s) Parameter <stat></p> <table style="margin-left: 40px;"> <tr> <td>0</td> <td>REC UNREAD</td> <td>received unread messages (default)</td> </tr> <tr> <td>1</td> <td>REC READ</td> <td>received read messages</td> </tr> <tr> <td>2</td> <td>STO UNSENT</td> <td>stored unsent messages</td> </tr> <tr> <td>3</td> <td>STO SENT</td> <td>stored sent messages</td> </tr> <tr> <td>4</td> <td>ALL</td> <td>all messages</td> </tr> </table>	0	REC UNREAD	received unread messages (default)	1	REC READ	received read messages	2	STO UNSENT	stored unsent messages	3	STO SENT	stored sent messages	4	ALL	all messages
0	REC UNREAD	received unread messages (default)														
1	REC READ	received read messages														
2	STO UNSENT	stored unsent messages														
3	STO SENT	stored sent messages														
4	ALL	all messages														
Write command AT^SMGL [=<stat>]	<p>Response If PDU mode (+CMGF=0) and command is successful: ^SMGL: <index>, <stat>, [<alpha>], <length> <CR><LF><pdu> [<CR><LF>^SMGL: <index>, <stat>, [<alpha>], <length> <CR><LF><pdu> [...]] Parameter <stat> See Test command <pdu> The PDU begins with the service-center address (according to GSM 04.11), followed by the TPDU according to GSM 03.40 in hexadecimal format otherwise: +CMS ERROR: <err></p>															

2.4.2.14 AT^SMGO

AT^SMGO	SMS overflow indicator
Test command AT^SMGO=?	Response ^SMGO: (list of supported <n>s) OK/ERROR/+CMS ERROR Parameter <n> 0 Disable 1 Enable
Read command AT^SMGO?	Response ^SMGO: <n>, <mode> OK/ERROR/+CMS ERROR Parameter <n> See Test command <mode> 0 Space still available 1 SMS buffer is full (The buffer for received short messages is 2 Buffer is full and a new message is waiting in SC for delivery to phone
Write command AT^SMGO=<n>	Parameter <n> See Test command <mode> See Test command
Notes	Response OK/ERROR/+CMS ERROR Unsolicited message ^SMGO: <mode> 1) Indication during data transfer via break (100ms). 2) Incoming short messages with message class 1 or 2 (refer <dcS> GSM 03.38) will be stored in the "ME" or "SM" storage only. Therefore, the AT^SMGO: 2 indication can occur without a preceding AT^SMGO: 1 indication.

2.4.2.15 AT^SMGR

AT^SMGR	Read SMS (without status change from <i>unread</i> to <i>read</i>) Syntax identical with AT+CMGR
Test command AT^SMGR=?	Response OK
Write command AT^SMGR=<index>	Response If PDU mode (+CMGF=0) and command are successful: AT^SMGR: <stat>, [<alpha>], <length><CR><LF><pdu> Parameter <pdu> See the AT+CMGL command <stat> See the AT+CMGL command <length> See the AT+CMGL command otherwise: +CMS ERROR: <err> <index> Index of message in selected memory <mem1>

2.4.2.16 AT^SMSO

AT^SMSO	Switch device off
Test command AT^SMSO=?	Response OK
Execute command AT^SMSO	Response OK Device switches off

2.4.2.17 AT^SNFS

AT^SNFS	Select NF hardware
Test command AT^SNFS=?	Response ^SNFS: (list of supported <dev>s) Parameter Cell phone mode <dev> 0 1 Handsfree
Read command AT^SNFS?	Response ^SNFS: <dev> Parameter See Test command <dev> Note: Volume should be temporarily set to "0" before NF hardware is changed.
Write command AT^SNFS=<dev>	Parameter See Test command <dev> Response OK / ERROR

2.4.2.18 AT^SNFV

AT^SNFV	Set the volume
Test command AT^SNFV=?	Response ^SNFV: (list of supported <vol>s) Parameter <vol> Value range of volume (0 to 4) 0 Low volume 1 2 3 4 max. volume (approx. 3 dB/level)
Read command AT^SNFV?	Response ^SNFV: <vol> Parameter <vol> See Test command
Write command AT^SNFV=<vol>	Parameter <vol> See Test command Response OK/ERROR

2.4.2.19 AT^SPBC

AT^SPBC	Seek the first entry in the sorted telephone book which begins with the selected (or next available) letter	
Test command AT^SPBC=?	Response	^SPBC: (list of sorted telephone books supported <mem>s) See AT+CPBS / AT^SPBS OK/ERROR/+CME ERROR
Write command AT^SPBC=<char>	Parameter	First letter of desired entry Value range: letters A to Z (capitals only) (if <char> is not A to Z, the index of the first entry beginning with a special character is displayed)
	<index>	Index in the sorted telephone book (access via AT^SPBG)
	Response	^SPBC: <index> OK/ERROR/+CME ERROR

2.4.2.20 AT^SPBG

AT^SPBG	Read entry from the sorted telephone book via the sorted index	
Test command AT^SPBG=?	Response	^SPBG: (list of supported <index>s), <nlength>, <tlength> OK/ERROR/+CME ERROR:
	Parameter	<index> Location number
	<nlength>	Max. length of telephone number
	<tlength>	Max. length of the text corresponding to the number
Write command AT^SPBG= <index1> [, <index2>]	Response	^SPBG: <index1>, <number>, <type>, <text>[<CR><CL> ^SPBG: ^SPBG: <index2>, <number>, <type>, <text>] OK/ERROR/+CME ERROR
	Parameter	<index1> Location number where the read of the entry starts
	<index2>	Location number where the read of the entry ends
	<number>	Telephone number
	<type>	Type of number
	<text>	Text corresponding to the telephone number

2.4.2.21 AT^SPBS

AT^SPBS	Select a telephone book (including Siemens-specific books)
Test command AT^SPBS=?	Response ^SPBS: (list of supported <sto>s) OK/ERROR/+CME ERROR Parameter <sto> FD SIM fix-dialing telephone book SM SIM telephone book ME Telephone book in device DC ME Dialed Calls List ON Own telephone numbers LD SIM last dialing number MC ME Missed Calls List RC ME Received Calls List MD Last number redial memory in telephone device OW Own numbers BD Barred dialing numbers SD Service dialing numbers MS Missed dialing numbers (unanswered calls) CD Callback dialing numbers (answered calls) BL Blacklist dialing numbers (barred numbers from remote) MB Mailbox dialing numbers (network-operator mailbox) CS Common sortable telephone book (sorted combination of "SM", "ME", "FD"; access only via ^SPBC, ^SPBG) RD Red book (all entries in "CS" whose name portions have an exclamation mark (!) as their final character) *For detailed information on the telephone-book features see "Appendix A"
Read command AT^SPBS?	Response ^SPBS: <sto> OK/ERROR/+CME ERROR Parameter <sto> See Test command
Write command AT^SPBS=<sto>	Parameter <sto> See Test command Response OK/ERROR/+CME ERROR

2.4.2.22 AT^SPIC

AT^SPIC	Output PIN counter
Test command AT^SPIC=?	Response OK/ERROR/+CME ERROR
Execute command AT^SPIC	Response ^SPIC: <counter> OK/ERROR/+CME ERROR Parameter <counter> Number of attempts still available to enter the <passwd>. Use the AT+CPIN? command to check which password is being required.

2.4.2.23 AT^SPLM

AT^SPLM	Read the PLMN list
Test command AT^SPLM=?	Response OK
Execute command AT^SPLM	Response ^SPLM: numeric <oper>, long alphanumeric <oper><CR><LF> ^SPLM:..... OK/ERROR/+CME ERROR Parameter <oper> Network operator in numeric and alphanumeric notation

2.4.2.24 AT^SPLR

AT^SPLR	Read an entry from the preferred-operator list
Test command AT^SPLR=?	Response ^SPLR: (list of supported <index>s) OK/ERROR/+CME ERROR Parameter <index> Location numbers
Write command AT^SPLR=<index1> [, <index2>]	Response ^SPLR: <index1>, numeric <oper> ^SPLR: ^SPLR: <index2>, numeric <oper> OK/ERROR/+CME ERROR Parameter <index1> Location number where the read of the entry starts <index2> Location number where the read of the entry ends <oper> Network operator in numeric form

2.4.2.25 AT^SPLW

AT^SPLW	Write an entry to the preferred-operator list
Test command AT^SPLW=?	Response ^SPLW: (list of supported <index>s) OK/ERROR/+CME ERROR Parameter <index> Location number Parameter <index> Location number at which the entry is written
Write command AT^SPLW=<index>[, <oper>]	<oper> Network operator in numeric form Response OK/ERROR/+CME ERROR

2.4.2.26 AT^SPST

AT^SPST	Play Signal Tone
Test command AT^SPST=?	Response ^SPST: (list of supported <n>s) OK
Write command AT^SPST=<n>,<m>	Response OK/ERROR/+CME ERROR
	Parameter <n>
	0 Type of Signal Tone (st = self terminating)
	1 Carkit PTT (st)
	2 Carkit PTT long (st)
	3 Carkit Crash (st)
	4 Carkit Error (st)
	4 Carkit Call Setup (st)
	<m>
	0 Mode
	1 Stop tone (not necessary for self terminating tones)
	1 Play tone

2.4.2.27 AT^SPWD

AT^SPWD	Change password to a lock (including user-defined locks)
Test command AT^SPWD=?	Response ^SPWD: list of supported (<fac>, <pwdlength>)s OK/ERROR/+CME ERROR
	Parameter <fac>
	P2 PIN2
	PS Phone locked to SIM (device code)
	SC SIM card (PIN)
	AO BAOC (bar all outgoing calls)
	OI BOIC (bar outgoing international calls)
	OX BOIC-exHC (bar outgoing international calls except to home country)
	AI BAIC (bar all incoming calls)
	IR BIC-Roam (bar incoming calls when roaming outside the home country)
	AB All barring services
	AG All outgoing barring services
	AC All incoming barring services
	PN Network personalization (GSM 02.22, [4])
	PC Corporate personalization (GSM 02.22, [4])
	PU Network subset personalization (GSM 02.22, [4])
	PP Service provider personalization (GSM 02.22, [4])
	PF Phone locked to very first inserted SIM
	<pwdlength> Length of password
Write command AT^SPWD = <fac>,<oldpwd>, <newpwd>	Parameter <fac> See Test command
	<oldpwd> Old password
	<newpwd> New password
	Response OK/ERROR/+CME ERROR

2.4.2.28 AT^SRTC

AT^SRTC	Set the ringing tone
Test command AT^SRTC=?	Response ^SRTC: (list of supported <type>s), (list of supported <vol>s) Parameter <type> 1-X Number of ringing tone 0 Mutes the ringing tone; when MTC is set, the phone does not ring and the volume is ignored <vol> 1-Y Volume of ringing tone
Read command AT^SRTC?	Response ^SRTC: <type>, <vol>, <ringing> Parameter See Test command <type> <vol> See Test command <ringing> 0 Test-ring is switched off 1 Test-ring is switched on
Write command AT^SRTC=[<type>][,<vol>]	Parameter <type> See Test command <vol> See Test command Response OK/ERROR
Execute command AT^SRTC	Response The ringing tone sounds on the current NF device; it is selected using "AT^SNFS" until AT^SRTC is called up again OK/ERROR/+CME ERROR Note: If an MTC arrives while the test-ring is active, the latter is switched off and the "normal" ring is switched on.

2.4.2.29 AT^SSTK

AT^SSTK	SIM Toolkit
Test command AT^SSTK=?	Response ^SSTK: <profile>
	Parameter: <profile> ME profile according to GSM 11.14
Write command AT^SSTK=<length>[,<mode>]<CR> PDU is given: <ctrl-Z/ESC>	Response: OK/ERROR/+CME ERROR Parameter: <length> Length of PDU in bytes <mode> 0 Single command 1 Sequence of commands <pdu> SIM Toolkit commands, see GSM 11.14 Restriction: [The maximum PDU length is 176 bytes. Unsolicited message ^SSTK:<data>

2.4.3 Summary of all unsolicited messages

Table 2-9 lists all unsolicited messages defined, together with their meaning:

Message	Meaning
+CBM: <length><CR><LF><pdu>	Direct output of the broadcast message. For an explanation of parameters see the AT+CNMI command
+CBMI:<mem>,<index>	Indicates that a new CB message has been received: For an explanation of parameters see AT+CNMI
+CCWA:<num>,<type>,<class>,<cli validity>	Call waiting indication For an explanation of parameters see AT+CCWA
+CDS: <length><CR><LF><pdu>	Direct output of the status report For an explanation of parameters see AT+CNMI
+CDSI: <mem>,<index>	????
+CGEV: ME CLASS <class>	The mobile equipment has forced a change of MS class For an explanation of parameters see AT+CGEREP
+CGEV: ME DEACT <PDP_type>, <PDP_addr>	The mobile equipment has forced a context deactivation For an explanation of parameters see AT+CGEREP
+CGEV: ME DETACH	The mobile equipment has forced a GPRS detach For an explanation of parameters see AT+CGEREP
+CGEV: NW CLASS <class>	The network has forced a change of MS class For an explanation of parameters see AT+CGEREP
+CGEV: NW DEACT <PDP_type>, <PDP_addr>	The network has forced context deactivation For an explanation of parameters see AT+CGEREP
+CGEV: NW DETACH	The network has forced a GPRS detach For an explanation of parameters see AT+CGEREP
+CGEV: NW REACT <PDP_type>, <PDP_addr>	The network has requested a context reactivation For an explanation of parameters see AT+CGEREP
+CGEV: REJECT <PDP_type>, <PDP_addr>	A network request for PDP context activation occurred when the MT was unable to report it and was automatically rejected For an explanation of parameters see AT+CGEREP
+CGREG: <stat>	GPRS Network registration For an explanation of parameters see

	AT+CGREG
+CLIP: <num>,<type>,,,<CLI validity>	Telephone number of caller For an explanation of parameters see AT+CLIP
+CMT: <length><CR><LF<>pdu>	Direct output of the short message For an explanation of parameters see AT+CNMI
+CMTI: <mem>,<index>	Indication that a new message has arrived For an explanation of parameters see AT+CNMI
+COLP: <num>,<type>	Telephone number of called line For an explanation of parameters see AT+COLP
+CREG: <stat>	Network registration For an explanation of parameters see AT+CREG
+CSSI: <code1> +CSSU: <code2>	Supplementary service intermediate/unsolicited result code For an explanation of parameters see AT+CSSN
^SACM: <m>	Message indicating if ACM has reached the maximum value ACMmax For an explanation of parameters see AT^SACM
^SCKS: <m>	Message indicating whether card has been removed or inserted For an explanation of parameters see AT^SCKS
^SMGO: <mode>	SMS overflow indicator For an explanation of parameters see AT^SMGO
^SSTK:<data>	The user has selected a menu entry from a menu created by means of AT^SSTK

Table 2-9: List of unexpected commands

2.5 Appendix A

2.5.1 Factory settings made by AT&F

ATE1 (only in case of RCCP mode)
ATQ0
ATV1

AT+CCWA=0
AT+CREG=0
AT+CLIP=0
AT+COLP=0
AT+CRC=0
AT+CAOC=0
AT+CMEE=0
AT+CPBS=SM (if available)
AT+COPS=0
AT+VTS=1
AT+CSCS="GSM"
AT+CSSN=0,0
AT^SCKS=0
Reset pending locks (Phone Pin/Puk, Pin2/Puk2 ...)
which are given as answer to AT+CPIN?

AT+CSMS=0
AT+CNMI=0,0,0,0,1
AT^SMGO=0
AT+CSCB=0

2.5.2 Features of the Telephone book memory

Table 2-10 lists the features supported by the telephone book memory.

Name	Description	Category	Access	Write allowed ?	How to delete completely
FD	Fix-dialing number (SIM fix-dialing telephone book)	GSM 07.07	AT+CPBS or AT^SPBS	PIN2 required	
SM	Abbreviate dialing number (SIM telephone book)	GSM 07.07	AT+CPBS or AT^SPBS	device code required if FDN replacement is active	
DC (MD)	Mobile last dialing number (last number redial memory; only if "LD" is not available)	GSM 07.07	AT+CPBS or AT^SPBS	-	AT^SDLD
ON (OW)	Own Numbers (SIM own telephone numbers)	GSM 07.07 (Siemens)	AT+CPBS (historical)	x	
LD	SIM last dialing number (last number redial memory on SIM)	GSM 07.07	AT+CPBS or AT^SPBS	-	AT^SDLD
ME	Mobile-equipment telephone book (ME dialing numbers)	GSM 07.07	AT+CPBS or AT^SPBS	device code required if FDN replacement is active	
BD	Barred dialing numbers (blocked numbers)	Siemens	AT^SPBS	-	
SD	Service dialing numbers (Service numbers)	Siemens	AT^SPBS	-	
MC (MS)	Missed dialing numbers (unanswered calls)	GSM 07.07 (Siemens)	AT+CPBS, AT^SPBS	-	
RC (CD)	Callback dialing numbers (answered calls)	GSM 07.07 (Siemens)	AT+CPBS, AT^SPBS	-	
BL	Blacklist of dialing numbers (numbers that are blocked for a certain time in order to prevent continuous accesses from remote control)	Siemens	AT^SPBS	-	
MB	Mailbox dialing numbers (network-operator mailbox)	Siemens	AT^SPBS	-	
CS	Common sortable numbers (sorted combination of SM, ME, FD)	Siemens	AT^SPBS, AT^SPBC, AT^SPBG	-	
RD	Red book numbers (CS entries with ! at the end of the name portion)	Siemens	AT^SPBS, AT^SPBC, AT^SPBG	-	

Table 2-10: Features of the telephone book memory

2.5.3 Writing to the FDN Phonebook / FDN Replacement

Writing to the fixed-dialing number phonebook is protected by PIN2. A sample Write sequence (to e.g. record 5) is provided below:

AT Command	Comment
AT+CMEE=2 OK	Activate expanded error message
AT+CPBS=? +CPBS: ("FD","SM","LD") OK	Listing of available telephone books
AT+CPBS="FD" OK	Selection of the FDN telephone book
AT+CPBW=5,"1234",,"test" +CME ERROR: SIM PIN2 REQUIRED AT+CPIN? +CPIN: SIM PIN2 AT+CPIN="12345678" OK	A Write to record 5 is attempted PIN2 is required for this purpose Query of the PIN status PIN2 is to be entered Input of PIN2
AT+CPBW=5,"1234",,"test" OK	A Write to record 5 is attempted... PIN2 remains active as long as you use the commands +CPIN, +CPBS, +CPBR, +CPBW, +CACM, +CAMP, +CPUC or ^SPIC, ^SPBS, ^SPBC, ^SPBG,: If you use other commands or if none of the above commands are executed within five minutes, PIN2 is no longer valid.
AT+CPBW=6,"5678",,"new test" OK	A Write to record 6 is attempted...

In addition, if there is no FDN phonebook available on the SIM, it is possible to activate a feature which activates an FDN-like behavior for the "SM" and "ME" phonebooks (FDN replacement). (Currently this feature can only be activated via the MMI lock/device lock/excluding telephone book.)

In this case, the Write to the "SM" and "ME" phonebooks is ensured by the device code (PH-SIM PIN and PH-SIM PUK, respectively).

The sequence for entering the device code is analogous to the above example.

2.5.4 Using special characters in certain commands (e. g., +CPBR/+CPBW)

String parameters like <text> in certain commands (like, for instance, AT+CPBW) should be entered using quotation marks ‘”’ (Ascii=Windows=GSM=0x22), since the following problems may occur if the quotation marks are left out:

- SPACES (Space, Blank, Ascii=Windows=GSM=0x20) are skipped.
 E.g. at+cpbw=1,"123",,K. H. results in "K.H." ☹
 at+cpbw=1,"123",,"K. H." spaces are retained ☺

- Commas (‘,’) (Ascii=Windows=GSM=0x2C) and semicolons (‘;’)(Ascii=Windows=GSM=0x3B) are prohibited and must not be used in <text>, because they are used as separators between parameters and commands.
 E.g. at+cpbw=1,"123",,Kurz,Helmut results in ERROR ☹
 at+cpbw=1,"123",,"Kurz,Helmut" ☺

To be able, however, to enter quotation marks (and some other special characters) in string parameters you will have to use the Escape character (hex value 0x5c). While “0x5c” denotes the backslash (‘\’) in the ASCII character set (Ascii=Windows=0x5C), in the GSM character set “0x5C” denotes the `Ö` character.

The escape sequence thus has the following structure:

- The sequence begins with the escape character 0x5C (ASCII=Windows=‘\’, GSM=‘Ö’)
- The special character follows and is entered as a 2 Byte representation of the GSM character set value .
 e.g. the 2 Byte representation of the `@` (GSM=0x00) is `00`

Table 2-11 lists the special characters that should be entered using the escape sequence:

GSM Char	GSM hex value	ASCII char.	3 byte esc. seq.(hex)	Note
Ö	0x5C	\	0x5C 0x35 0x43	Backslash
"	0x22	“	0x5C 0x32 0x32	String delimiter
ò	0x08	BSP	0x5C 0x30 0x38	Backspace
@	0x00	NULL	0x5C 0x30 0x30	GSM NULL

Table 2-11: Using escape characters in commands

Examples of using escape characters in GSM commands are listed in Table 2-12:

Desired phonebook entry	<text> in AT+CPBW command (hex)
Ölhändler	0x22 0x5C 0x35 0x43 0x6C 0x68 0x7B 0x6E 0x64 0x6C 0x65 0x72 0x22
“Eddi” Kurz	0x22 0x5C 0x32 0x32 0x45 0x64 0x64 0x69 0x5C 0x32 0x32 0x20 0x4B 0x75 0x72 0x7A 0x22
Oòo	0x22 0x4F 0x5C 0x30 0x38 0x6F 0x22
@Adr.	0x22 0x5C 0x30 0x30 0x41 0x64 0x72 0x2E 0x22 [no problems with strlen()] 22 00 41 64 72 2E 22 (may cause problems with strlen() in application)

Table 2-12: Using escape characters in GSM commands

Note:

When reading phonebook records, there is NO replacement. Every character will appear in normal GSM character set notation (like the left column in the example above).

2.6 S Registers

This section provides the meanings of S registers used in the modem:

S Register	Function (default values in bold type)		
S 0	The number of rings before the call is answered default: 0 (i. e. does not answer)		
S 3	Command termination character and first character of response trailer (CR)		
S 4	Second character of response trailer (LF)		
S 5	Editing character; erases the previous character (BS)		
S 6	Escape character		
S 7	Wait for carrier after dialing (in seconds). default: 60		
S 8 + S 9	No action		
S 10	Delay between Lost Carrier and Hang up in 0.1 sec. (Default 2 = 200ms)		
S 11 .. S17	No action		
S 18	Bit 0	0	No GSM exit cause
		1	With GSM exit cause
	Bit 1	0	No SMS indication "+C"
		1	With incoming SMS indication "+C"
S 19 ... S99	No action		

Table 2-13: S-Registers

Only the following S registers can be modified by means of the corresponding ATSn=x command (where n denotes the number of the register): S0, S3, S5, S6, S7, S8, S10; S18.

All the other S registers are used internally and thus read-only.

The contents of a single S register can be displayed via the ATSn? command (where n denotes the number of the register). It is not possible to have the contents of multiple registers displayed at the same time.

2.7 Circuit assignments

The following circuits are assigned at the mobile connector to support the exchange of data:

Name:	Direction	Function	ITU V24 Circuit
SG		Signal Ground	102
TxD	DTE to DCE	Transmitted Data	103
RxD	DCE to DTE	Received Data	104
CTS	DCE to DTE	Clear To Send	106
DCD	DCE to DTE	Data Carrier Detect	109

2.8 Appendix B

2.8.1 Example for creating / retrieving an organizer entry

-vcs object which has to be uploaded:

```
BEGIN:VCALENDAR
VERSION:1.0
BEGIN:VEVENT
CATEGORIES:ANNIVERSARY
DTSTART:19991213T100000
DESCRIPTION:W. von Siemens
END:VEVENT
END:VCALENDAR
```

-hexadecimal representation of this object:

```
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A424547494E3A564556454E540
D0A43415445474F524945533A414E4E49564552534152590D0A445453544152543A31393939313231335431
30303030300D0A4445534352495054494F4E3A572E20766F6E205369656D656E730D0A454E443A56455645
4E540D0A454E443A5643414C454E4441520D0A
```

-upload of an entry on record 20

```
at^sbnw="vcs",20,1,3<CR>
<CR><LF> > <Space>
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A424547494E3A564556454E540
D0A43415445474F<Ctrl-Z>
<CR><LF>OK<CR><LF>

at^sbnw="vcs",20,2,3<CR>
<CR><LF> > <Space>
524945533A414E4E49564552534152590D0A445453544152543A31393939313231335431303030300D0A4
4455343524950<Ctrl-Z>
<CR><LF>OK<CR><LF>

at^sbnw="vcs",20,3,3<CR>
<CR><LF> > <Space>
54494F4E3A572E20766F6E205369656D656E730D0A454E443A564556454E540D0A454E443A5643414C454
E4441520D0A<Ctrl-Z>
<CR><LF>OK<CR><LF>
```

All characters are answered with an echo. Echoing can be switched off via „ATE0“.
 In this example the organizer entry is uploaded in 50 bytes packets (100 input characters in every PDU).
 Characters in blue characterize the responses of the mobile.

-interrogation of the current <type>,<subtype>,<actNumber>,<maxNumber>

```
at^sbnw?<CR>
<CR><LF>^SBNW: "vcs",20,2,3<CR><LF>
<CR><LF>OK<CR><LF>
```

description: The current object which is uploaded is an VCS object.
 It has to be stored on record 20.
 2 of 3 packets have already been uploaded.

-deleting of record 20

```
at^sbnw="vcs",20,0<CR>
<CR><LF>OK<CR><LF>
```

-download entry from record 20

```
at^sbnr="vcs",20<CR>
<CR><LF>^SBNR:<space>"vcs",20,1,1<CR><LF>
424547494E3A5643414C454E4441520D0A56455253494F4E3A312E300D0A424547494E3A564556454E540
D0A43415445474F524945533A414E4E49564552534152590D0A445453544152543A31393939313231335431
30303030300D0A4445534352495054494F4E3A572E20766F6E205369656D656E730D0A454E443A56455645
4E540D0A454E443A5643414C454E4441520D0A<CR><LF>
<CR><LF>OK<CR><LF>
```

The mobile divides the record entry into packets of 176 byte (=176*2 characters).

-Download of an empty record 20

```
at^sbnr="vcs",20<CR>
<CR><LF>OK<CR><LF>
```

-Test command of AT^SBNW

```
at^sbnw=?<CR>
<CR><LF>^SBNW:<space>("bmp",0),("mid",0),("vcs",1-30) <CR><LF>
<CR><LF>OK<CR><LF>
```

description: The mobile supports bitmaps of subtype 0, midi objects of
 subtype 0 and vcs objects of the subtypes 1 to 30.

2.8.2 Examples and hints for using GPRS commands

2.8.2.1 Defining and using a Context Definition Id (CID):

Every time a CID is used as a parameter for a GPRS command the CID has to be defined first via the AT+CGDCONT command.

To retrieve the parameter of a CID the AT+CGDCONT read option must be used.

If the response of AT+CGDCONT? is OK only, no CID is defined.

```
AT+CGDCONT?  
OK // no CID defined
```

All parameters of the CID are initiated by NULL or non-existing values, and the CID itself is set to undefined.

To define a CID use the AT+CGDCONT command with at least one CID parameter.

The present version of the mobile software supports CID 1 and CID 2 by using the AT+CGDCONT command. e.g.

```
AT+CGDCONT=1,IP  
OK // defines CID 1 and sets the PDP type to IP  
// access point name and IP address aren't set
```

```
AT+CGDCONT=2,IP, "internet.t-d1.gprs", 111.222.123.234  
OK // defines CID 2 and sets PDP type, APN and IP addr
```

A subsequent read command will return

```
AT+CGDCONT?  
+CGDCONT:1,IP  
+CGDCONT:2,IP," internet.t-d1.gprs",111.222.123.234  
OK
```

```
AT+CGDCONT=1  
OK // sets the CID 1 to be undefined
```

A subsequent read command will return

```
AT+CGDCONT?  
+CGDCONT:2,IP, "internet.t-d1.gprs",111.222.123.234  
OK
```

2.8.2.2 Defining Quality of service for a CID

Quality of Service (QoS) is a special parameter of a CID which again consists of several parameters. The QoS consists of

- the precedence class
- the delay class
- the reliability class
- the peak throughput class
- the mean throughput class

and is subdivided into "requested QoS" and "minimum acceptable QoS".

All parameters of the QoS are initiated by default to the "network subscribed value (= 0)", but the QoS itself is set to undefined. Use the AT+CGQREQ or AT+CGQMIN command to define a QoS.

e.g.:

```
AT+CGQREQ=1,2
OK           // overwrites the precedence class of QoS of CID 1 and sets
             // the QoS of CID 1 to be present
```

A following read command will response

```
AT+CGQREQ?
+CGQREQ: 1,2,0,0,0,0
OK           // all QoS values of CID 1 are set to network subscribed
             // except precedence class which is set to 2
```

```
AT+CGQREQ=1
OK           // set the QoS of CID 1 to not present
```

After defining a CID it could be activated. To activate a CID use

```
AT+CGACT=1,2
OK           // activate CID 2
```

If the CID is already active, the mobile immediately returns OK.

If no CID is given, all CIDs defined will be activated by means of

```
AT+CGACT= // NO CID and NO STATE given
OK        // all defined CIDs will be activated
```

If no CID is defined the mobile returns ++CME ERROR: invalid index

Remark: If the mobile is NOT attached via AT+CGATT=1 before activating, the attach is automatically done by means of the AT+CGACT command.

After a CID has been defined and activated, it can be used using AT commands as in the following example:

```
AT+CGDATA=PPP,1
CONNECT           // the mobile is connected using the parameters of CID 1

AT+CDATA=
CONNECT           // the mobile is connected using default parameter
```

The mobile supports Layer 2 Protocol (L2P) PPP only.

Remark: If the mobile is NOT attached by means of AT+CGATT=1 and if the CID is NOT activated before connecting, the attach and activate is automatically done by means of the AT+CGDATA command.

2.8.3 The GPRS dial command ATD

As an alternative to using the GPRS-AT commands it is possible to connect to a GPRS network by using the dial command "atD".

There are two GPRS Service Codes for the ATD command. Values 98 and 99.

e. g.:

```
ATD*99#  
CONNECT          // establish a connection via service code 99
```

```
ATD*99*123.124.125.126*PPP*1#  
CONNECT          // establish a connection via service code 99, IP address 123...  
                //and L2P = PPP and using CID 1.  
                // The CID has to be defined by means of AT+CGDCONT
```

```
ATD*99**PPP#  
CONNECT          // establish a connection via service code 99 and L2P = PPP
```

```
ATD*99***1#  
CONNECT          // establish a connection via service code 99 and using CID 1
```

```
ATD*99*PPP*1#  
CONNECT          // establish a connection via service code 99 and L2P = PPP and  
                // using CID 1. The CID has to be defined by means of AT+CGDCONT
```

```
ATD*98#  
CONNECT          // establish an IP connection via service code 98
```

```
ATD*98*1#  
CONNECT          // establish an IP connection via service code 98 using CID 1  
                // The CID has to be defined by means of AT+CGDCONT
```

3 Errors and Messages

This section provides information on the final result code of a command execution (+CMS ERROR: <err>) and indicates an error related to mobile equipment or network.

3.1 Summary of CME ERRORS related to GSM 07.07

Table 3-1 lists the numbers and meaning of CME errors related to GSM 07.07.

Note: Values smaller than 256 are reserved.

Code of <err>	Meaning
0	phone failure
1	no connection to phone
2	phone-adapter link reserved
3	Operation not allowed
4	Operation not supported
5	PH-SIM PIN required
6	PH-FSIM PIN required
7	PH-FSIM PUK required
10	SIM not inserted
11	SIM PIN required
12	SIM PUK required
13	SIM failure
14	SIM busy
15	SIM wrong
16	Incorrect password
17	SIM PIN2 required
18	SIM PUK2 required
20	Memory full
21	invalid index
22	not found
23	Memory failure
24	text string too long
25	invalid characters in text string
26	dial string too long
27	invalid characters in dial string
30	no network service
31	Network timeout
32	Network not allowed emergency calls only
40	Network personalization PIN required
41	Network personalization PUK required
42	Network subset personalization PIN required
43	Network subset personalization PUK required
44	service provider personalization PIN required
45	service provider personalization PUK required
46	Corporate personalization PIN required
47	Corporate personalization PUK required
100	Unknown
256	Operation temporarily not allowed
257	call barred
258	phone is busy
259	user abort
260	invalid dail string
261	ss not executed
262	SIM blocked

Table 3-1: CME ERRORS related to GSM 07.07

3.2 Summary of CMS ERRORS related to GSM 07.05

Table 3-2 lists the numbers and meaning of CMS errors related to GSM 07.05:

<err> code	Meaning
1	Unassigned (unallocated) number
8	Operator determined barring
10	Call barred
21	Short message transfer rejected
27	Destination out of service
28	Unidentified subscriber
29	Facility rejected
30	Unknown subscriber
38	Network out of order
41	Temporary failure
42	Congestion
47	Resources unavailable, unspecified
50	Requested facility not subscribed
69	Requested facility not implemented
81	Invalid short message transfer reference value
95	Invalid message, unspecified
96	Invalid mandatory information
97	Message type non-existent or not implemented
98	Message not compatible with short message protocol state
99	Information element non-existent or not implemented
111	Protocol error, unspecified
127	Interworking, unspecified
128	Telematic interworking not supported
129	Short message Type 0 not supported
130	Cannot replace short message
143	Unspecified TP-PID error
144	Data coding scheme (alphabet) not supported
145	Message class not supported
159	Unspecified TP-DCS error
160	Command cannot be actioned
161	Command unsupported
175	Unspecified TP-Command error
176	TPDU not supported
192	SC busy
193	No SC subscription
194	SC system failure
195	Invalid SME address
196	Destination SME barred
197	SM Rejected-Duplicate SM
198	TP-VPF not supported
199	TP-VP not supported
208	DO SIM SMS storage full
209	No SMS storage capability in SIM
210	Error in MS
211	Memory Capacity Exceeded
212	SIM Application Toolkit Busy
213	SIM data download error
255	Unspecified error cause

300	ME failure
301	SMS service of ME reserved
302	Operation not allowed
303	Operation not supported
304	Invalid PDU mode parameter
305	Invalid text mode parameter
310	SIM not inserted
311	SIM PIN required
312	PH-SIM PIN required
313	SIM failure
314	SIM busy
315	SIM wrong
316	SIM PUK required
317	SIM PIN2 required
318	SIM PUK2 required
320	Memory failure
321	Invalid memory index
322	Memory full
330	SMSC address unknown
331	no network service
332	Network timeout
340	NO +CNMA ACK EXPECTED
500	Unknown error
512	User abort

Table 3-2: CMS ERRORS related to GSM 07.05

3.3 GPRS return values issued by AT+CEER

Table 3-3 lists the GPRS return values issued by the AT+CEER command in the form <x> . <y>, where x indicates the type of the value returned and y denotes the reason why the call was terminated. Table 3-3 provides the values for the applications handled by AT+CEER (x values). For more detailed information on meaning of the y values see tables Table 3-4 through Table 3-9:

Value	Meaning
48	GMM_LOC_GSM (see section 3.3.1)
50	SM_LOC_GSM (see section 3.3.2)
51	SM_LOC_OWN (see section 3.3.3)
241	GAPI_LOC_OWN (see section 3.3.4)
242	LMAN_LOC_OWN (see section 3.3.5)
243	ENIP_LOC_OWN (see section 3.3.6)

Table 3-3 GPRS return values

3.3.1 GMM-GSM return values issued by AT+CEER (GMM_LOC_GSM)

Value	Meaning
2	IMSI is unknown in HLR
3	MS is illegal
6	ME is illegal
7	GPRS services not allowed
8	GPRS services not allowed in combination with non-GPRS services
9	MS cannot be identified
10	Implicit detachment
11	PLMN not allowed
12	Location area not allowed
13	Roaming not allowed in current location area
14	GPRS services not allowed in current PLMN
16	MSC temporarily unreachable
17	Network failure
22	Congestion
48 – 63	Retry upon entry into new cell low – high
95	Message semantically incorrect
96	Mandatory information invalid
97	Message type does not exist or is not implemented
98	Message type incompatible with protocol state
99	Information element does not exist or is not implemented
100	Conditional error
101	Message incompatible with protocol state
111	Unspecified protocol error

Table 3-4: GMM return values issued by AT+CEER

3.3.2 SM-GSM return values issued by AT+CEER (SM_LOC_GSM)

Value	Meaning
25	LLC or SNDTCP failure
26	Insufficient resources
27	Missing or unknown APN
28	PDP address or type unknown
29	User authentication failed
30	Activation rejected by GGSN
31	Activation rejected for unspecified reason
32	Service option not supported
33	Requested service option not subscribed
34	Service option temporarily out of order
35	NSAPI already used
36	Regular deactivation
37	QoS not accepted
38	Network failure
39	Reactivation required
81	Invalid transaction identifier value
95	Message semantically incorrect
96	Mandatory information invalid
97	Message type does not exist or is not implemented
98	Message type incompatible with protocol state
99	Information element does not exist or is not implemented
100	Conditional IE error
101	Message incompatible with protocol state
111	Unspecified protocol error

Table 3-5: GMM return values issued by AT+CEER

3.3.3 SM_OWN return values issued by AT+CEER (SM_LOC_OWN)

Value	Meaning
3	T3380 timer expired
4	DeactAct
5	DeactActReject
6	DeactActStaticPDPaddressCollision
7	Unspecified protocol error

Table 3-6: GAPI return values issued by AT+CEER

3.3.4 GAPI return values issued by AT+CEER (GAPI_LOC_OWN)

Value	Meaning
0	Regular deactivation of the call
1	Action temporarily not allowed
2	Wrong connection type
3	Specified data service profile invalid
4	PDP type or address is unknown
255	Undefined

Table 3-7: GAPI return values issued by AT+CEER**3.3.5 LMAN return values issued by AT+CEER (LMAN_LOC_OWN)**

Value	Meaning
0	Regular call deactivation
1	Action temporarily not allowed
2	Bearer invalid
3	Specified data service profile invalid
4	GPRS profile invalid
5	CSD profile invalid
17	Modem in use
18	Modem not responding
19	Modem error
20	Timeout while waiting for modem
21	Modem nocarrier
22	Modem no dialtone
23	Modem busy
24	Modem dial timeout
25	Modem call lost
255	Undefined

Table 3-8: LMAN return values issued by AT+CEER**3.3.6 ENIP return values issued by AT+CEER (ENIP_LOC_OWN)**

Value	Meaning
0	Regular call deactivation
1	LCP stopped
255	Undefined

Table 3-9: ENIP return values issued by AT+CEER

3.4 List of keys implemented for AT+CKPD

The following keys are implemented for the AT+CKPD command:

Character	Comment
'#'	hash
'*'	star
0..9	number keys
E/e	connection end (END)
C/c	clear display (C/CLR)
S/s	connection start (SEND)
W/w	pause character
Y/y	delete last character (C)
'V'	navi down
'^'	navi up
'<'	navi left
'>'	navi right
'['	soft key 1
']'	soft key 2
'.'	escape character for manufacturer specific keys
	Siemens specific keys
'+'	left side key up
'_'	left side key down
M	right side key

3.5 Result codes

Table 3-10 lists the numbers of result codes and provides their meaning:

Indication	Numeric	Meaning
OK	0	Command executed, no errors, Wake up after reset
CONNECT	1	Link established
RING	2	Ring detected
NO CARRIER	3	Link not established or disconnected
ERROR	4	Invalid command or command line too long
NO DIALTONE	6	No dial tone, dialling impossible, wrong mode
BUSY	7	Remote station busy
CONNECT 2400	10	Link with 2400 bps
CONNECT 4800	30	Link with 4800 bps
CONNECT 9600	32	Link with 9600 bps
CONNECT 14400	33	Link with 14400 bps
CONNECT 2400/RLP	47	Link with 2400 bps and Radio Link Protocol
CONNECT 4800/RLP	48	Link with 4800 bps and Radio Link Protocol
CONNECT 9600/RLP	49	Link with 9600 bps and Radio Link Protocol

CONNECT 14400/RLP	50	Link with 14400 bps and Radio Link Protocol
-------------------	----	---

Table 3-10: Result codes

3.6 List of *# codes

The commands listed in Table 3-11 can be used with ATD (only for voice calls):

*# code	Functionality	Possible response(s)
*#06#	Query IMEI:	<IMEI> / OK
**04[2]*oldPin*newPin[2]*newPin[2]#	Change SIM pwd:	+CME ERROR/ OK
**05[2]*unblKey*newPin[2]*newPin[2]#	Change/Unblocking SIM pwd:	
[]03*[ZZ]*oldPw*newPw*newPw#	Registration of network password:	
*#30#	Interrogation CLIP	AT+CLIP / OK
*#31#	Interrogation CLIR	AT+CLIR : <n>,<m> OK
*#76#	Interrogation COLP	AT+COLP : 0,<m> OK
*#77#	Interrogation COLR (Connection line interpretation restriction)	+COLR : 0,<m> OK
(choice of *,#,*,** ,##)21*DN*BS#	Act/deact/int/reg/eras CFU	AT+CCFC
(choice of *,#,*,** ,##)67*DN*BS#	Act/deact/int/reg/eras CF busy	
(choice of *,#,*,** ,##)61*DN*BS*T#	Act/deact/int/reg/eras CF no reply	
(choice of *,#,*,** ,##)62*DN*BS#	Act/deact/int/reg/eras CF no reach	
(choice of *,#,*,** ,##)002*DN*BS*T#	Act/deact/int/reg/eras CF all	
(choice of *,#,*,** ,##)004*DN*BS*T#	Act/deact/int/reg/eras CF all cond.	
(choice of *,#,*)43*BS#	Activation/deactivation/int WAIT	AT+CCWA
(choice of *,#,*)33*Pw*BS#	Act/deact/int BAOB	AT+CLCK
(choice of *,#,*)331*Pw*BS#	Act/deact/int BAOIC	
(choice of *,#,*)332*Pw*BS#	Act/deact/int BAOIC exc.home	
(choice of *,#,*)35*Pw*BS#	Act/deact/int. BAIC	
(choice of *,#,*)351*Pw*BS#	Act/deact/int BAIC roaming	
#330*Pw*BS#	Deact. All Barring Services	
#333*Pw*BS#	Deact. All Outg.Barring Services	
#353*Pw*BS#	Deactivation. All Inc.Barring Services	

Table 3-11: List of *# codes

The abbreviations used in Table 3-11 have the following meaning:

ZZ	type of supplementary services	330	Barring services
ZZ		----	All services
DN	dialling number	0-9	string of digits
BS	basic service:Voice	11	Voice
		16	Sms
		13	Fax
		12	Sms+fax
		19	Voice+fax
		10	Voice+sms+fax
		25	Data circuit asynchron
		24	Data circuit synchron
		27	PAD
		26	packet
		21	data circuit async.+PAD
		22	data circuit sync.+packet
		20	data circ.Async+sync.+PAD+ packet
		----	all services
T	time in seconds		
Pw	network password		

4 Index

A/	10	AT+CGATT	45
AT	10	AT+CGAUTO	45
AT&C	12	AT+CGCLASS	46
AT&D	12	AT+CGDATA	46
AT&F	12	AT+CGDCONT	47
AT^SACM	82	AT+CGEREP	48
AT^SBNR	83	AT+CGMI	14
AT^SBNW	84	AT+CGMM	14
AT^SCID	85	AT+CGMR	14
AT^SCKS	99	AT+CGPADDR	51
AT^SCKS	85	AT+CGQMIN	49
AT^SCNI	85	AT+CGQREQ	50
AT^SDBR	86	AT+CGREG	52
AT^SDLD	86	AT+CGSMS	53
AT^SGAUTH	87	AT+CGSN	14
AT^SICO	87	<u>AT+CHLD</u>	21
AT^SLCK	88	AT+CHUP	16
AT^SLNG	89	AT+CIMI	15
AT^SMGL	89	AT+CKPD	15
AT^SMGO	90	AT+CLCC	22
AT^SMGR	90	AT+CLCK	23
AT^SMSO	91	AT+CLIP	24, 99
AT^SNFS	91	AT+CLIR	25
AT^SNFV	91	AT+CLVL	35
AT^SPBC	92	AT+CMEE	53, 99
AT^SPBG	92	AT+CMGC	55
AT^SPBS	93	AT+CMGD	55
AT^SPIC	93	AT+CMGF	55
AT^SPLM	94	AT+CMGL	56
AT^SPLR	94	AT+CMGO	99
AT^SPLW	94	AT+CMGR	56
AT^SPST	95	AT+CMGS	57
AT^SPWD	95	AT+CMGW	57
AT^SRTC	96	AT+CMMS	58
AT^SSTK	96	AT+CMSS	58
AT+ FBADMUL	68	AT+CMUT	35
AT+ FBOR	68	AT+CNMA	58
AT+ FCR	70	AT+CNMI	60, 99
AT+ FDFFC	72	AT+CNUM	26
AT+ FDIS	73	AT+COLP	27, 99
AT+ FDR	74	AT+COPN	27
AT+ FDT	75	AT+COPS	28, 99
AT+ FET	75	AT+CPAS	35
AT+ FK	76	AT+CPBR	36
AT+ FLID	76	AT+CPBS	37, 99
AT+ FMDL	76	AT+CPBW	38
AT+ FMFR	77	AT+CPIN	39
AT+ FOPT	77	AT+CPMS	62
AT+CACM	33	AT+CPOL	29
AT+CALM	33	AT+CPUC	40
AT+CAMM	34	AT+CPWD	30
AT+CAOC	18, 99	AT+CR	17
AT+CBC	34	AT+CRC	17, 99
AT+CBST	65	AT+CREG	31, 99
AT+CCFC	19	AT+CRLP	66
AT+CCLK	34	AT+CRSL	40
AT+CCWA	20, 99	AT+CRSM	41
AT+CEER	16, 112	AT+CSCA	63
AT+CGACT	44	AT+CSCB	63, 99
AT+CGANS	44	AT+CSCS	15, 99

AT+CSMS	64, 99	AT+GCAP	80
AT+CSQ	42	AT+GSN	16
AT+CSSN	32, 99	AT+IPR	81
AT+CVIB	42	AT+VTD	54
AT+FAA	67	AT+VTS	54, 99
AT+FBADLIN	67	AT+W546	16
AT+FCIG	69	ATA	10
AT+FCLASS	70	ATB	10
AT+FCQ	69	ATD	11, 43
AT+FDCC	71	ATDL	11
AT+FECM	67	ATE	99
AT+FLNFC	67	ATH	11
AT+FLPL	67	ATI	11
AT+FMINSPL	67	ATL	11
AT+FPHCTO	77	ATM	11
AT+FRBC	67	ATO	11, 13, 43
AT+FREL	67	ATQ	11, 99
AT+FREV	78	ATS	11, 43
AT+FRH	78	ATV	12, 99
AT+FRM	78	ATX	12
AT+FRS	79	ATZ	12
AT+FSPL	67	factory settings	99
AT+FTBC	67	N	12
AT+FTH	79	Q	13
AT+FTM	79	settings, factory	99
AT+FTS	80	V	13
AT+FVRFC	80		
AT+FWDFC	67		